

UNIVERSAL REMOTE

8 in 1

URC-L-1870



EN

Contents

Introduction	3
---------------------	----------

Battery Installation	4
-----------------------------	----------

Function Keys	5
----------------------	----------

Set up Your Remote Control

Set-up by Brand and Code	6
--------------------------	---

Set-up by Auto Search	6
-----------------------	---

Learn Function

A. Learn a Command	8
--------------------	---

B. Delete a Command	9
---------------------	---

C. Delete All Commands in a Device	10
------------------------------------	----

D. Delete All Commands	11
------------------------	----

Other Set-up

A. Set up Clock	11
-----------------	----

B. Volume lock	12
----------------	----

C. Device lock	13
----------------	----

D. Background Adjust	14
----------------------	----

E. Contrast Adjust	15
--------------------	----

F. All off function	15
---------------------	----

G. Show view	15
--------------	----

H. Macro function	15
-------------------	----

I. Delete Macro function	17
--------------------------	----

J. Device Alternation	17
-----------------------	----

Clear All	18
------------------	-----------

Need Help?	19
-------------------	-----------

Device Brand Code List

TV

VCR

CBL/SAT

CD

DVD

TAPE

TUNER

AUX

Introduction

Thank you for purchasing the URC20-F15DL universal remote control. It has 8 direct device buttons with LCD screen and features the largest infrared code library on the European market. Based on our (patent pending) creative design, it has the easiest and fastest way to “set up directly” by brand name and code no. through the LCD screen even without the manual book.

The URC20-F15DL universal remote control covers almost all brands of Televisions (**TV**), DVD-players (**DVD**), DVR-players (**DVD**), **DVB** (CBL/SAT), (digital) Satellite receivers (CBL/SAT), Cable box (CBL/SAT), Video Recorders (**VCR**), Tuner receivers (**TUNER**), Tape receivers (**TAPE**), CD-players (**CD**), Audio amplifiers (**AMP**) and other Audio (**AUX**). It can operate all main functions of your devices.

You can also use “Auto Search” to scan the code library in case of you can’t find your device brand in the list.

Besides, URC20-F15 can “learn” a new code from an original remote control to supplement the codes in case of code shortage.

“Show View” function scans all channels for you to have a program quick view.

“All off” function can switch off all your devices with one button.

“Macro” function makes several sequent operations with one button for your home theater

“Volume lock” can fix VOL+/VOL- button to control only the amplifier for your home theater.

“Device lock” can prevent the device from being reset until you unlock it.

URC20-F15 has backlight for LCD screen and separate device backlight to show you the currently working device.

“Low battery indication” reminds you when needed to replace the batteries.

“Device Alternation” allows you to set up any device to AUX. E.g. you can set up a TV code to AUX and then you will have 2 TV device keys.

All the set up data will be stored in “back up memory” permanently, you don’t need to be worry about data loss when you replace battery.

The F15DL also has “real time clock” to show your time and AM or PM.

All above mentioned functions show you the URC20-F15D is a advanced, very powerful LCD universal remote control. Please read this user manual carefully prior to using you new LCD remote control.


Code Assignment

Bank	for Device	Initial code	Total of codes
TV	TV	042	372
VCR	VCR	115	170
CBL/SAT	Satellite, Cable, DVB	045	323
DVD	DVD, DVR	006	127
CD	CD	098	120
TUNER	TUNER	075	103
TAPE	TAPE	083	133
AUX	AMP, LD	030	178

Battery Installation

This remote control needs 2 AAA batteries to work with. Fresh Alkaline batteries are strongly recommended. To install the batteries:

1. Turn the remote over, and lift the battery cover off.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Slide the battery cover back into place.


Notice 1. Whenever the batteries needed replacement, the LCD remote will indicate this on the screen with a  message. Please replace the new batteries now.

2. All data you have set up into the unit will be stored in memory even you take off the batteries, but you may need to set the clock again.

Security- and disposal references for batteries:

- Batteries are not included in the delivery!
- Keep children away from batteries. If batteries are being swallowed accidentally, consult a doctor immediately!
- Never bypass batteries.
- Please pay attention to the right polarity (+) and (-) of the batteries! Always replace both batteries at once; do not use old and new batteries together or batteries of different types at the same time.
- Do not open batteries, deform or recharge them!
- There is a risk of injury, in case of leaking batteries!
- Do not throw batteries into the fire.
- Danger of exploding is existent.
- Take exhausted batteries out of the device immediately.
- Take the batteries out of the device, if you do not use it for a long period of time.

With reference to environmental protection:

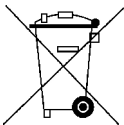

Packing materials are raw materials and can be used again.


Keep packing materials separate. For more information about recycling contact your local administration.



Old devices do not belong in the domestic refuse!

Dispose of old devices responsibly, and contribute to environmental protection.

Your local administration will inform you about collecting points and opening times.

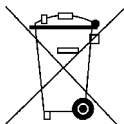

Old batteries do not belong in the domestic refuse!

Dispose of old batteries accordingly and contribute to environmental protection.

Your local administration will inform you about collecting points and opening times.

Maintenance

Protect the remote control from dirt. Do not use solvents or other aggressive detergents. Clean the case with a damp cloth and dry it well afterwards.

Note:








In case of leaking batteries, wipe the battery compartment with a cloth. Do not insert new batteries straightaway.


Function Keys

	For you start to set up the remote control or show you the status in LCD		The number keys operate the same as on your original remote control, and maybe also used for entering device codes when set up.
	Let you select the device you want to control.		Works like the TV/Video key on your original TV remote, select the input for TV.
			Works like the Enter on your original remote.
			For TV Fastext.
			Television video, TV and text mixed, Teletext mode, Page hold
			REW (fast reverse), PLAY (operate your DVD, CD ect.), FFWD (fast forward), REC (Record), Stop (Terminate your operation), PAUSE (Pause the function and standby)
	Works like the Channel Up and Down keys on your original remote control.		
	Turns the device on or off.		
	Control the volume like the Volume Up and Down on your original remote control.		Learning function to import instructions from other remote control
	Works like the UP, DOWN, LEFT, RIGHT, OK key on your original remote control for menu function. But during set up mode they are used for cursor, confirm and exit to program your remote control only.		Scans all channel for your program quick view.
	Works like the Menu or OSD (on-screen display) or Memory key on your original remote control		Switches off all your devices with one button only.
	Mute the sound		
	Let you make sequent operations for you home theater.		
	Ends the entry		







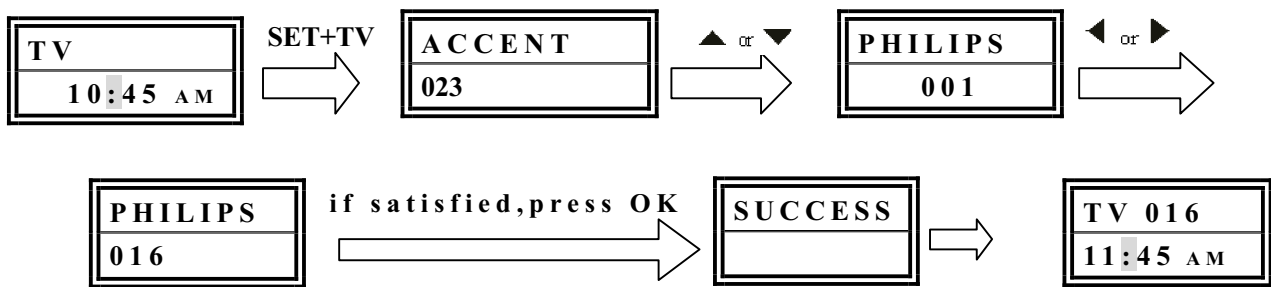 

Direct Set Up (by Brand and Code)

This revolutionary method lets you directly choose the brand and code in LCD screen, simply set up your remote control even without manual book.

1. Turn on the device (e.g. your television set) you would like to operate. If it is a VCR, please insert a tape.
2. Press and hold the  key on your remote control. Then press (simultaneously) a desired device keys (e.g. )
3. Then release them, the brand will be displayed on the screen.
4. Press the  or  key to select the brand of your device (e.g. your TV brand: **Philips**)
5. Check the function of the keys. If none of the keys of your new remote control can work, or most of the keys work improperly, please try other code by the  or  key to choose, until all basic functions operated properly.
6. If you are satisfied with the code, just press the  key to save it. LCD shows “**SUCCESS**” and then finishes the set up.














Remark:

 
 
1. To terminate set up, please press .any device (e.g. ) key or  key.
2. You must point your remote control to the device that you want to control when you test the keys.
3.     ,  only used to program your new remote control during set up. You can't control your device as normal menu function at this moment until you finish set up.
4. If the device is locked, you must first unlock the device then set up.

Set-up by Auto Search





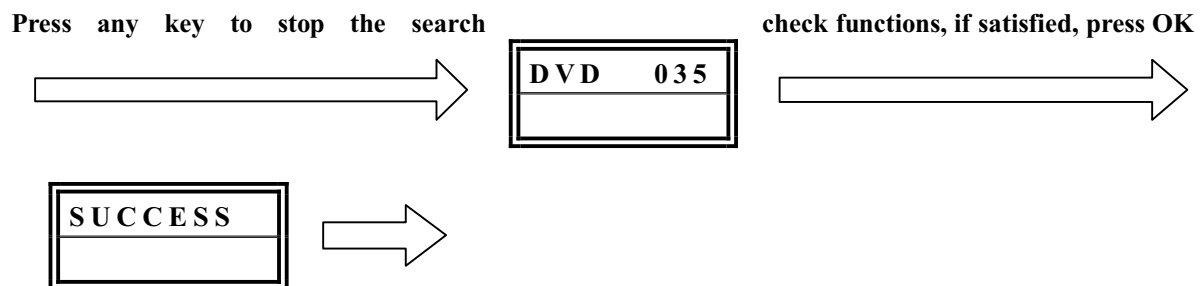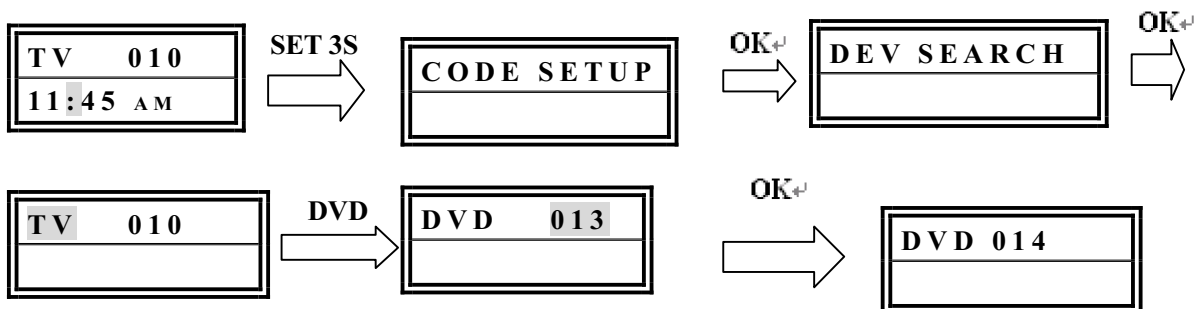

In case of the set-up by **Brand and Code** failed or you can't find the brand name in your remote control screen, you may use the **Auto Search** to find the correct code to operate your device.

1. Turn on the device (e.g. television) you would like to operate. If it is a VCR, please insert a tape.

2. Press the  key on your new remote control for more than 3 seconds. Then release it.
3. Press the  or  keys to select to “**CODE SETUP**” in LCD menu, and press the  key.
4. The screen shows “**DEV SEARCH**” in the LCD menu, press the  key to confirm. Then press your desired device key (e.g.  key) and then press the  key to start the Auto Search (you must point your remote control to your device during the search).
5. See if the device reacts or not, once the device reacts, press any key to stop the search.
6. Test if most of keys work good or not. If most keys work not good enough, please repeat step 4~5.
7. If you satisfy the reactive code, please press the  key to save it and LCD shows “**SUCCESS**” then show “**DEV SEARCH**”. You can press device key (e.g. ) again to finish set up or use  or  to select other set up.




Remark:

1. In case of you did not stop the search on time when device being reacted, you may press the  or  key to search back to find the passed code.
2. The keys of , , ,  are only used to set-up your new remote control during the Auto Search, you can't control your device for menu function at the moment until you finished set up.

- When remote control searches through all codes, the remote control will stop at the beginning code of the search.
- If the device is locked, you must first unlock the device then set up.









Learn


The  function is used to supplement the preprogrammed code list. The standard code list may provide most of functions needed, but you can add a small number of additional functions on your URC20-F15D. Or you can add a new code from a new original remote control which is shortage in the code list.

In learn mode, you must prepare a another original remote control where you will take codes from and add into your URC20-F15DL.


You can select “**LEARN KEY**” to learn commands, or “**DELETE KEY**” to delete learnt commands, or choose “**DELETE DEV**” to delete all learnt commands under a device, or “**DELETE ALL**” to delete all learnt commands in the remote control.

Learn a Command


- Press a device key (e.g.  key) where you want to learn into.
- Press and hold the  key for more than 3 seconds, and then release it.
- Scroll  or  key to “**LEARNING**”, then press the  key.
- Scroll  or  key to “**LEARN KEY**”, then press the  key. The LCD shows “**SELECT KEY**”.
- Select a (target) key where you want to learn into (e.g. **Power** key). The LCD shows “**WAITING**”, it is waiting for your source IR signal. (If you don't send a IR signal in 30s, LCD will show “**FAILED**” and then show “**SELECT KEY**” again.).
- Point the transmitter of the original (source) remote control to the receiver window of URC20-F15DL by approximately 30mm apart. Refer to below drawing.
- Press and hold a source key (e.g. **Power** key) from the original remote control until the LCD display “**SUCCESS**”. If LCD shows “**FAILED**”, please repeat steps 4-6.
- Repeat steps 4-6 to learn more other keys.

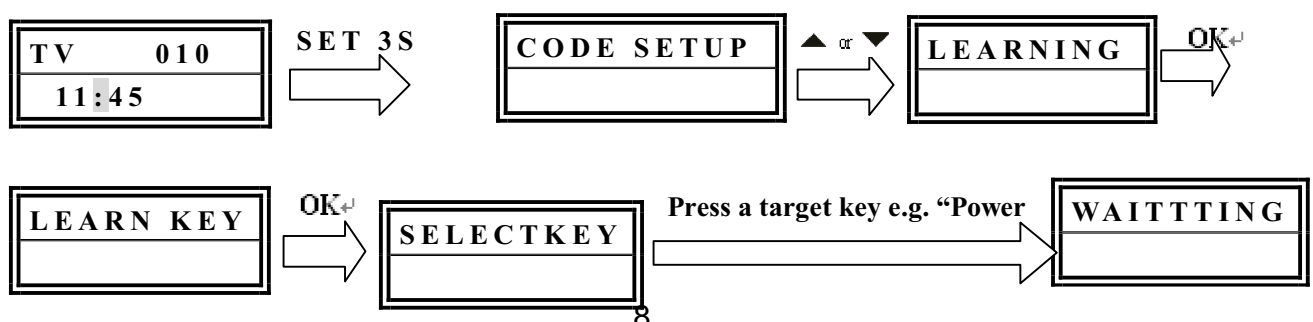

Press a source key from original remote, e.g. "Power"

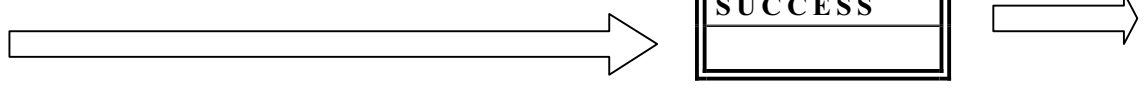


Receiver window

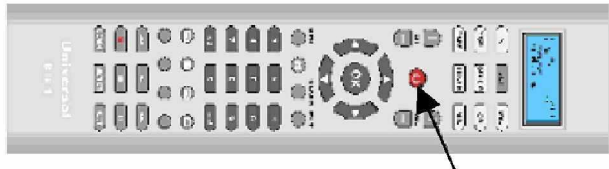

Target Key

Original Remote Control

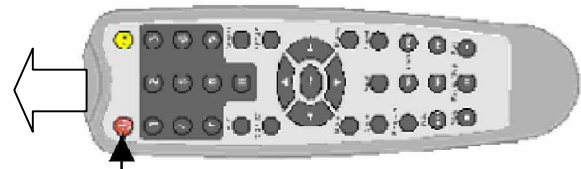

Source Key

Remark:

 
1. A selected target key can be multi learnt from different sources keys, URC20-F15D will store the final learnt signal only.
2. All usual function keys can be learnt except ALL OFF, Show View and Macro etc..
3. Some code form may not be learn by this remote control.
4. You can learn about 100 keys totally for 8 device key.
5. You may press any device key (e.g. TV key) to finish the learn operation. But you can't quit when LCD shows "WAITING" until it's ended.

Delete a Command

If you like to delete a learnt command, you can follow the steps as below:

1. Press the device key (e.g. TV key) where you like to delete command from.
2. Press and hold the SET key for more than 3 seconds, and then release it.
3. Scroll ▲ or ▼ key to "LEARNING", then press the OK key and the LCD shows "LEARN KEY".
4. Scroll ▲ or ▼ key to "DELETE KEY" and then press the OK key.
5. Press the key on URC20-F15DL that you want to delete, the LCD shows "SURE DELET" and then press the OK key to confirm, the LCD will show "SUCCESS".
6. Repeat step 4 to delete other key if you want.
7. Press a device key (e.g. TV key) to quit the delete operation when all desired commands are deleted.




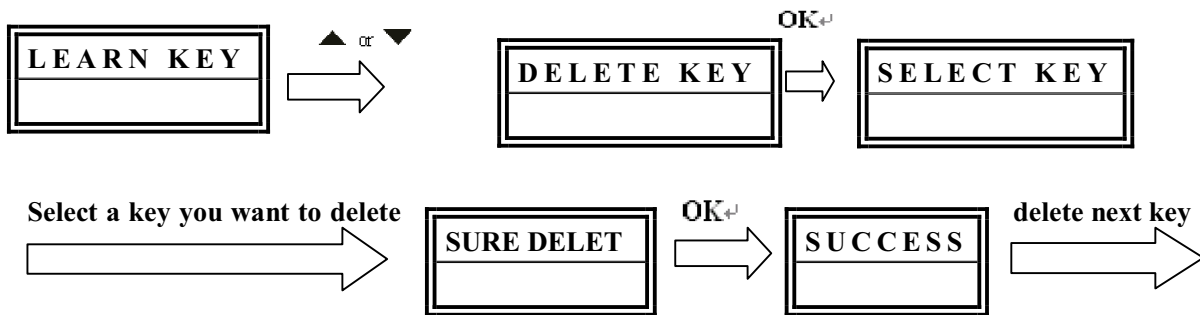

Delete All Command in a Device

 If you want to delete all learnt commands in a device with one operation in stead of deleting every key one by one, please follow the below steps:



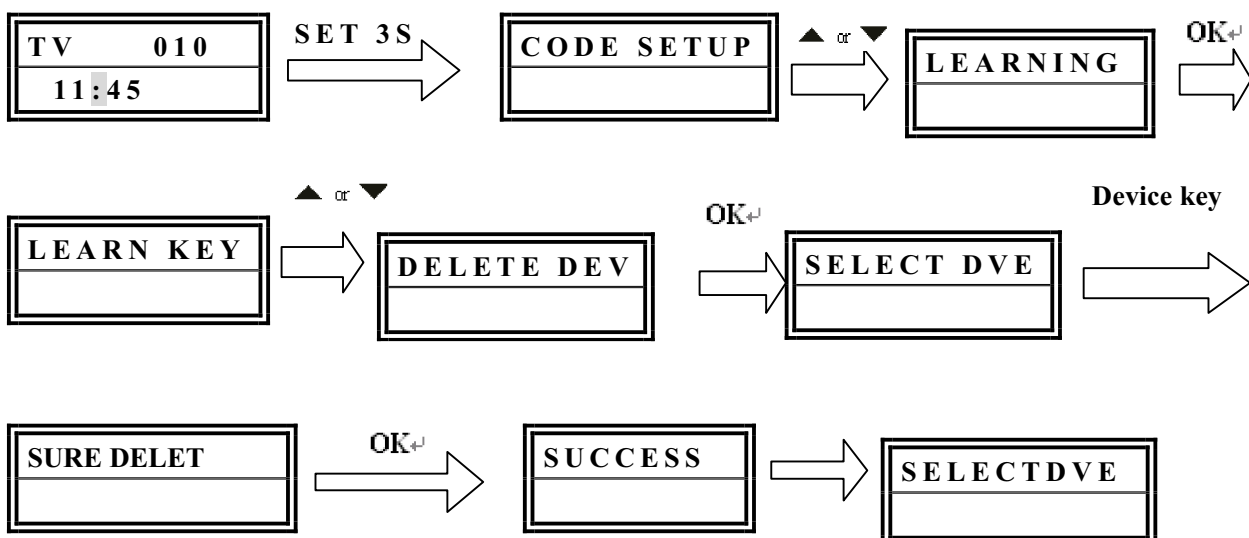

1. Press a device key (e.g. key) where you want to delete commands.
2. Press and hold the key for more than 3 seconds, and then release it.
3. Scroll or key to “**LEARNING**”, then press the key and the LCD display “**LEARN KEY**”.
4. Scroll or key to “**DELETE DEV**” and then press the key. The LCD shows “**SELECT DEV**”
5. You select the device key (e.g. key) want to delete.
6. The LCD shows “**SURE DELET**”, press the key to confirm, the LCD shows “**SUCCESS**”, then shows “**SELECT DEV**”.
7. Repeat step 4-5 to delete commands for other device key.
8. Press to quit current operation.

 


Remark: sometimes it may take maximum about 3 minutes for delete all commands in one device. So if the commands are not many, suggest you delete commands one by one.

D. Delete All Learnt Commands

If you want to delete all learnt commands in your remote control, please follow the below steps:



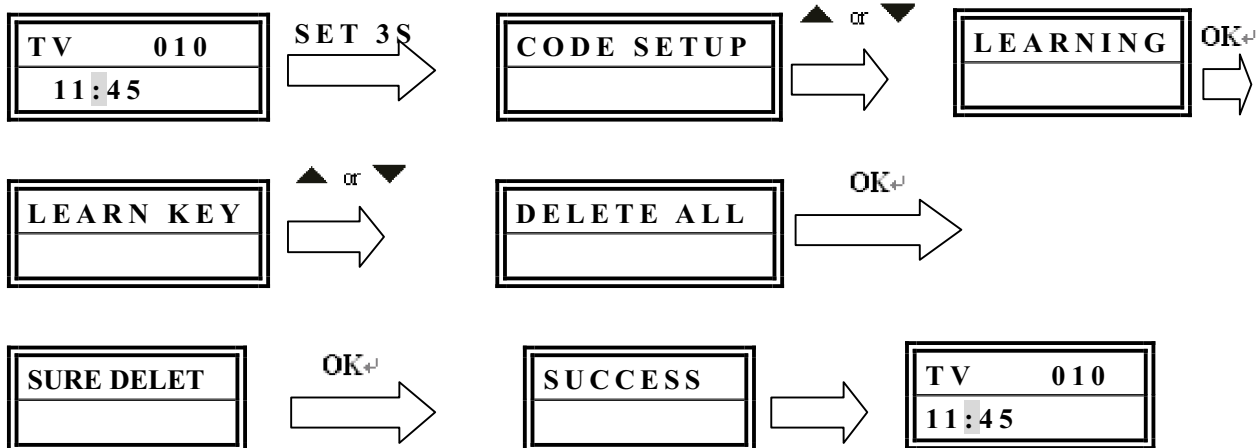

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Scroll  or  key to “**LEARNING**”, then press the **OK** key, LCD shows “**LEARN KEY**”.
3. Scroll  or  key to “**DELETE ALL**”, then press the **OK** key.
4. The LCD shows “**SURE DELET**”, then press the **OK** key again, LCD shows “**SUCCESS**” to finish the deletion.










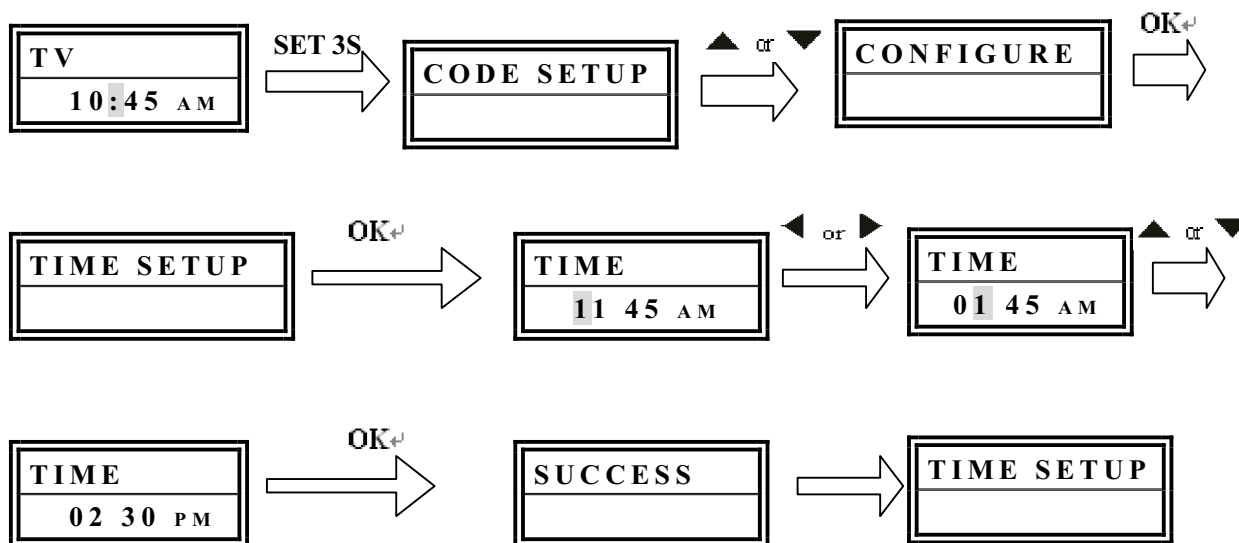 
Other Set Up

A. Set up Clock


You can set up the clock on your URC20-F15DL remote control on it's LCD screen as below:











- 1 Press and hold the **SET** key for more than 3 seconds, then release it.
- 2 Press the  or  key to select the “**CONFIGURE**” menu, and then press the **OK** key.
- 3 Press the  or  key to select the “**TIME SETUP**” menu, and then press the **OK** key.


 


- 4 Press the  or  key to move the cursor to select hour or minute or **AM/PM**, then press the number key to set hour and minute, and press the  or  key to select AM or PM.
- 5 Press the  key to save the setting and LCD display “**SUCCESS**” exit to current setup state, if you enter errors the LCD screen shows “**ERROR**”. You can press any **device**(e.g. ) key to finish set up or press  key return to the last state.

 


B. Volume Lock

This function makes you very convenient when you only use one device to adjust volume. For example, you may use your **amplifier** as your main volume control, then you can use this function to fix the volume and mute key to , no matter which device you use (even you use TV, DVD, VCR etc), the volume and mute key on remote control still control the volume and mute of your amplifier.

1. Press and hold the  key for more than 3 seconds, and then release it.
2. Press the  or  key to select the “**CONFIGURE**”, and then press the key.
3. Press the  or  key to select the “**VOL LOCK**”, and then press the  key.
4. Press the **device** key to select the device you want to fix, such as .
5. Press the  or  key to change to “**ON**” or “**OFF**” mode.
6. Press the  key to save the setting and LCD display “**SUCCESS**” then “**VOL**



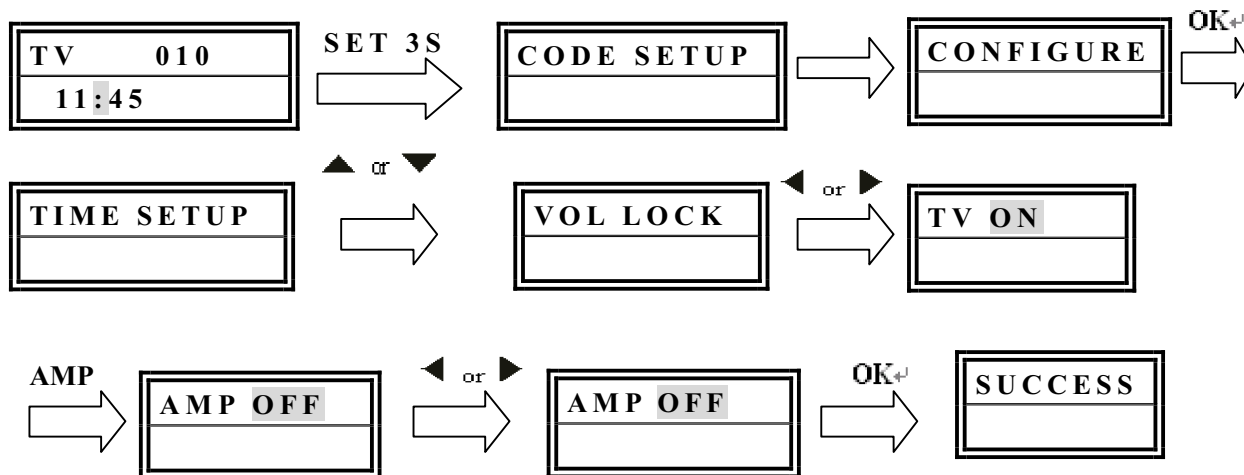












LOCK” to current setup state, You can press any device key (e.g. ) to finish set up or press the  key to last state, or you can use  or  to select other set up.

 


Remark: You can only lock one device for volume and mute of your new remote control. The locked device will be unlocked when you lock on the other device automatically.

C Device Lock

You can use **Device lock** function to fix current device code and this device code can't be changed by a new set up such as brand and code set up or auto search. You can set it to the "OFF" to quit from this function.

- 1 Press and hold the  "SET" key for more than 3 seconds, then release it.
- 2 Press the  or  key to select the "CONFIGURE", then press the  key.
- 3 Press the  or  key to select the "DEV LOCK", then press the  key.
- 4 Press the device key to select the device that you want to fix, such as .
- 5 Press the  or  key to change to the "ON" or "OFF" mode.
- 6 Press the  key to save the setting and LCD display "SUCCESS" then "DEV LOCK", exit to current setup state. You can press any device key (e.g. ) to finish the set up or press the  key to last state, or you can use  or  to select other set up.

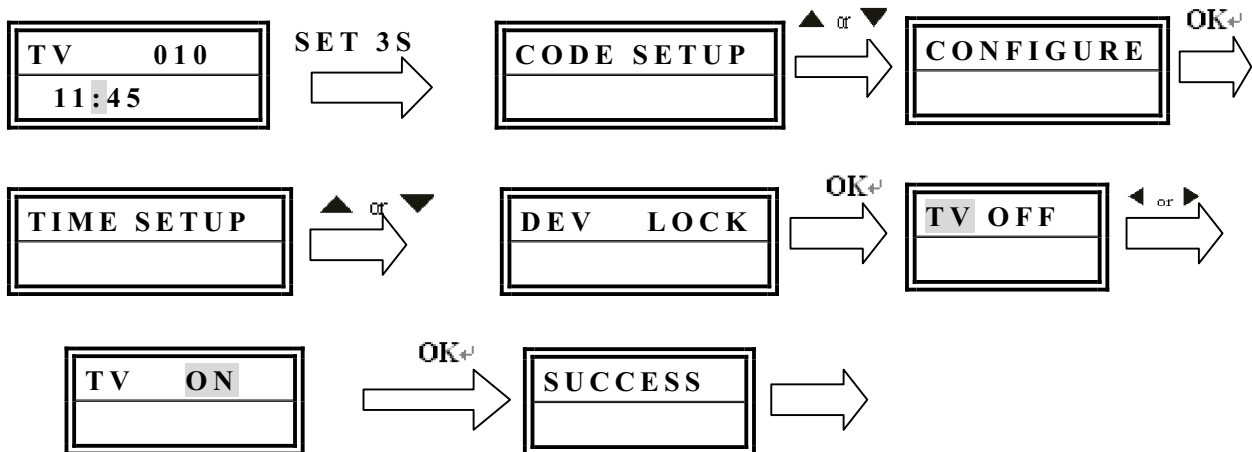

Remark:

You can fix all more than one device code and these device codes can't be changed by neither **Auto Search** nor **Brand Code Set up**.

D. Background Light

If the background light is on, the background light will be lighted up for a while after you press any key.








- 1 Press and hold the **SET** key for more than 3 seconds, and then release it.
- 2 Press the or key to select the “**CONFIGURE**”, and then press the key.
- 3 Press the or key to select the “**LIGHT**”, and then press the key.
- 4 Press the or key to change to the “**ON**” or “**OFF**” mode.
- 5 Press the key to save setting and LCD shows **SUCCESS** then “**LIGHT**” exit to current setup state. You can press any device key to finish set up or press the key to last state, or you can use or to select other set up.

E. Contrast Adjust

If you are not satisfied the LCD screen contrast of your remote control, you can use below steps to change it.


- 1 Press and hold the **SET** key for more than 3 seconds, then release it.
- 2 Press the or key to select the “**CONFIGURE**”, then press the key.
- 3 Press the or key to select the “**CONTRAST**”, then press the

 key.

- 4 Press the  or  key to adjust contrast level, then press the  key until you satisfied.
- 5 Press the  key to save the setting and the LCD shows **SUCCESS** then “**CONTRAST**” exit to current setup state. You can press any device key to finish set up or press the  key to last state, or you can use  or  to select other set up.

F. ALL OFF


You can turn off or turn on all devices by one button only and sometimes it's convenient .

Press and hold the  key about **1** second and then release it. The remote control will send out each power signal for each device key to turn on (or turn off) your appliance one by one. Meanwhile the device key on remote control flashes to tell you which power signal is been sending.

Remark: The remote control must be pointed to device that you like to control until the operation finished.

G. Show View


Show view function scans all TV or CAB/SAT channels for your quick view.

1. Press the device key to select the device (such as ) that you want to operate.
2. Press and hold the **SHOWVIEW** key about **1** second. When the device's LED flashes and it goes into Show View mode. The remote control automatically scans all channels for a brief view.












Remark: 1. The remote control must be pointed at the device until Show View operation finished.
2. If you want to exit the show view mode, please press any key during operation.

 
H. Macro

Macro function lets you make sequent operation for your home theater. URC20-F15D can has total 3 Macro operations.

Press and hold the **MACRO** key and  key (or 2, 3 key) simultaneously, then release them, the remote control will send out a sequent IR commands that you programmed before. Meanwhile the device LED will flash to tell you which button command is sending.

You can set up a Macro operation by following steps:



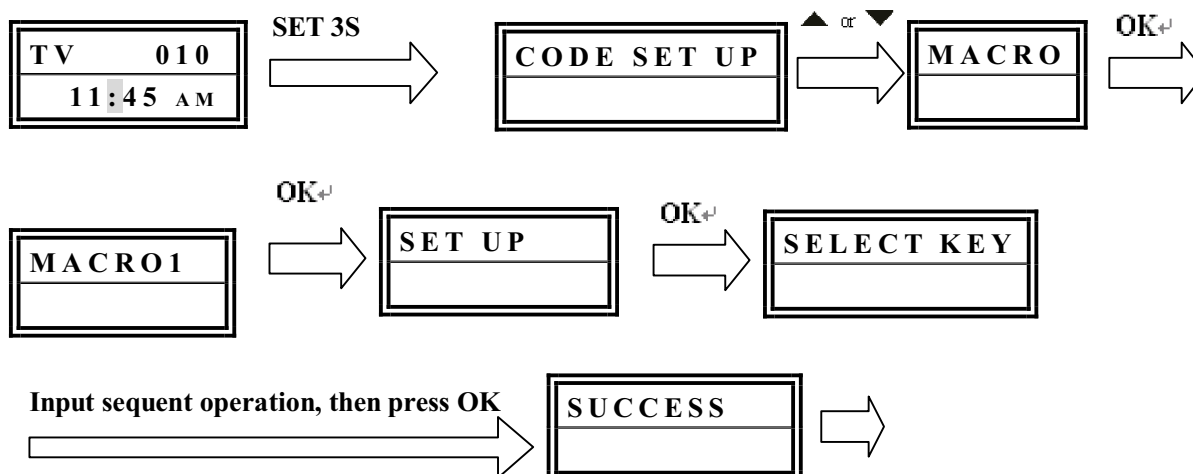










1. Press and hold the **SET** key for more than **3** seconds, and then release it.
2. Press the  or  key to select **"MACRO"**, and then press the  key.
3. Press the  or  key to select the **"MACRO1"** (or Macro2 or Macro3), then press the  key.
4. The screen shows **"SETUP"**, and then press the  key.
5. LCD shows **"SELECT KEY"**, then you can select the device and function key for a sequent operation that you like.
e.g.: TV+POWER+MUTE+AV, +DVD+PLAY, +VCR+RECORD, etc. That means you want to turn on the TV and shut off it's sound, switch TV input to AV port, at the same time DVD starts to play, VCR begins to record
6. Press the  key to save the setting, LCD shows **"SUCCESS"** then exit to current setup state,
7. You can press any device key to finish set up or press the  key to last state and use  or  to select other set up.

 


Remark:


1. A new Macro set up will erase and cover the last programmed Macro.
2. You can set up to maximum 10 commands in a Macro.
3. During operating Macro, be sure point your remote control to your appliance until finish this operation.
4. Be sure all the keys included in MACRO can send out signals, otherwise even if you programmed these keys inside the MACRO, it still can't work properly when you operate this function. You can check those keys by pressing them to see the relative **Device** buttons flash or not before you set up into MACRO.
5. Be sure the device must have relative conditions when you operate MACRO function. For example the disc must be put in the DVD player and a video tape must be put in the VCR when you like to play the DVD or make a record by your VCR by Macro operation.





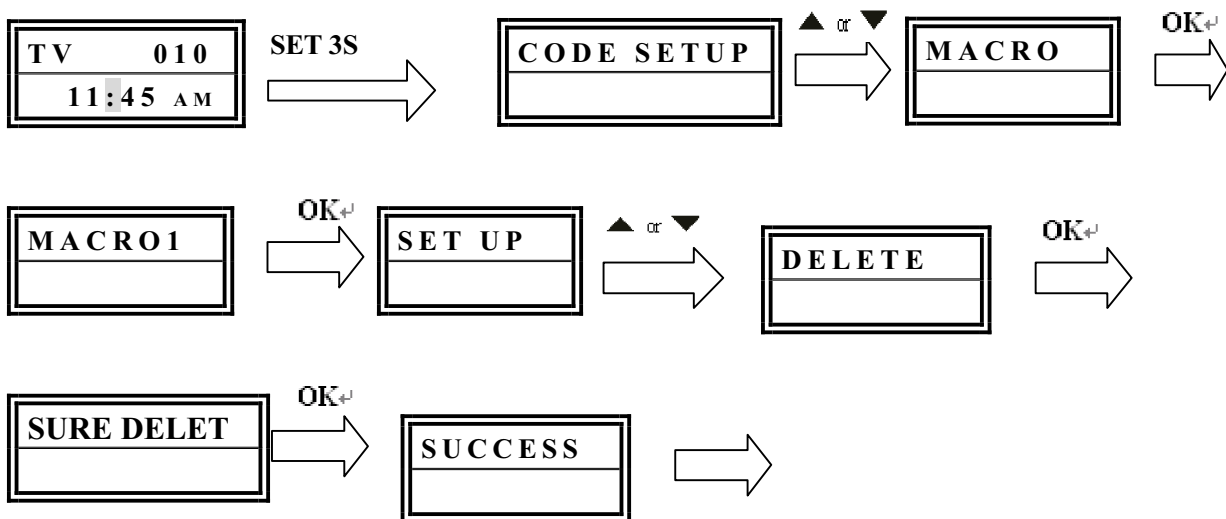


I. Delete Macro

1. Press and hold the **SET** key for more than 3 seconds, then release it.
2. Press the  or  key to select the “**MACRO**”, then press the  key.
3. Press the  or  key to select the “**MACRO1**”, then press the  key.
LCD shows “**SET UP**”
4. Press the  or  key to select the “**DELETE**”, and then press the  key.
5. LCD shows “**SURE DELETE**”, Press the  key to confirm to delete and the LCD display shows “**SUCCESS**” then goes back to the last state.
6. You can press any device key to finish the delete operation or press the  key to last state, and use  or  to select other set up.








J. Device Alternation


URC20-F15D has a flexible device definition for  key. If you want operate second VCR (or second TV, SAT/CBL, CD... etc.), you can set up it's code to AUX device key for a device alteration (**CODE SHIFT**). Just follow the steps below:

1. Press and hold the **SET** key for more than 3 seconds, then release it. Press the  or  keys to select to “**CODE SETUP**”, and press the  key.
2. The LCD screen shows the “**DEV SEARCH**”, Press the  or  keys to select “**CODE SHIFT**”, and press the  key. Then you press **device key** (e.g. **VCR** key) for your desired operation device, then press . And then enter the code

 number, e.g.005 (you can find them in the **BRAND CODE LIST** at the attachment of this manual book) of the device brand by number button.





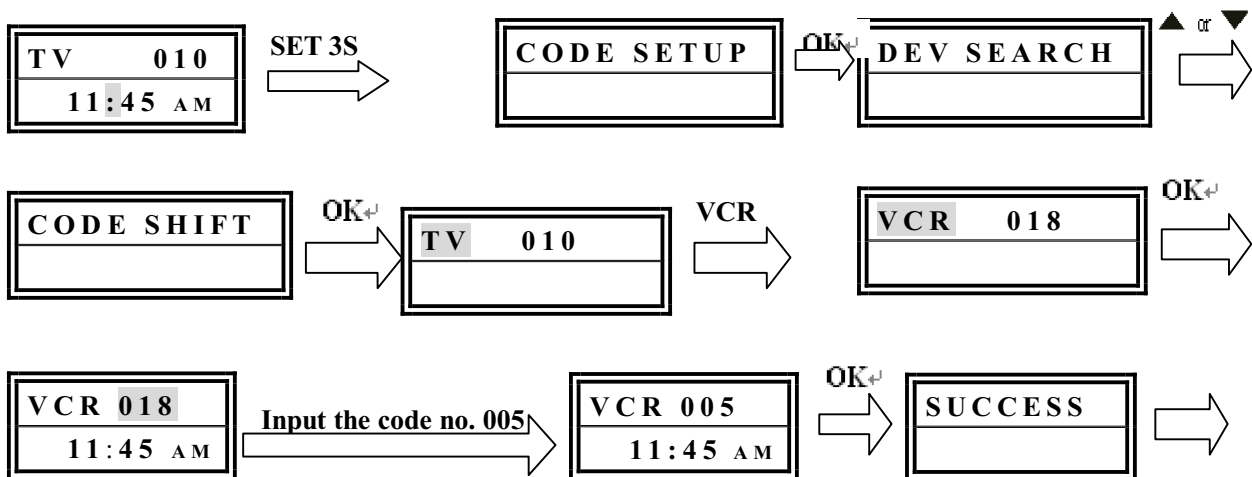



3. Please press the  key to save it and exit, LCD shows “**SUCCESS**”. then return to current setup.

4. Now you can press  key to check, it must be set up to VCR code 005. You can press any device key to finish Device Alternation or press the  key to last state, and use  or  to select other set up.



Clear All

Erase all the setting up data, and go back to the factory default settings.

1. Press and hold the  key for more than 3 seconds, and then release it.
2. Press the  or  key to select the “**CONFIGURE**”, and then press the  key.
3. Press the  or  key to select the “**CLEAR ALL**”, and then press the  key and LCD shows **SURE CLEAR**.
4. Then press the  key to clear all settings and go back to original factory default settings.

Service and warranties:

Your new 8-in-1 remote control is pre-programmed and can handle all important functions of your device. In case of technical inquiries or information concerning our product or its use, our service team is at your service, to help you through a free phone hotline or via email.

Service Address:

**SP European Service & Distribution Centre
Londonerstraße 11
D- 48455 Gildehaus**

Service times: Monday to Friday from 9.00 to 18.00

Phone: 00- 800 / 77 77 88 99 (free)

E-Mail: Service@SupportPlus.org

Note: Please **don't** send us your device to our address without an explicit calling of our service team. The sender is responsible for any costs and the risk of unrequested submissions.

Need Help?

If you have questions about your remote control, just call our free-phone help line! Before you call, please read the manual carefully. However, please make a note of your device in the table below and tell it to our operators when you make a call.

Date of purchase: ___/ ___/ ___/
Day month year

Device	Brand	Model number	Model number of original remote	Code
TV				
VCR				
CBL/SAT				
DVD				
CD				
TUNER				
TAPE				
AUX				

Device Brand Code List

TV

Brand	TV
Accent	023
Acme	004,010,313
Acura	010,309
ADA	015
ADC	002,006
Admiral	001,002,003,020,050,054,109,187,196,197,234,308
Adyson	004,186,210,213,296
Agashi	185,187,212,214,296
Agazi	003,308
Agb	124
Agef	234
Aiko	004,005,010,023,296,309
Aim	023
Aiwa	088,213,318,339
Akai	007,009,010,011,012,023,052,062,069,070,071,134,142,170,185,221,296,309,314,317,340
AKI	185
Akiba	012,023,101,212
Akito	023,026
Akura	003,012,016,023,072,101,185,191,212,308
Alba	309,317,326
Albe	004,010,012,023,028,029,054,063,069,087,163,170,184,185,187,195,198,215,217,296
Albiral	038,185,207
Alcyon	209
Alkos	165
Allorgan	021,027,195,212,219
Allstar	023,052
Amplivision	004,198,207,214,228
Amstrad	003,010,012,014,023,031,069,070,072,075,109,124,226,308,309,317,341
Anam	010,066,110,309
Anglo	010,309
Anitech	003,010,016,023,044,110,183,184,209,224,231,308,309
Ansonic	010,015,023,198,275,309
Arcam	296
Arcam delta	004
Arc en ciel	046,127,140,204,207
Aristona	016,023,052,170,195
A.R.Systems	023

Arthur Martin	159
Art-tech	212
ASA	001,017,018,019,050,111,234
Asberg	023,044,052,182,187,195,209
Astra	010,309
Astro sound	207,212
Asuka	003,004,012,101,212,214,218,296,308
Atlantic	004,021,022,023,052,170,182,197,296
Atori	010,309
Audiosonic	004,010,012,021,023,052,140,170,198,309
Audioton	004,182,198,231,233
Ausind	044,209,212
Autovox	001,003,004,021,044,058,102,126,209,234,308
AWA	023,296
Baird	140,185,186,200,232
Bang&olufsen	001,234
Barcom	210
Basic line	010,012,023,052,101,184,186,212,309
Bastide	004
Baur	023,077,119,133,142,170
Bazin	183,185,201,217
Beijin	263
Beknteknik	228
Beko	008,023,035,084,198,214,228,311,342
Beon	023,052,170
Best	114,115,198
Bestar	023,052,116,198,228,321
Binatone	004
Black diamond	326
Black star	130
Blacktron	101,212
Blackway	101,212
Blaupunkt	009,113,120,136,179
Blausonic	207
Blue sky	012,023,101,212,228
Blue star	101,121
Bondstec	130
Boots	004,026
Boston	208,218
BPL	023,096,101,121
Brandt	037,046,047,127,128,140,204
Brinkmann	023
Brion vega	001,023,052,058,170,208,234,343

Bristol	208
Britannia	004,296
Bruns	001,008,040,227,234
BSR	027,132,197,210,212,215
BTC	012
Bush	010,012,020,023,025,026,028,029,033,052,063,069,101,116,121,132,133,140,168,170,172,309,317,320,321,326
California	195
Capsonic	003,214,308
Carad	023
Carena	023,212,214
Carrefour	028
Cascade	010,023,309
Casio	023,201
Cathay	023,052,170
CCE	023
Centrum	325,326
Centurion	023,052,170
Century	001,191,234
CGE	044,054,130,132,187,198,204,209
CGM	226,233
Changhong	241,242,245,246,247,248,264,278,279,288
CIE	196,212,226
Cihan	214
Cimline	010,029,212,213,309
City	010,309
Clarivox	038,040,170
Clatronic	003,004,010,012,023,031,044,052,084,130,185,198,209,212,214,308,309
Cofadel	204
Colombia	228
Colombus	182
Concorde	010,309
Condor	004,022,023,052,084,101,182,184,187,198,211,296
Conrowa	265
Contec	004,010,028,030,031,211,212,217,296,309
Cont.ediso	204
Continental edison	037,046,047,112,127,140
Cosmel	010,309
Crezar	182,226
Crosley	001,044,130,132,209,234
Crown	010,023,044,052,054,084,096,115,122,170,198,209,228,309,371
Cs electronics	004,012,130,296
CTC	130
CTC clatronic	015,187,198,207,210,212,226

Cybercom	308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Cybermaxx	308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Cybertron	012
Cytron	308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Daewoo	004,010,023,052,059,095,116,196,296,309,321,345
Dainichi	012,212,296
Dansai	003,023,052,170,212,296,308
Dantax	035,149,162,198,213,326
Datronic	196,211
Datsura	096,122
Dawa	023,195
Dayton	010,309
Daytron	023,196
Deawoo	023
Decca	004,011,023,026,031,052,124,170
Decca(uk)	229
De graaf	007,020,034
Deitron	023
Denko	185,214
Denver	211,212
Desmet	023,052,170,182
Diamant	023
Digiline	023,213
Digital	212
Dixi	010,023,040,052,170,309
Domland	219
Domoh	182
Drean	023
DTS	010,309
Dual	004,023,090,126,127,132,140,161,185,195,197,207,211,219,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,332,333,334,335,338
Dual-Tec	004,010,132,197,309
Dumont	001,004,015,018,019,234
Dux	023,170,195
Dynatron	023,052,170
Elbe	023,038,109,158,180,198,275
Elcit	001,234
Electa	121
Electro Tech	010,309
Elekta	101
Elektronska	207

ELG	023
Elin	004,017,019,023,052,170,181,186,197,233,296
Elite	012,022,023,052,179,184,197
Elman	015,132 ,207,213
Elsay	184,229
Elta	010,296,309
Emerson	001,023,101,128,142,234
Emperor	101
Engel	207,227
Erres	016,023,052,170
ESC	023
Estel	207
Etron	010,023,309
Eurocom	207,212
Euro-Feel	003,308
Euroline	089,170
Euroman	023,185,196,198,212,214,296
Euromann	003,004,052,115,308
Europa	023,228
Europhon	004,015,023,026,052,073,124,132,207,226
Eurotronic	228
Expert	021,186,188,197
Exquisit	023
Fenner	010,116,184,191,195,212,309,321
Ferguson	036,037,038,051,053,082,112,128,164,170,232
Fidelis	182,211
Fidelity	004,020,023,069,097,296,317
Filsai	217
Finlandia	007,020,111,129,181,186,200
Finlux	001,004,011,015,017,018,019,023,044,052,064,111,124,132,158,168,170,181,209,225,234,314,315
First Line	004,010,023,027,052,063,130,183,296,309
Fisher	001,004,007,019,028,030,040,041,084,132,195,198,200,211,227,234
Flint	023,052,149,183,184,187,196,214
Formenti	001,002,004,022,044,126,132,134,170,182,209,234,296
Fortress	001,002,234
Fraba	023,198
France Concept	184
Friac	023
Frontech	003,010,020,050,069,119,130,183,184,191,213,308,309,317
Fujitsu	011,021,197,207,212
Funai	003,027,211,212,308,346
Galaxi	023,054,084
Galaxis	023,198

Galeria	196
Galway	184
GBC	010,028,132,226,233,309
GCM	195,212
GEC	004,011,023,042,050,052,124,133,142,170
GEC(UK)	186,224,229,231
Geloso	010,020,132,231,309
General Technic	010,309
Genexxa	012,023,050,052,212
Germanvox	226
Goldhand	231,296
Goldstar	004,010,013,020,023,052,085,094,130,132,170,172,198,206,210,223,296,309,326,344
Goodmans	003,010,011,023,028,029,052,069,094,112,116,128,154,170,206,230,308,309,317,321,326
Gorenje	084,115,198
GPM	012,210,212
Gradiente	023
Graetz	050,142,143,188
Granada	004,007,011,020,023,028,032,041,044,052,055,065,124,128,129,134,135,139,170,209
Grandin	010,012,023,101,121,170,184,309
Gronic	180,191,212
Grundig	009,018,023,044,092,102,117,118,136,137,185,209,347
GTT	187,211
H-150a	276
Haaz	338
Halifax	003,004,296,308
Hampton	004,183,226,296
Hanseatic	004,008,010,022,023,027,028,052,074,096,101,119,132,142,170,198,234,275,309
Hantarex	010,023,124,309
Hantor	023
Harwood	023,186,326
Hauppauge	023
HCM	003,004,010,023,075,101,121,200,211,226,308,309
Hemmermann	183,201
Hifivox	140,204
Higashi	185
Highline	023
Hinari	007,010,012,023,028,044,052,138,170,200,212,213,227,230,309,326
Hisawa	012,101,121,149,212
Hit	234

Hitachi	004,011,017,020,023,024,028,034,042,045,046,047,048,049,050,086,119,124,132,133,139,140,141,142,143,145,186,224,257,258,280,313,348
Hitsu	185,212
Horizont	306,307
Hornyphon	023,052
Hoshai	012,212,233
Huanyu	004,116,296,321
Hygashi	004,296
Hyper	004,010,130,132,226,233,296,309
Hypson	003,004,023,052,101,121,170,212,214,308
Iberia	023
Ibervisao	188,207
Ibico	196
ICE	003,004,010,012,023,052,069,187,210,212,296,308,309,317
ICES	296
Imperial	023,044,050,052,054,084,130,132,187,198,209
Indesit	025,102
Indiana	023,052,170
Ingelen	050,188
Ingersol	010,309
Inno Hit	004,010,011,012,023,052,094,124,170,206,209,211,222,309
Innovation	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,314,316,317,318,319,320,321,322,324,325,326,327,328,329
Interbuy	010,110,130,309
Interfunk	001,016,023,050,052,130,140,142,170,198,234
Internal	023
Intersound	182
Intervision	003,004,015,023,101,110,198,308
Irradio	010,012,023,052,069,170,206,209,212,309,317
Iskra	183,231
Isukai	012,023,101,212
ITC	004,132,184,204,233
ITE	207
ITL	196
ITS	012,023,052,069,101,121,212,296,317
ITT	010,050,062,133,134,135,142,143,144,188,220,309,314,349
ITV	023,309,326
JEC	165
Jet Point	199
JVC	028,052,069,082,189,317,350
Kaisui	004,010,012,023,121,212,296,309
Kamosonic	004
Kamp	004,296
Kapsch	021,050,188,197,200
Karcher	004,010,017,023,038,101,170,198,309

Kasai	212
Kendo	015,020,023,029,109,180,183,186,196,197,198,207,213
Kennedy	021,132,182,197,231
Kennex	182,226,233
Kerion	182,212
Kingsley	004,296
Kitt	212
Kneissel	023,175,180,182,196,198,212,275
Kolster	023,052,191,210,214
Konka	012,023,185,238,242,243,244,248,249,254,255,260,261,285,287,289,303,313
Kontakt	204
Korpel	023,052,170
Korting	001,022,198,234
Kosmos	023
Kotron	226
Koyoda	010,309
Kronne	180
KTV	004,210
Kuba	186,195
Kuro	096,122,200
Kyoto	038,217
Lavis	211
Lenco	010,023,226,233,309
Lenoir	004,010,196,199,208,211,309
Lesa	130,191
Leyco	003,011,023,027,052,170,214,308
LG	004,010,013,020,023,052,085,089,094,130,132,150,170,172,198,206,210,223,296,309,326
Liesenk	170
Liesenkotter	023,179,195
Life	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,314,316,317,318,319,320,321,322,324,325,326,327,328,329
Lifetec	003,010,023,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,211,214,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Loewe	023,098,099,198,234,275,351
Loewe Opta	001,052,170,190
Logik	031
Luma	020,021,023,052,142,170,186,197
Lumatron	020,021,023,052,142,170,308
Lux May	023,052
Luxor	004,020,048,078,094,102,133,139,142,147,206,313
Madison	023,182,212
Magnadyne	001,015,124,130,132,170,191,234
Magnafon	004,015,044,073,124,181,182,183,195,207,209,296

Magnavox	023
Magnum	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,314,316,317,318,319,320,321,322,324,325,326,327,328,329
Mandor	003,308
Manesth	003,004,022,023,029,052,170,182,184,188,213,308
Manhattan	023
Marantz	023,052,170,187,195
Marech	182
Marelli	001,234
Mark	023,052,170,296
Marshall	212
Matsui	004,005,010,011,014,020,023,026,027,028,029,031,052,063,069,092,124,148,149,165,170,174,213,215,309,317
Matsushita	066
McMichael	042
Mediascreen	214
Mediator	016,023,052,170,195
Medion	003,010,023,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,211,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
M-Electronic	004,010,017,019,037,050,052,069,110,111,116,140,170,309,317,321
Melectronic	023,296
Memorex	010,309
Memphis	010,011,114,309
Mercury	023
Metz	001,076,081,136,152,153,218,234
Micromaxx	003,010,023,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Microstar	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Minerva	018,102,136,185,209
Minoka	023,052
Mitsubishi	001,023,028,031,052,055,056,061,099,102,136,171,192,234,276,278,279,280,326,352
Mivar	004,044,074,094,124,193,198,206,209,275,290,291,292,293,294,295
Morgans	023
Motion	044,209
MTC	133,198
Multi System	170
Multitec	023
Multitech	004,010,015,020,023,028,044,046,130,132,170,198,207,212,233,296,309
Murphy	004,019,134,296
NAD	142

Nagoya	207
Naiko	023
Nakimura	023
Naonis	020,109
National	065,102,194,284
NEC	023,028,057,331
Neckermann	001,004,009,020,023,052,084,119,133,170,198
NEI	023,052,069,114,170,183,199,212,317
Nesco	130
Neufunk	023
Newmar	182,183,207
Newtech	010,023,052,309
New World	012
Nicamagic	004,296
Nikkai	003,004,011,012,023,052,114,165,170,186,205,211,212,296,308
Nikkei	226,233
Noblex	023,184,199,200
Nobliko	004,015,018,044,209,296
Nogamatic	140,204
Nokia	050,062,064,133,134,135,142,143,144,188,220,314,315,353
Nordic	212,213
Nordmende	023,025,037,046,047,050,052,058,112,127,128,140,204,354
Nordvision	170
Nordway	217
Nortek	233
Novatronic	023,183,187,212,226
Oceanic	050,142,143
Oceanic(F)	188,220
Octan	195
Okano	023,084,187,198,233
Onceas	004,196,211
Onwa	070,196,212
Opera	023
Orbit	023,052
Orion	010,014,022,023,027,029,031,052,063,076,100,124,143,148,160,170,172,213,309,326,355
Orline	023
Ormond	172,326
Orsowe	207
Osaki	003,004,005,011,012,023,075,166,308
Osio	023
OSO	012
Osume	011,030
Otto Versand	002,004,009,022,023,028,052,077,112,119,121,122,132,133,140,142,170
Pael	004,181,185,296

Palladium	004,013,023,084,198
Palsonic	023
Panama	003,004,010,023,166,296,308,309
Panasonic	023,050,065,066,067,068,102,125,142,143,152,153,194,266,286,316,356
Panavision	023
Panda	267
Pathe Cinema	004,022,038,074,132,182,207,211,228,275,296
Pathe Marconi	038,046,047,127,140,204
Pausa	010,309
PCM	211
Perdio	005,011,022,023,182,207,213
Perfekt	023
Philarmonic	185
Philco	001,023,044,054,130,132,187,198,209,234
Philharmonic	004,166
Philips	001,004,016,023,039,042,044,052,089,090,112,116,132,142,156,170,195,219,234,321,323,357
Phoenix	001,023,052,170,182,195,198,234,296
Phonola	001,016,023,052,170,195,219,234,296
Pioneer	037,050,052,140,146,170,198,216,358
Pionier	198
Plantron	003,023,052,308
Polar	305
Poppy	010,211,309
Prandoni-Prince	020,124,142,182,197,207,209,212
Precision	004,166
Prima	010,050,309
Prinz	048,186,195,217,230,313
PRO2	308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Profex	010,044,142,309
Profilo	172,326
Profi-Tronic	023,052
Proline	011,016,023,052,063,184,213,214
Prosonic	023,043,108,162,170,172,198,296,311,320,326
Protech	003,004,010,015,023,052,114,130,132,133,166,170,308,309
Provision	023,170,326
Pye	016,023,052,069,170,195,234,317
Pygmy	208
Pymi	010,309
Quasar	130
Quelle	003,004,017,018,019,023,027,031,052,077,130,132,136,142,151,170,206,308,326
Questa	028

Radialva	023
Radiola	016,023,039,052,170,195
Radiomarelli	001,023,124,130,191
Radionette	017,019,181,188
Radio Shack	023
Radioton	185,211
Radiotone	008,023,052,198
Raduga	307
Rank	018,028
RBM	018
Rc	259
RCA	032
Recor	023
Record	307
Rectiligne	023
Rediffusion	142
Redstar	023
Reflex	023
Revox	023,052,170,190,198
REX	003,020,021,050,109,158,197,308
RFT	001,008,040,198,227,234,275
R-Line	023,052,170
Rm-d	268
Roadstar	003,010,012,023,226,233,308,309,359
Robotron	001,227,234
Royal Lux	198
RTF	001
Rubin	304,306,307
Saba	001,037,046,047,050,059,112,124,127,128,140,142,143,204,360 4,320,361
Saccs	038
Sadec	212
Sadko	307
Sagem	101,184
Saisho	003,004,010,014,029,031,124,183,213,215,308,309
Saito	207
Salora	020,048,050,094,096,108,109,119,122,129,132,133,135,139,142,186,206,313,31 4,320,361
Sambers	015,044,073,124,181,207,209,211
Samsung	003,004,010,011,023,031,052,084,091,094,105,106,161,166,170,173,198,199,20 6,296,308,309,362
Sandra	004,296
Sandra Color	195,231
Sansui	023,052,183,196,212
Sanwa	188

Sanyo	004,007,011,017,019,023,028,030,031,032,040,041,044,074,096,128,132,135,161,198,200,244,252,275,278,296,363
Save	023
SBR	016,023,042,170
Schaub Lorenz	050,142,143,188,220
Schneider	004,012,023,039,052,069,072,126,130,132,140,161,170,317,329,372
Schneider France	195,212,219
Scott	182
SEG	003,004,015,023,028,040,044,089,130,132,170,296,308,326
SEI	023,201,234
SEI-synudyne	001,014,015,027,050,076,124
Seleco	020,021,028,050,109,132,158,197,364
Sencora	010,309
Senday	182
Sentra	165,205,212
Serino	184,212
Sharp	002,006,028,030,060,202,243,365
Shivaki	195,196
Shiwan	212
Shorai	027,212
Siam	023
Siarem	001,015,124,132,180,191,234
Sicatel	038,207
Siemens	009,023,030,136,179,366
Siera	023
Sierra	016,052
Siesta	161,198
Silva	023,211,212,224,296
Silver	028
Singer	001,015,023,130,132,180,188,191,204,211,234,338
Sinudyne	001,014,015,023,027,029,076,132,170,201
Skantic	050,139,147
Skyworth	239,271,272,273,301,338
Sogera	022
Sokol	306,307
Solavox	050,093,188
song	251,269,283
Soniko	214,217,233
Sonitron	007,135,198
Sonneclair	023
Sonoko	003,004,010,023,052,101,170,211,212,214,308,309
Sonolor	007,050,188
Sontec	023,052,161,170,196,198,210,220

Sony	010,011,028,030,031,077,107,128,131,166,203,237,302,309,367
Soundcolor	211,212,214,215
Soundmaster	226
Sound&Vision	012,015
Soundwave	023,052,170
Standard	004,010,012,022,023,052,166,182,183,191,196,309
Starlight	170
Starline	228
Starlite	023,212
Starlux	196,226
Stenway	101,121,185,212
Stern	020,021,050,197
STM	221
Strato	023
Sunic Line	182
Sunkai	010,023,027,063,183,211,212,213,309
Sunstar	023
Sunwood	010,023,052,309
Superla	004,296
Supertech	023,119,212,226,233,296
Supertone	185,207
Supra	010,184,214,309
Susumu	012
Sutron	010,309
Sydney	004,166,296
Sysline	170
Sytong	212,296
Taisho	207,213
Tamashi	212
Tandberg	081,158
Tandy	002,004,011,012,049,050,166
Tashiko	004,020,028,042,057,129,166,296
Tatung	004,011,023,026,052,124,166,170,229
TCL	196,240,241,250,253,274,277,297,298,299,300
TCM	003,010,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Teac	023
Teak	190
TEC	004,010,049,130,132,166,309
Tech Line	023
Technema	182
Technics	066,194
Technisat	040
Tecnema	022

Teinelsa	182,207
Teknant	211
Teleavia	037,046,112,127,140,204
Telecor	023
Telefunken	023,036,037,051,052,053,079,080,102,103,112,127,128,140,164,204,368
Telefusion	023
Telegazi	023
Telemeister	022,023
Teleopta	226
Telesonic	023
Telestar	023
Teletech	010,023,089,114,130,170,309
Teleton	004,021,081,119,133,166,197
Televideon	022,182,296
Tempest	023
Tennessee	233
Tensai	010,012,019,022,023,027,052,184,185,207,211,213,217,325
Tenson	182
Tesla	180,207
Tesmet	052
Tetran	182,197
Tevion	003,010,023,062,068,069,088,104,108,112,116,155,157,169,172,176,177,178,308,309,310,311,312,313,314,315,316,317,318,319,320,321,322,323,324,325,326,327,328,329,330,331,332,333,334,335,336,337,338
Texet	004,166
Thomson	004,023,037,046,047,051,052,053,059,102,103,112,127,128,140,164,167,204,331,369
Thorn	011,019,023,036,038,055,082,112,128,142,165,170,232
Tokai	011,023,052,183,184,210,212,226
Tokyo	004,296
Tomashi	101,121,212
Top Vision	210
Toshiba	018,028,083,165,205,245,270,279,281,370
Towada	050,132
Trans Continens	023
Transonic	023
Transtec	296
Trevi	199,226,233
Trident	166
Triumph	014,023,083,124,181,211,226
Tsoshi	212
Uher	021,022,023,044,050,052,181,184,190,195,197,198,209
Ultravox	001,004,015,023,130,132,134,182,183,186,191,201,234,296
Unic Line	023,182,183,212

Unic Radio	180,188,228
Uniden	212
United	023,089,170,326
United Satellite	228
Universum	003,017,019,023,052,084,103,111,115,123,130,132,170,198,206,209,308,314
Univox	023,038,188,191,195,207,234
Uranya	182,191,211
Utax	211
Vanguard	186,212
Venus	262
Vestel	023,050,052,170,183,199,319,325,326
Vexa	010,023,170,212,231,309
Victor	028,052,066
Video Logic	185
Videologique	004,012,296
Videosat	130
Video System	023,052
Videotechnic	296
Videoton	184,217
Vidion	196
Visiola	004,180,296
Vision	022,023,052,182
Visorex	097
Vistar	049,188
Vityaz	306,307
Vortec	023,052,170
Voxson	001,020,023,044,050,052,109,189,197,208,209,234
Walkie	197
Waltham	004,023,038,049,139,166,217
Watson	022,023,052,170
Watt Radio	004,015,038,132,187,201,210,231,296
Wega	001,023,028,234
Wellfund	233
Weltblick	023,052,170,182
Weston	132
Wharfedale	023
White	182
White Westinghouse	004,015,022,023,044,170,182,296
Windstar	101
Xoceco	235,236,242,260
Xrypton	023,182
Yamishi	023,101,184,212
Yokan	023

Yoko	003,004,010,012,023,052,166,170,183,198,212,224,296,308,309
Yorx	012,185,196
Zanussi	020,021,109,197
Zoppas	197
7el	256
Others	282

VCR

Brand	VCR
Adelsound	098
Adyson	099
Aiwa	001,002,003,004,017,100,101,102,103,104,105,106,165,166
Akai	003,005,006,007,008,009,019,063,102,105,113,121,145,146
Akiba	041,099
Akitan	107
Akura	003,013,041,099,102
Alba	004,014,015,016,017,019,041,099,101,103,104,105,107,108,109,110,111,113,165,166
Allorgan	073,145,169
Allstar	114,115
Ambassador	019
Amstrad	002,022,023,099,101,108,116,117
Anitech	041,099,114
Anitsch	091
Ansonic	098
Aristona	115
ASA	025,026,086,106,115
Asuka	002,025,026,041,099,101,106,115,118
Audiosonic	108
Audioton	019
AWA	106,108,119,120
Baird	002,003,005,014,027,028,045,101,102,107,108,121,122,123
Basic line	004,014,019,041,099,103,108,165
Baur	026,032
Bestar	014,019,108
Black Panther	108
Black panther line	014
Blaupunkt	026,029,030,031,032,039,071,115,125,126,127,128,129,130,167
Blue sky	099,103,104,105,106
Bondstec	019,099
Brandt	066,067,102,131,132,133,134
Brinkmann	103,104
Brion vega	033,135
Broksonic	042

Bush	004,014,015,016,017,041,052,099,101,103,104,105,107,108,109,110,113,136,165,166
Canon	137
Carena	103,115
Carrefour	138
Casio	101
Cathay	108
Catron	019
CGE	002,003,101,102
CGM	089
Cimline	004,041,099,103,165
Clatronic	019,099
Combitech	017,105,166
Condor	014,019,107,108
Crown	014,019,041,099,108,114
Cybercom	165,166,167,168,169,170
Cybermaxx	165,166,167,168,169,170
Cytron	165,166,167,168,169,170
Daewoo	014,019,034,040,079,103,105,108,138,170
Dansai	041,099,107,108
Dantax	165
Daytron	014,108
Decca	002,003,026,101,102,104,115,142,143
De graaf	026,035,115,122,139,140,141,147
Deitron	108
Denko	099
Diamant	106
Domland	103
Dual	003,026,101,102,108,115,165,166,167,169,170
Dumont	002,026,035,045,101,115,122,144
Elbe	062,108,118
Elcotech	099
Elin	021,145
Elsay	099
Elta	041,099,107,108
Emerson	053,099,138
ESC	014,019,108,145
Etzuko	041,099
Europhon	019
Fenner	019
Ferguson	003,028,039,043,046,057,067,101,102,108,123,133,134,146
Fidelity	002,099,101,116,145
Finlandia	026,035,045,101,115,122,139,140,147
Finlux	002,003,005,026,035,045,050,061,101,115,122,144,147

First Line	004,025,034,035,041,061,099,103,104,106,108,120,136,138,147,148,165
Fisher	019,044,045,118,122,141,149,150
Flint	004,103,165
Formenti-Pheonix	026
Frontech	019,114
Fujitsu	002,101
Funai	002,101
Galaxi	101
Galaxy	002
GBC	019,041
GEC	026,115
Geloso	041
General	019
General Technic	004,017,038,073,104,165,166,167,169
Genexxa	122
Goldhand	041,099
Goldstar	002,025,101,106
Goodmans	002,014,019,021,025,028,041,047,048,099,101,103,104,106,108,115,129,136,145,151,152
Gradiente	142
Graetz	003,033,045,102,122,135,145
Granada	010,026,029,035,039,045,049,101,106,115,122,127,140,141,145,147
Grandin	002,014,019,025,041,099,101,103,106,108
Grundig	026,029,032,039,041,050,051,052,054,084,104,115,127,128,129,133,153,154,155
Haaz	165
Hanimex	105,107
Hanseatic	025,026,103,106,108,115
Harwood	099
HCM	041,052,099,114
Hinari	004,017,041,052,053,098,099,102,103,105,108,114,136,148,152,156,165,166
Hisawa	004,103,105,165
Hitachi	002,003,026,035,037,098,101,102,115,129,139,144,145,147
Hornyphon	115
Hypson	004,041,099,103,105,108,165
Impego	019
Imperial	002,101,145
Ingersoll	098,103,145
Inno Hit	014,019,021,026,041,099,108,114,145
Innovation	004,017,038,073,165,166,167,169
Interbuy	025,106
Interfunk	026,045,099,115,122
Internal	108

International	108
Intervision	002,101,103,104,106,107,108
Irradio	025,041,099,106,115
ITT	003,005,033,045,055,056,102,121,122,135,141,145,157
ITT/Nokia	082,084,085,088,089,090,092,140
ITV	014,019,025,106,108
JVC	003,056,057,058,059,060,102,132,142,143,157
Kaisui	041,099
Karcher	026,108
Kendo	004,005,006,014,019,034,063,099,103,104,106,113,121,146,165
Kenwood	003,102,118
Kimari	149
Kneissel	103,104,105,106
Korpel	041,099
Kuba	149
Kuwa	029
Kyoto	099
Lenco	014
Leyco	041,099,148
LG	002,025,101,106,108
Lifetec	004,017,038,073,103,104,165,166,167,168,169,170
Loewe	031,036,098,106,115,126,127,144,158,159,167
Loewe Opta	025,026,039
Logik	021,041,098,099,103,121,145
Luma	093
Lumatron	014,108
Luxor	005,045,047,061,099,120,121,122,141,149,151
Magnasonic	045
Magnavox	115,129
Manesth	034,041,099,103,115,138
Marantz	026,039,047,062,103,107,115,118,127,151,160
Mark	019,108
Marquant	114
Matsui	004,017,025,053,064,098,101,103,104,105,106,107,111,117,145,148, 156,165,166
Mediator	026,115
Medion	004,017,038,073,103,104,105,165,166,167,168,169,170
Melectronic	002,101,106,118
Memorex	002,010,025,044,045,101,106,122,140,141,149
Memphis	041,099
Metz	029,030,031,032,039,084,115,125,126,127,128,153,158,159,161,167
Micormay	104
Micromaxx	004,017,038,073,103,165,166,167,168,169,170
Microstar	004,017,038,073,165,166,167,168,169,170
Migros	002,101

Minerva	032,039,128
Mitsubishi	002,026,057,061,115,119,120,143,162
Multitech	002,019,026,041,099,101,114,122
Murphy	002,101
NAD	096,122
National	029,031,126,167
NEC	003,057,062,102,106,118,122,143
Neckermann	003,026,033,053,102,115,127,135,156
NEI	026
Nesco	041,099,101,105
Neufunk	103
Nikkai	019,065,099,108
Nobliko	083,097
Nokia	003,005,010,021,033,045,055,102,108,113,115,121,122,135,140,141,145,147
Nordmende	003,056,057,066,067,102,131,133,134,143,148,157
Oceanic	002,003,010,101,102,115,121,122,140,141
Okano	004,063,099,103,104,108,113,114,165
Orion	004,015,017,048,053,064,098,103,104,105,107,109,110,148,152,156,165,166
Orson	002,101
Osaki	002,025,041,099,101,106
Osume	136
Otake	109,110
Otto Versand	026,032,115
Palladium	003,025,039,041,063,098,099,102,103,106,113,127,145
Palsonic	099,101
Panasonic	029,030,031,038,076,125,158,159,161,167
Pathe Cinema	064,098,120
Pathe Marconi	003,102
Penney	062
Pentax	035
Perdio	002,101,103
Philco	062
Philips	012,026,039,054,056,077,115,127,129,160
Phonola	026,115
Pioneer	026,057,115,143,147
Portland	014,019,107,108
Prinz	002,101,148
PRO2	165,166,167,168,169,170
Profex	041,114
Profi-Tronic	115,145
Proline	002,052,101,133,134,136
Proscio	108
Prosonic	101,103,107,108,165

Protech	115
Provision	108
Pye	026,115
Quartz	045
Quelle	002,026,027,032,033,039,045,053,115,127,135,156
Radialva	099,106,115,140
Radiola	026,115
Rank	102
RCA	094
REX	003,056,102,157
RFT	019,026,099,129
Roadstar	014,021,025,041,099,106,108,145
Royal	099,114
Saba	003,046,056,066,067,081,102,108,131,132,133,134,151,157
Saisho	004,017,041,053,064,098,103,104,111,148,156,165,166
Salora	005,045,055,061,120,121,122,141
Samsung	021,073,074,145,163,169
Samurai	019
Sansui	003,013,057,099,102,104,114,121,143
Sanwa	098
Sanyo	027,044,045,122,140,141,143,149
Saville	017,105,107,108,145,166
SBR	026,115
Scan Sonic	145
Schaub Lorenz	002,003,005,033,045,101,102,113,121,122,135
Schneider	002,004,014,019,025,026,034,041,099,101,106,108,115,145,165
Seaway	108
SEG	021,041,099,108,114,119,145
SEI sinudyne	026,098,115
Seleco	003,019,102,106,142,157
Semivox	103,138
Sentra	019,099,136
Sentron	041
Setron	099
Sharp	010,011,047,106,140,151
Shintom	041,045,099,122
Shivaki	025,106
Shorai	098,148
Siemens	025,032,039,045,050,106,115,122,127,128,150,155,160
Siera	115
Silva	025,106
Silver	108
Sinudyne	026,098,115
Solavox	019
Sonitron	149

Sonneclair	099
Sonoko	014,108
Sonolor	010,140
Sontec	025,106
Sony	018,020,024,070,071,072,075,078,112,121,124,130,161,164
Soundwave	103,106
Ssangyong	099
Standard	014,108
Starlite	106,122
Stern	108
Strong	013
Sunkai	004,103,104,108,165
Sunstar	002,101
Suntronic	002,101
Sunwood	041,099
Supra	106,145
Symphonic	099,101
Taisho	004,098,103,148,165
Tandberg	032,053,108
Tashiko	002,010,101,106,115,140,145
Tatung	002,003,026,101,102,103,104,115,120,140,146
TCM	004,017,038,073,165,166,167,168,169,170
Teac	100,101,102,106,108,115
TEC	019,099,107,108
Technics	029,031,167
Technisat	103,104
Teleavia	003,102,131
Telefunken	003,056,057,058,066,067,068,069,080,081,102,108,131,133,134,157
Telemeister	095
Teletech	099,101,108,114
Tempest	019
Tenosal	041,099
Tensai	002,025,041,098,099,101,106,114
Tevion	004,017,038,073,103,104,165,166,167,168,169,170
Thomson	003,012,056,057,058,067,080,081,102,132,133,134,157
Thorn	003,045,064,102,106,122
Tivo Hdd	012,078
TMK	087
Tokai	025,041,099,102,106,122
Tokiwa	099
Tonsai	041
Topline	104
Toshiba	003,026,034,056,061,102,115,120,129,138,157,170
Towada	041,099,114
Towika	041

Trakton	019
Triumph	053,156
TVA	019
Uher	025,033,106,135,145
Ultravox	033,107,108,135
Unitech	021,145
United Quick Star	014,107,108
Universum	002,005,009,022,025,026,032,039,054,101,103,104,106,114,115,116, 121,127,128,129,145
Vector	062
Victor	057,058,142,143
Video	062
Videon	004,017,038,073,165,166,167,169
Watson	105,115
Weltblick	025,106
White	085,086
White Westinghouse	033,085,086,135
Xenon	093
Yamishi	041,099,107,108
Yokan	041
Yoko	019,021,025,041,106,145
ZX	103

SAT

Brand	SAT
AGS	249
Akai	003,125,242
Akena	249
Alba	003,004,005,006,007,008,009,102,133
Aldes	007,010,011
Allantide	015
Allsat	012,014,055,125,242
Allsonic	010,029,309
Alpha	242,249
Ampere	024
Amstrad	017,018,019,021,023,154
Andover cablevision	258
Ankaro	010,029,243,244,309
Anttron	004,009,014,247
Apollo	004
Arcon	017,024,025,027,056,243
Armstrong	021,242
Asat	125,242
AST	036

Astacom	249,250
Aston	164
Astra	003,021,030,031,032,033,034,093,284
Astro	009,011,029,040,041,042,241,247,309
Astrx	288
Athena	249
Audioton	009,055,247
Aura	034
Axiel	249
Axis	017,029,033,050,309
Barcom	025,243
Best	025,029,309
Blaupunkt	040,241
Boca	021,093,246
Brain wave	044
Brandt	136,137,138,145,316
Broadcast	043
Brunor	126
BT	249,250
BT cable	260
BT satellite	003,022,145
Bush	005,006,012,045,102,133
Cabletime	261,262,263,264
Cambridge	003,046
Camundosat	047
Canal+	140,174,222
Canal Satellite	245
Century	279
Channel master	007
Chaparral	098
Chess	318
Citycom	005,052,253
Clark	247
Clatronic	044
Clemens kamphus	015,083
Clyde cablevision	265
CNT	011
Colombia	249
Columbus	069
Commander	244
Commlink	010
Comtech	050,051
Condor	029,309
Connexions	039,047,048
Conrad	246,

Contec	050,052,246
Cosat	055
Crown	021
Cryptovision	266
Cybercom	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Cybermaxx	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Cytron	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Daeryung	039
Dansat	012,014
DDC	007
Decca	053
Delega	007
DEW	050
Diamond	054
Discovery	249
Diseqc	250
Disk Express	243
Diskxpress	025,048
Distrisat	242
Ditristrad	055
DNT	039,125,242
Dong Woo	092
Drake	056,128
Dual	306,307,308,309,311,312,313,316,317,318,319,320,321
Dynasat	031
Echostar	026,039,057,058,060,073,149,150,151,156,249,318
EEC	015
Einhell	004,010,015,019,021
Elekta	011
Elta	004,008,029,055,125,242,309
Emanon	004
Emme Esse	029,031,045,083,309
Ep Sat	005
Eurodec	062,063
Europa	022,242,244,246
Eurosat	021
Eurosky	021,029,031,309
Eurospace	061
Eurostar	008,021,080
Exator	003,004,009,247
Fenner	249
Ferguson	005,012,014,045,062,064,065,066
Fidelity	017,019
Filmnet Cablecrypt	267
Filmnet Comcrypt	267

Finlandia	005
Finlux	003,005,030,067,072,079
Finnsat	050,062
Force	148
Fortec Star	285,286
Fracarro	133,249
France Satellite/Tv	069
Freecom	004,068
FTE	022,024,051,087,246
Fuba	004,025,029,032,039,040,069,072,122,125,241,243,309
Galaxi	025,243
Galaxis	010,029,033,050,055,070,076,152,153,309,317
Gardiner	253
GEC	265
GMI	021
Goldbox	245,322
Goldbox-D+	222,233
Goldstar	068
Gooding	075
Goodmans	005,074
Granada	030
Grothusen	004,068
Grundig	005,009,040,045,075,077,086,124,154,235,241,251,252
G-Sat	014,015
Hanseatic	095,312
Hantor	004,019,044,092
Hanuri	011
Harting Und Helling	015
HEDY	277
Heliocom	024
High Performance	082
Hinari	007,008,014
Hirschmann	015,039,040,078,079,080,083,122,129,178,179,180,181,241,250
Hisawa	044
Hitachi	005,045,115
Houston	055,244,249
Humax	152,192,193,234,281
Huth	010,013,021,043,044,050,055,083,244,246
Imperial	102,133
Innovation	029,085,095,153,156,157,309,311,312,313,317,318,319,320,321
Intertronic	021
Intervision	055
Italtel-Stream	223,224
ITT/Nokia	005,030,045,048,079,115,122
Jerrold	257,270

Johansson	044
Jok	250
Jsr	055
JVC	003,075,236
Kathrein	015,040,042,052,087,088,089,090,098,125,177,241,242,247,249,253,254
Kosmos	068,083,087,088
KR	009,247
Kreismeyer	040,241
Kyostar	004,247
Lasat	011,029,091,092,093,136,137,138,309,316
Lenco	004,022,068,094,244
Leng	044
Lennox	055
Lexus	242
Leyco	003
LG	068
Life	137,153,317
Lifesat	029,085,095,137,153,156,157,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Lifetec	029,085,095,137,153,156,157,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Lion	015,061
Lorenzen	244
Lorraine	068
Lupus	029,309
Luxor	019,030,115,122
Macab	062
Manata	249,250
Manhattan	005,011,045,055,249,250
Marantz	125,242
Mascom	011,088
Maspro	005,045,064,075,098,129,235,241,251
Matsui	003,075,145,235,241,250
Mb	095,312
Mediabox	245
Mediamarkt	021
Mediasat	033,245
Medion	029,085,095,137,153,156,157,214,215,216,217,218,219,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Mega	125,242
Melectronic	253
Metronic	004,009,010,171,247,253
Metz	040,241
Micro	247

Micromaxx	029,085,095,137,153,156,157,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Microstar	029,085,095,137,153,156,157,306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Micro Technology	015,034,061
Mimtech	096
Minerva	040,075,235
Mitsubishi	005,040,145
Mitsumi	093
Morgans	021,093,097,125,242,246
Movie Time	269
Multichoice	172
Multistar	087,092
Multitec	318,319
Muratto	038,068
Navex	044
NEC	100,101
Network	014
Neuhaus	033,055,071,244,246
Nextwave	016,155
Nikko	021
Nimbus	096
Nokia	005,030,045,048,079,110,111,122,134,135,194,195,196,197,198,199,200,201,202,203,204,222,223,227,230,236,280,292
Nordmende	004,005,007,011,062,065,123
Novis	044
OAK	271
Oceanic	015,054,061
Octagon	004,008,009,050,244,247
Okano	021,083,087,236,237,238,239
Ondigital	186,229,230
Optex	052,055
Orbit	015,036
Orbitech	004,103,246
Origo	105
Osat	009
Otto Versand	040
Oxford	003,249
Pace	005,012,014,040,045,064,074,099,107,112,130,154,186,189,191,195,204,205,206,207,208,209,210,211,212,213
Pacific	054
Packsat	250
Palcom	007,032,069,071
Palladium	021,075,077,235
Paltec	032

Panasonic	005,045,154,183
Panda	005,012,241
Patriot	249,
Patriot Worldsat	003,249,250
Philips	005,014,028,035,037,045,049,059,075,086,099,104,121,124,125,132,169,170,222,224,225,235,237,238,241,242,243,244,245,246,247,248,249,250,251,252,253,254,311
Phoenix	014,050,074
Phonotrend	010,055,083
Pioneer	245,272,273,275
Pk Sat	015
Polsat	173
Polytron	052
Predki	044
Preisner	246
Premiere	055,140,245
Priesner	021
PRO2	306,307,308,309,310,311,312,313,314,315,316,317,318,319,320,321
Profi	094
Profile	249
Promax	005
Prosat	006,007,010,102,133
Protek	015,054
Proton	015
Provision	011
Ptt Telecom	047
Pye	235,
Quadral	007,010,029,246,249,250,309
Quelle	019,040
Quiero	173
Radiola	125,242
Radix	039
Rainbow	009,247
RE	096
Rediffusion	101
Redpoint	033
Redstar	029,309
Remoshack	296
Revox	096
RFT	010,103,125,242,244
Ruefach	094
Saba	006,011,014,045,061,064,065,120,127,133,136,142,143,144,146,250
Sabre	005
Sagem	062
Sakura	050,074

Salora	030,100,101,107,274
Samsung	004,027,078,272
Sat	007,017,036,038
Satbox	276
Satcom	043,095,106,312
Satec	014,045
Satford	043
Satmaster	043
Satpartner	004,009,011,044,068,083,247
Schäcke	247
Schneider	049,248,250,252,254,309,313,317,318,319,320
Schwaiger	013,014,052,054,089,095,137,144,146,147,152,155,157,168,246,306, 312,316,317,319
Scientific Atlanta Sts	255,256,268
Seemann	003,021,033,039
SEG	004,008,029,034,044,095,119,309,312
Seleco	055
Siemens	040,241
Silva	068
Skardin	033
Sky	154,182,190,191,220,221,278,282,283,323
Sky Digital	154
Skymaster	010,095,148,156,158,159,160,161,162,293,294,295,297,298,299,300, 301,302,303,304,305,312,315,318,319
Skymax	015,125,242
Skyvision	055
Sony	020,154
SR	021,065,093
Starion	034
Starland	156,318
Starring	044
Star Trak	004
Stella	047
Strong	004,009,029,048,051,081,133,222,228,247,289,309
Sumida	021
Sun/Moon/Star	184
Sunstar	021,093,107
Tandberg	062
Tandy	009
Tantec	005,045,064,069,071
Tatung	053,105
TCM	029,085,095,137,153,156,157,306,307,308,309,310,311,312,313,314, 315,316,317,318,319,320,321
Techniland	043
Technisat	039,071,103,108,109,126,242

Teco	021,093
Telanor	007
Telasat	095,312
Tele+1	222,228,267
Teleciel	247
Telecom	047
Telefunken	004,045,131,136,137,138,145,250,316
Teleka	009,021,027,039,088,247,251
Telemaster	011
Telemax	091
Telesat	095,312
Telestar	071
Teledes	005,185,187,188
Telewire	055
Tevion	029,085,095,137,153,156,157,218,219,306,307,308,309,310,311,312, 313,314,315,316,317,318,319,320,321
Thomson	005,065,084,131,139,145,173,245,249,250
Thorens	054
Thorn	005,012,014,045,064,066
Tioko	052
Tokai	242
Tonna	005,043,055,249
Toshiba	239
TPS	141,175
Triad	015,036,038,068,113
Triasat	072
Triax	040,071,136,242
Tristar	051
Tudi	259
Uniden	114,287
Unisat	021,050,242
Unitor	025,044,243
Universum	040,067,075,079,235,241
Variosat	241
Variostat	040
Vector	015,061
Ventana	125,242
Via Digital	135,139,231,232
Visiosat	044,055,156,163,164,165,166,167,318
Viva	244
Vortec	004,027,078
VTech	253
V-Tech	036,038,104,115
Way	291
Wela	246

Westminster Cable	260
Wevasat	005,015
Wewa	005
Winer	290
Winersat	044
Wisi	005,036,038,039,040,113,116,117,118,241,246
Wittenberg	017
Wolsey	082
Woorisat	011
Xsat	176,249
Zehnder	011,029,038,087,089,119,243,253,309
Zeta Technology	242
Zodiac	009,247

CD

Brand	CD
Adcom	006
Aiwa	007,008,009,098
Akai	010,011,012,013
Alba	014
Arcam	083
Asuka	015
Audiosonic	015
Bestar	016
BSR	017
Bush	018
California audio lab	019
Carrera	020
Classic	119
Condor	017
Crown	021
Cybercom	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Cybermaxx	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Cytron	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Denon	022,023
Dual	015,024,103,104,105,107,108,109,110,111,112,113,114,115,116,117,118
Elta	105,108,113
Emerson	006,016,025
Fisher	026,027
Genexxa	016,025,028,029,030,031,032,033,034,107
Goldstar	020

Goodmans	025,035,036
Grundig	037,083
Harmon Kardon	010,038,039,040
Hitachi	006,024,041,042,043
Innovation	081,089,090,091,092,093,094,109,110,111,112,113,114,115
Intersound	015
JVC	044
Kenwood	026,029,045,046,047,100
Kodak	005
LG	020
Lifetec	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Linn	083
Luxman	048,049
Magnum	081,089,090,091,092,093,094,109,110,111,112,113,114,115
Marantz	051,052,083
Matsui	051,053,083
Mcintosh	054,055
Medion	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
M-Electronic	050
Memorex	006,016,025,031,034
Meridian	083
Micromaxx	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Micromega	083
Microstar	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Mission	083
NAD	028,049,084,085,086,087
Naim	083
Nakamichi	056,057
Onkyo	002,058,059,060,061
Panasonic	018,019,062
Philips	003,063,064,082,083
Philips Cd-I	064
Philips Cd-V	002
Pioneer	030,034,099
PRO2	103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Proton	083
Quad	083
Realistic	006,016,031,032,107
Roadstar	050,063,065
Rotel	083

Saba	024
SAE	083
Samsung	102
Sansui	003,025,066,067,068,083
Schneider	001,017,083
Scott	016,025
Sharp	029,069,070,071
Siemens	072
Signature	010
Singer	118
Sony	028,073,074,075,088,095,096,097
Sunwood	015
Tandberg	083
TCM	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Technics	019,062,077,101
Telefunken	024
Tevion	081,089,090,091,092,093,094,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120
Thomson	004,024
Toshiba	049,078,079
Universum	083
Vector Research	020
Victor	044
Welltech	107,108,112
Yamaha	069,076,080
Yorx	065

DVD

Brand	DVD	DVR
Akai	010,034,064	
AMW	091	
Arena	120	120
BBK	075,076,077,078,079,080,081,082,083,084,085	
Brandt	118	
Bush	097	
CMI	120	120
Crown	118	
Cybercom	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
CyberHome	042,068	
Cybermaxx	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120
Cytron	102,103,104,105,106,107,108,109,110,111,112,113,114,115,116,117,118,119,120,121,122,123,124	120

Daewoo	070,091	
Denon	005,036,058	
DIK	114	
Dual	102,103,104,105,107,108,109,110,111,112,113,114,115,116, 117,118,119,120	120
ECCG	095	
Ferguson	118	
Golden Sphere	108	
Goodmans	118	
Go-Video	105	
Gradiente	118	
Grundig	011	
GVG	096	
Haaz	108,109	
Harman/Kardon	050	
H&B	110	
Himage	094	
Hitachi	009,025,030,043,063,127	127
HTY	086	
Innovation	012,013,014,114,116,117,118	
JVC	002,032,066	
Kendo	114,120	120
Kenwood	005,028,058	
Koss	118	
Labwave	023,048	
Lasonic	067,108	
LG	016	
Life	012,013,014,116,117,118	
Lifetec	012,013,014,102,103,104,105,106,107,108,109,110,111,112, 113,114,115,116,117,118,119,120,121,122,123,124	120
Limit	108	
Linn	035	
Loewe	011,039	
Magnavox	056,089,125,126	
Marantz	003,038	
Matsui	118	
Maxim	091	
Medion	012,013,014,041,102,103,104,105,106,107,108,109,110,111, 112,113,114,115,116,117,118,119,120,121,122,123,124	120
Metz	009,024	
Mico	087,088	
Micromaxx	012,013,014,102,103,104,105,106,107,108,109,110,111,112, 113,114,115,116,117,118,119,120,121,122,123,124	120
Microstar	012,013,014,102,103,104,105,106,107,108,109,110,111,112, 113,114,115,116,117,118,119,120,121,122,123,124	120

Mitsubishi	007	
Mustek	069,071,072	
NAD	027	
Noname	045	
Norcent	093	
Nortek	091	
Onkyo	015,029,065	
Optimus	059	
Oritron	118	
Pacific	114	
Panasonic	005,006,017,022,036,051,054,055,058	
Panda	090	
Philco	053	
Philips	003,011,039,040,047,052,125,126	125,126
Pioneer	009,024,026,059,062	
Prism	104	
PRO2	102,103,104,105,106,107,108,109,110,111,112,113,114,115, 116,117,118,119,120,121,122,123,124	120
Proline	118	
RCA	057,073	
Reoc	108	
RTL	120	120
Saba	118	
Sampo	108	
Samsung	008,030,063,105	
Sanyo	092	
Schneider	014,113,114,118	
SEG	108	
Sharp	012,013,116	
Sherwood	044	
Siltex	076	
Skymaster	098,099,100,101	
Sony	004,031,046,060	
Strong	091	
SVA	074	
Sylvania	106	
TCM	012,013,014,102,103,104,105,106,107,108,109,110,111,112, 113,114,115,116,117,118,119,120,121,122,123,124	120
Teac	108	
Technics	005,036,037,058	
Tevion	012,013,014,102,103,104,105,106,107,108,109,110,111,112, 113,114,115,116,117,118,119,120,121,122,123,124	120
Thomson	001,033	
Toshiba	003,049	
Xenius	115,118	

Yamaha	005,036,058,061,125,126	125,126
Others	018,019,020,021	

TAPE

Brand	TAPE
Aiwa	008,009,010,126,127
Akai	015,079,089,099,100,110
Amstrad	082
Aswo	017
Braun	036
Bush	003
Daewoo	073
Denon	002,006,007,045,058,132
Diora	065,066
Dual	016,101,102
Fischer	059,060,071,129
Goldstar	128
Goodmanns	001
Goodmans	033
Grundig	017,021,026
Harman Kardon	057,092
Hitachi	045,081
ITT	084,085
JVC	011,028,029,123,124
Kenwood	014,083,098,101,102,116,121,122
Linn	054
Luxman	042,043,050,097
Marantz	017,053,088
NAD	069,070
Nakamichi	093
Nokia	086
Okano	113,114
Onkyo	012,013,022,067,068
Palladium	109
Panasonic	048,094,095
Philips	017,026,087
Pioneer	019,020,078,104,106,107,108
Radmor	053
Revox	027
Revox/Studer	017
Samsung	049,051,052,062,063
Sany	071
Sanyo	072,096,103
Schneider	017,032,033,034,035,038,039,040,044,084,085,112,128
Sharp	005,030,116

Sherwood	056,074,075,076,077
Siemens	015,017,046,047,111,112,115,117,118,119,120,128
Sony	031,091,105,130,131,133
T+A	037,125
T+A Elektroakustik	125
Technics	004,055,064,094
Thomson	018
Universum	034,041,052,061,112,115
Yamaha	023,024,025,080,090

TUNER

Brand	TUNER
Aiwa	006,007,048
Akai	026,077,089
Amstrad	081,093,097,098
Ash	053
Aswo	056
Bush	042
Daewoo	087
Denon	001,002,031,052,074,100
Diora	090
Dual	011,025
Fischer	063
Goldstar	004
Goodmanns	077
Goodmans	042
Grundig	056,058
Harman Kardon	084
Hitachi	031,082
ITT	030
JVC	044,073,076
Kenwood	025,066,068,071,075
Linn	101
Luxman	067,103
Marantz	056
Minowa	039
Mission	018
NAD	088
Nakamichi	049
Nokia	040
Noname	042
Okano	079,092
Onkyo	055,069
Palladium	080
Panasonic	001,061

Philips	056
Pioneer	010,013,014,065
Radmor	057
Revox	016
Revox/Studer	056
Rotel	008
Samsung	009,041,078,094,102
Sanyo	022,062
Schneider	004,018,020,021,023,024,028,029,030,032,033,034,037,038,039,042,070, 072,080,089,092,093,098
Sharp	003,075
Sherwood	043,085,086
Siemens	004,018,036,037,047,056,077,087,092,095,099
Sinotec	024
Sinotec(Pepsi-Dose)	024
Sony	019,046,050,051
Supertech	042
T+A	035,054
T+A Elektroakustik	054
Technics	017,059,060,091
Thomson	012
Uher	005
Universum	033,077,092,096,102
Yamaha	015,027,045,064,083

AUX OTHER

Brand	AMP	LD/OTHER
ADT		161
Aiwa	028,128,129	
Akai	018,112,121	
Amplifier	158	
Amstrad	014,034,077,086,145	
Arion		162
ASH	027	
Aswo	043	
Audio Comb1		040
Braun	104	
Bush	032,116	
CD Photo		039
CDR		041
CD Video		038
Cybercom	169,170,171	173,174,175,176,177,178
Cybermaxx	169,170,171	173,174,175,176,177,178
Cytron	169,170,171	173,174,175,176,177,178
Daewoo	022	

Denon	020,080,098,131,139	001(LD)
Diora	081	
Disco Vision		003(LD)
DMT		161
Dual	062,124,169,170	173,174,175,176
Elta		176
Fischer	021,085,134	
Goldstar	029	
Gold Vision		166,167
Goodmanns	015,018,032	
Grundig	043,142,148	005(LD),043,044,046
Harman Kardon	091	
HDT		159
Hitachi	098	003(LD)
ITT	073	
JBL	068,118	
JVC	067,146,150	
Kenwood	023,062,156	062
Lifetec	169,170,171	173,174,175,176,177,178
Linn	043,148	043
Luxman	099,100,149,152	
Magnavox		046
Marantz	043,148,153	043,044,046
Medion	034,169,170,171	173,174,175,176,177,178
Meridian	148	043
Micromaxx	169,170,171	173,174,175,176,177,178
Microstar	169,170,171	173,174,175,176,177,178
Minowa	013	
Mission	155	
Mitsubishi		005(LD)
NAD	048	005(LD),047,048,049,050
Naim		043
Nakamichi	069	
Niam	148	
Nokia	072	
Noname	032	
Okano	016,017	
Onkyo	024,125	
Palladium	033,090,133	
Palladium/Okano	143	
Panasonic	136,138,141	
Philips	043,101,140,148,153,154	004(LD),006(LD),043,044,045,046
Pioneer	011,119,148	003(LD),005(LD),043,055
PRO2	169,170,171	173,174,175,176,177,178
Quad	148	043

Radiola		006(LD)
Radiotone	087	
Radix		160
Radmor	140,153,154	
Revox	089,120	
Revox/Studer	101,153,154	
Rotel	126,127	
Saba	151	
Samsung	010,074,083,092	065
Sansui		044,046
Sanyo	134,157	
Schneider	012,013,016,019,026,029,032,033,034, 035,043,073,075,086,088,096,105,106, 107,108,109,110,111,113,114,115,143, 144,145,147	
Sharp	132,156	
Sherwood	071,078,079	
Siemens	016,018,019,022,026,029,031,034,043, 075,093,094,095,142	
Sinotec	035	
Sinotec(Pepsi-Dose)	035	
Sony	036,117,133	002(LD),007(LD),008(LD),051, 052,053,056,057,058,059,060,061, 168
Supertech	032	
T+A	025,103	
T+A Elektroakustik	025	
TCM	169,170,171,172	173,174,175,176,177,178
Techmate		163
Technics	082,097,135,138	063
Techsan		164,165
Telefunken		005(LD)
Tensai	102	
Tevion	169,170,171	173,174,175,176,177,178
Thomson	123	064
Thorn		009(LD)
Uher	130	
Universum	010,016,018,084,107	
Video CD		037
Welltech		173,178
Yamaha	030,070,076,122	042,054,066
Others	137	