





THOMSON

ROC56

User manual

  ROC56

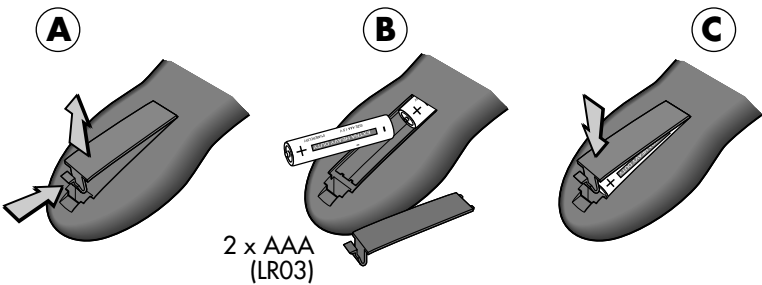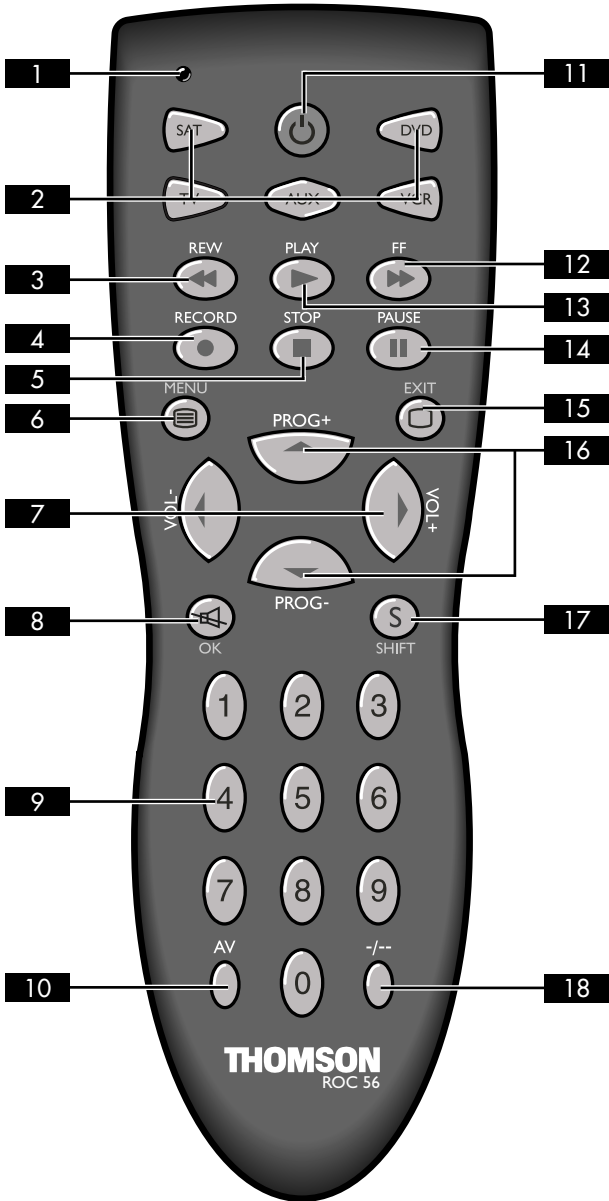

ENGLISH - Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. If you are not using the remote control for a long period of time, remove the batteries. Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

This Universal Remote Control is compatible with most models of infrared-controlled TV sets, video recorders, LVD players, satellite and cable TV receivers.

This remote control has already been programmed so that you can use it to control most of the audio/video products made by the THOMSON group. Before attempting to programme the remote control, install 2 batteries (AAA, not supplied) and try it out by using one of the methods described in this user manual.

Please keep this guide along with the code list (provided separately), so that you can programme your remote control for use with other products.

1 - Description of the key functions

- 1** **Indicator lamp:** the red indicator lamp lights up when any key is pressed.
- 2** **Product keys (TV, VCR, SAT, DVD or AUX):** Used to programme and control different products (TV, satellite receiver, video recorder, DVD player and so on).
- 3** **◀ (REW):** Goes backward or advances forward (**VCRs** and **DVDs**); press with **red** key for fast text function in TV mode.
- 4** **RECORD:** To record, press the **RECORD** key twice.
- 5** **STOP:** Stops **VCR** tape advance; in DVD mode, stops disc play; press with **green** key for fast text function in TV mode.
- 6** **☒/MENU:** Teletext On/Off in TV mode; turns on the menu of the selected products (**SHIFT + MENU**).
- 7** **VOL -, VOL +:** Increases (+) or decreases (-) the volume of the TV set; use to scroll horizontally in any menu (**SHIFT + VOL+/-**).
- 8** **🔊/OK:** Switches the TV sound off or confirms a selection (**SHIFT + 🔊**).
- 9** **Number keys 0 to 9:** these keys have the same functions as those of your original remote and are also used to enter the codes for different products.
- 10** **AV:** For selecting an external source (SCART).
- 11** **⏻:** On/Standby.
- 12** **▶▶ (FF):** fast forward for **VCRs** and **DVDs**; press with **blue** key for fast text function in TV mode.
- 13** **▶ (PLAY):** plays a **VCR** tape or **DVD** disk; press with **yellow** key for fast text function in TV mode.
- 14** **⏸ (PAUSE):** Suspends play and stops on an image; press with **magenta** key for fast text function in TV mode.
- 15** **☐/EXIT:** Teletext Off in TV mode; turns off the menu of the selected product (**SHIFT + EXIT**).
- 16** **PROG+/-:** Programmes zapping button (rapid select); use to scroll vertically through menus (**SHIFT + PROG+/-**).
- 17** **S/SHIFT:** Programmes the remote control (**S**) or activates the secondary key features (**SHIFT**).
- 18** **+/-:** Press this key first before you type in the 2-digit channel number (except for Thomson group products).

2 - Testing the remote control before you programme it

1. Turn on the product you want to control.
2. Press the product key (**2**) that corresponds to the type of product you want to control:
TV: television set **DVD:** DVD player
VCR: video recorder **AUX:** other product
SAT: satellite receiver
3. Point the remote control towards the product and try to turn it off by pressing the **⏻** key. If the product doesn't turn off, you'll need to programme the remote control by one of the methods described in chapter 3.




3 - Programming the remote control

Method A – Fast programming with 1-digit subcode

Before you start programming, you must find the **subcode** of the product to be controlled (Television, VCR, satellite receiver or DVD player).

Refer to the list provided with these instructions, page I of the **codes**.

1. Turn on the product you want to control.
2. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the product key (**2**) that corresponds to the type of product you want to control: **TV**: television set, **VCR**: video recorder, **SAT**: satellite receiver, **DVD**: DVD player, **AUX**: other product.
4. While the indicator is lit, type in the subcode (example: **1** for THOMSON).
5. Point the remote towards the product and try to turn it off by pressing the key **11**.
6. If the product you want to control turns off, press **OK** (**8**) to save the subcode.
7. If the product doesn't turn off, press the **11** key (**11**) repeatedly until the set switches off. Wait approximately one second between key presses to give the red indicator lamp (**1**) enough time to go off and light up again. This will allow you to see whether the product responds or not.
8. Immediately after the product to be controlled turns off, press **OK** (**8**) to save the subcode.

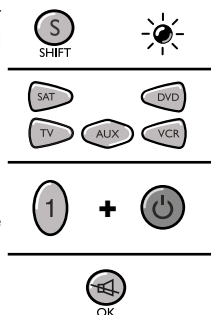

Note:

When programming the **AUX** key (to control any other type of product) begin by entering the code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **AUX** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Checking the programming:


Your product should be ready to receive remote control commands. Check to see that your remote functions correctly by performing the test described on page 4.

Method B – 3-digit codes programming

Before you start programming, you must find the **code** for the product to be controlled (Television, VCR, satellite receiver, cable receiver or DVD player).

Refer to the list provided with these instructions, on page II of the **codes**.

1. Turn on the product you want to control.
2. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the product key (**2**) that corresponds to the type of product you want to control: **TV**: television set, **VCR**: video recorder, **SAT**: satellite receiver, **DVD**: DVD player, **AUX**: other product.
4. While the indicator is lit, enter the 3-digit code proposed for the product to be controlled (example: **036** for THOMSON). The red indicator then goes off if the code is correct or flashes, if the code is not on the list.
5. Point the remote control towards the product and try to turn it off by pressing the **11** key (**11**).
6. If the product doesn't turn off, repeat step 2, using the next 3-digit code in the list. Try to turn off the product by pressing **11** key (**11**) once. Repeat this procedure until one of the 3-digit codes works.

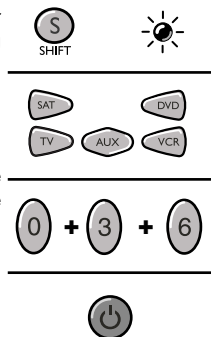


Checking the programming:

Your product should be ready to receive remote control commands. Check to see that your remote functions correctly by performing the test described on page 4.

Method C – Programming by means of code retrieval

If none of the codes work, you may still be able to retrieve the appropriate code.

1. Turn on the product you want to control.
2. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the product key (**2**) that corresponds to the type of product you want to control: **TV**: television set, **VCR**: video recorder, **SAT**: satellite receiver, **DVD**: DVD player, **AUX**: other product.
4. Point the remote control towards the product and try to turn it off by pressing the **⏻** key (**11**).
5. If the product you want to control turns off, press **OK** (**8**) to save the subcode.
6. If the product does not turn off, press the **⏻** key (**11**) until the product switches off (up to 200 times). Wait approximately one second between key presses to give the red indicator lamp (**1**) enough time to go off and light up again. This will allow you to see whether the product responds or not.
7. Immediately upon turning off the product to be controlled, press **OK** (**8**) to save the code.

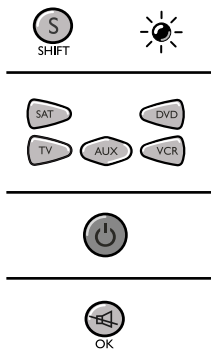

Note:

When programming the **AUX** key (to control any type of product) begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **AUX** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Checking the programming:


Your product should be ready to receive remote control commands.

Check to see that your remote functions correctly by performing the test described on page 4.

Method D - Automatic code search

With this method, the remote scrolls through the full code list by sending an IR signal to the product to be controlled remotely.

1. Check that your product is on. If not, turn it on manually.
2. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Release the **S** key.
4. Press the product key (**2**) corresponding to the type of product you want to control: (for example **TV**).
5. Press **PROG+** (**16**) or standby **⏻** (**11**) or **PLAY** (**▶** -VCR/DVD only). After a few seconds, the remote begins to scroll through the code list at approximately 1 code per second. Press **PROG+** (**16**) once again to slow down the test speed (1 code every 3 seconds). As soon as the product changes channels, press **OK** (**8**) to save the code and stop the remote from scrolling through the list. If you have gone past the code, you can go back to the previous code by pressing **PROG-** (**16**) or **REW** (**◀**) (**3**) as many times as necessary (you can go forward by pressing **⏻** (**11**), **PROG+** (**16**) or **PLAY** (**▶**) (**13**)). As soon as the product responds again, press **OK** (**8**) to save the code.

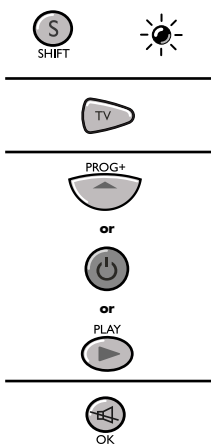

Note:

When programming the **AUX** key (to control any type of product) begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **AUX** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Checking the programming:

Your product should be ready to receive remote control commands.

Check to see that your remote functions correctly by performing the test described on page 4.


Method E – Programming for control of a COMBO (TV-VCR)

To set up the remote control to control a COMBO you first programme the television and then the video recorder subset.

Before you start programming, you must find the **subcode** or **code** of the combo to be controlled (television or video recorder).

Refer to the list supplied with this user manual (see page **subcodes** or **codes**).


1. Turn on the COMBO you want to control.
2. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the **TV** key (**2**), then follow one of the programming methods (**A, B, C** or **D**) described earlier.
4. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
5. Press the **VCR** key (**2**), then follow one of the programming methods (**A, B, C** or **D**) described earlier.

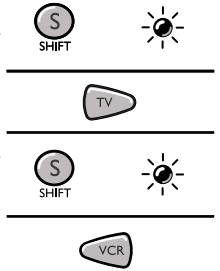

4 – How to retrieve a programmed code

You may want to retrieve the code programmed in the remote control.

1. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
2. Press the product key (**2**) that corresponds to the type of product you want to control:
TV: television set, **VCR**: video recorder, **SAT**: satellite receiver,
DVD: DVD player, **AUX**: other product.
3. Press **S** (**17**) again briefly. The red indicator lamp flashes once.
4. Press the number keys (**0** to **9**) in ascending order until the red indicator lamp (**1**) flashes once.
5. The digit which made the red indicator lamp (**1**) flash, is the first number of the 3-digit code. Please make note of it.
6. Repeat step 4 to find out the two other numbers of the code.
7. When the third number is found, the red indicator lamp (**1**) goes off.

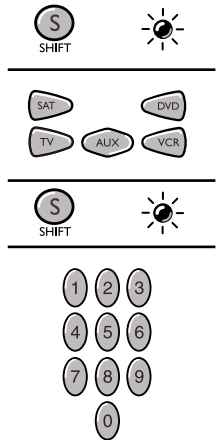

5 – Check the programming

- For a television or a satellite receiver: turn on and off, then try to change channels using **PROG+/1** (**16**) or a digit key (**9**).
- Video recorder: load a tape and then press **PLAY** (**▶**) (**13**).
- DVD player: load a DVD and then press **PLAY** (**▶**) (**13**).

Try other remote control keys to find out which functions you can control. If you think that not all of the keys are active, try the programming **Method B** or **C**.

When you have retrieved the code of your product, make note of it; after battery replacement, you may have to programme the remote control again.

TV CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

VCR CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

SAT CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

DVD CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>


AUX CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

6 - Controlling volume in satellite and cable mode

Since some satellites and cable receivers have no volume control, the **ROC 56** remote control allows you to control the television's volume in satellite or cable mode. For satellite systems with a volume control, you can choose the product that the **MUTE (8)** and **VOL (7)** keys will control: the television volume or the volume of the satellite or cable receiver.

To choose, proceed as follows:


1. Press the **TV** key (**2**) (the remote control must be in TV mode for this procedure).
2. Hold down the **S** key (**17**) until the red indicator lamp (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Release the **S** key (**17**).
4. Press the **MUTE** key (**8**) for around 8 seconds. The indicator light will blink and then go off for about 8 seconds before blinking once more and then staying off.
5. If the remote previously controlled the television volume in **SAT** mode, it will now control the volume of the satellite receiver; if it previously controlled the volume of the satellite receiver, it will now control the television volume.

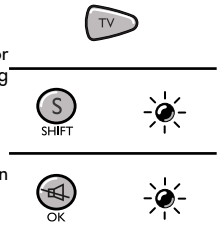

7 - The NAVILIGHT system

The **THOMSON NAVILIGHT** system allows you easy access to the settings of your television (TV) or video recorder (VCR).

1. Switch on the product you want to control.
2. Select the type of product concerned. In the **VCR** position, make sure that the **AV** mode is activated for the TV set (the SCART socket must be selected).
3. Press the **S/SHIFT** key (**17**) once and then press **MENU/MENU** (**6**).
4. To travel through the setting menus, press the **S/SHIFT** key (**17**) and then use the **up, down, left, right** (**7** and **16**). You must press the **S** (**17**) key and arrow key at the same time. You must press the **S** (**17**) key for every arrow key press and release.
5. Validate with **S/SHIFT** (**17**) + **MUTE/OK** (**8**).
6. To exit the menu, press the **S/SHIFT** key (**17**) once and then press **EXIT/EXIT** (**15**).

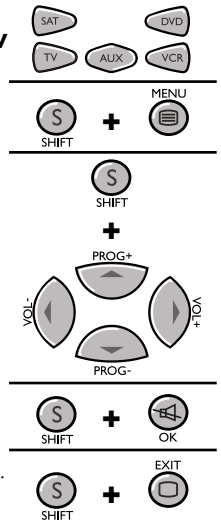

THOMSON HELPLINE

You can contact **THOMSON** by dialling: 0871 712 1312
 (For Great-Britain, all calls will be charged 0,10£ / mn)
 For Switzerland: 0 900 905 980 (0,18CHF / mn)
www.thomson-europe.com

ROC56

Model and serial number

THOMSON Multimedia Sales Europe
46, quai A. Le Gallo
92648 Boulogne Cedex
FRANCE
322 019 464 RCS NANTERRE
<http://www.thomson-europe.com>



© Copyright THOMSON 2005

Dealer's address

GB Subcodes

DK Underkoder

F Sous-codes

SF Alakoodit

D Untercodes

CZ Podkódy

I Sotto-codici

H Alkódok

E Subcódigos

PL Kody pomocnicze

P Sub-códigos

SK Podkódy

NL Subcodes

RU Подкоды

S Underkoder

GR Υποκωδικοί



THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC SHARP TOSHIBA DAEWU
1	2	3	4	5	6	7	8



THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC SHARP TOSHIBA DAEWU
1	2	3	4	5	6	7	8



THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC SHARP TOSHIBA DAEWU
1	2	3	4	5	6	7	8



THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT LUXOR	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	PACE ECHOSTAR
1	2	3	4	5	6	7	8

ROC26 / ROC36 / ROC46 / ROC56

TV codes/Codes TV/TV-Codes/Codici TV/Códigos de TV/Códigos TV/Codes TV/Koder TV/Tv-koder/TV-koodit/Kódy TV/TV kódok/Kódy TV/Kódy TV/Коды ТВ/Κωδικοί Τηλεόρασης

ACME.....	003,044
ADA.....	022
ADC.....	010,003
ACURA.....	009,074
ADMIRAL.....	000,001,002,019,021,053,108
ADYSON.....	003
AGAZI.....	002
AGB.....	123
AHO.....	003,004,009
AHWA.....	087,184
AHAI.....	004,006,008,009,011,051,061,068,069,070,086,133,141,169
AKIBA.....	011
AKITO.....	025
AKURA.....	002,011,071
ALBA.....	003,009,011,027,028,053,062,068,083,162,169,171
ALBIRAL.....	037
ALXDS.....	164
ALLORGAN.....	026,157
ALLSTAR.....	051
AMPLIVISION.....	003
AMSTRAD.....	002,009,011,013,030,068,069,071,074,108,123
ANAM.....	009,065,109
ANGELO.....	009
ANITECH.....	002,009,043,109
ANSONIC.....	009,014
ARCAM DELIA.....	003
ARC EN CIEL.....	045,126,139
ARSTONA.....	051,169
ARTHUR MARTIN.....	158
ASA.....	000,016,017,018,021,110
ASBERG.....	043,051
ASTRA.....	009
ASUKA.....	002,003,011
ATLANTIC.....	003,051,157,169
ATORI.....	009
AUDIOSONIC.....	003,009,011,051,139,157,169
AUDIOTON.....	003
AUSNO.....	043
AUTOVOX.....	000,002,003,043,101,125,157
BAIRD.....	111,139
BANG & OLUFSON.....	000,199
BASIC LINE.....	009,011,051
BASTIDE.....	003
BAUR.....	076,118,132,141,169
BEKO.....	007,034,083
BEON.....	051,169
BEST.....	113
BESTAR.....	051,115
BINATONE.....	003
BLACK DIAMOND.....	171
BLACK STAR.....	129
BLAUPUNKT.....	008,022,100,112,117,135,202
BLUE SKY.....	011
BLUE STAR.....	120
BONDSTEC.....	129
BOOTS.....	003,025
BPL.....	120
BRANDT.....	022,036,045,046,126,127,139
BRON VEGA.....	000,051,169
BRITANNIA.....	003
BRUNOS.....	000,007
BSR.....	026,131
BTC.....	011
BUSH.....	009,011,019,024,025,027,028,051,062,068,107,115,120,131,132,139,167,169,171
CAPSONIC.....	002
CARREFOUR.....	027
CASCADE.....	009
CATHAY.....	051,169
CENTURION.....	051,169
CENTURY.....	000
CGE.....	043,053,129,131
CIMLINE.....	009,028
CITY.....	009
CLARVOX.....	037,169
CLATRONIC.....	002,003,009,011,030,043,051,083,129
CONCORDE.....	009
CONDOR.....	003,051,083,198
CONTEC.....	003,009,027,029,030
CONTINENTAL EDISON.....	022,036,045,046,111,126,139
COSMEL.....	009
CROSLLEY.....	000,043,129,131
CROWN.....	009,043,051,053,083,121,169
CS ELECTRONICS.....	003,011,129
CTC.....	129
CTC CLATRONIC.....	014
CYBERCOM.....	002,009,038,042,044,047,061,063,067,068,087,103,107,115,154,155,156,168,171,175,176,177,181,205,206,207,208,228
CYBERTRON.....	011

DAEWOO.....	003,009,051,058,094,115,191
DANINGHI.....	011
DANSA.....	002,051,169
DANTAX.....	034,088,148,161,169,171
DATSURA.....	121
DAYTON.....	009
DE GRAAF.....	006,019,033
DECCA.....	003,004,025,030,051,123,169
DESMET.....	051,169
DIGITALITY.....	203
DIOL.....	009,051,169
DITS.....	009
DUAL.....	002,003,009,038,042,044,047,061,063,067,068,087,089,103,107,115,125,126,131,139,154,155,156,160,168,171,175,176,177,181,205,206,207,208,228
DUAL-TEC.....	003,009,131
DUMONT.....	000,003,014,017,018
DUX.....	169
DYNATRON.....	051,169
EIBE.....	037,108,157
ELECT.....	000
ELECTRO TECH.....	009
ELECTA.....	120
EUN.....	003,016,018,051,169
ELITE.....	011,051
ELMAN.....	014,131
EDIA.....	009
EMERSON.....	000,127,141
ERRES.....	051,169
ETRON.....	009
EUROFEEL.....	002
EUROLINE.....	088,149,169
EUROMAN.....	002,003,051
EUROPHON.....	003,014,025,051,123,131
EXPERT.....	157
FENNER.....	009,115
FERGUSON.....	035,036,037,050,052,081,095,111,127,163,169
FIDELITY.....	003,019,068,074,095,096
FINLANDIA.....	006,019,110,128
FINLUX.....	000,003,004,014,016,017,018,043,051,061,063,110,123,131,157,167,169
FIRST LINE.....	003,009,026,051,062,129
FISHER.....	000,003,006,018,027,029,040,083,131
FLINT.....	051,148
FORESTONE.....	095
FORNENTI.....	000,001,003,043,125,131,133,169
FORTRESS.....	000,001
FRONTTECH.....	002,009,019,021,068,118,129
FUJITSU.....	004,116,157
FUNAI.....	002,026
GALAXY.....	053,083
GBC.....	009,027,131
GEC.....	003,004,021,041,051,123,132,141,169
GELOSO.....	009,019,131
GENERAL TECHNIC.....	009
GENEXIA.....	011,021,051
GOLDSTAR.....	003,009,012,019,051,084,093,129,131,169,171
GOODMANS.....	002,004,009,027,028,051,068,093,111,115,127,153,169,171
GORENIE.....	083
GPM.....	011
GRAETZ.....	021,141,142
GRANADA.....	003,004,006,019,027,031,040,043,051,054,064,123,127,128,133,138,169
GRANDWIN.....	009,011,120,169
GRUNDIG.....	008,017,043,091,101,114,117,135,136
HAZ.....	228
HAIFA.....	002,003
HAMPTON.....	003
HANSEATIC.....	003,007,009,026,027,051,073,118,131,141,169
HANTAREX.....	009,123
HARWOOD.....	171
HAUPPAUGE.....	193
HCM.....	002,003,009,074,120
HIFOVIX.....	139
HINARI.....	006,009,011,027,043,051,137,169,171
HISAWA.....	011,120,148
HITACHI.....	003,004,016,019,021,023,027,033,041,045,046,047,085,118,123,131,133,138,139,140,141,142,144
HOSHMI.....	011
HORNYPHON.....	051
HUANYU.....	003,115
HYGASHI.....	003
HYPHER.....	003,009,129,131
HYSPON.....	002,003,051,120,169
ICE.....	002,003,009,011,051,068
IMPERSAL.....	021,043,051,053,083,129,131
INDESIT.....	024,101
INDIANA.....	051,169
INGELEN.....	021
INGERSOLL.....	009
INNO HIT.....	003,004,009,011,051,093,123,169
INNOVATION.....	002,009,041,067,068,087,103,107,111,115,154,156,168,171,175,176,177
INTERBUY.....	009,109,129
INTERFUNK.....	000,021,051,129,139,141,169
INTERVISION.....	002,003,014,109
IRRADIO.....	009,011,051,068,169

ROC26 / ROC36 / ROC46 / ROC56

ISUMAI.....	011
ITC.....	003,131
ITS.....	011,051,068,120
ITT.....	009,021,031,061,132,133,141,142,143
ITV.....	009,088,169,171
JEC.....	164
JVC.....	027,051,068,081
KANSUI.....	003,009,011,120
KAWASONIC.....	003
KAWP.....	003
KAPSCH.....	021,157
KARCSCH.....	003,009,016,037,169
KENDO.....	014,019,028,108
KENNEDY.....	131,157
KINGSLEY.....	003
KNEISSEL.....	174
KOLSTER.....	051
KONKA.....	011,047,229
KORPEL.....	051,169
KORTING.....	000
KYODIA.....	009
KTV.....	003
KURO.....	121
KYOTO.....	037
LENCO.....	009
LENDOR.....	003,009
LESA.....	129
LEYCO.....	002,004,026,051,169
LG.....	003,009,012,019,051,084,088,093,119,129,131,149,169,171
LIESENK.....	169
LIFE.....	002,009,061,067,068,087,103,107,111,115,154,156,168,171,175,176,177
LIFETEC.....	002,009,038,042,044,047,061,063,067,068,087,103,107,111,115,154,155, 156,168,171,175,176,177,181,205,206,207,208,228
LOEWE.....	097,098
LOEWE OPTA.....	000,051,169
LOGIK.....	030
LUMA.....	019,141,157,169
LUMATRON.....	002,019,051,074,141,157,169
LUX MAP.....	051
LUXOR.....	003,019,047,077,093,101,132,138,141,196
MAELECTRONIC.....	003,009,016,018,021,036,051,068,109,110,115,139,169
MAGNADYNE.....	000,014,123,129,131,169
MAGNAFON.....	003,014,043,123
MAGNUM.....	002,009,061,067,068,087,103,107,111,115,154,156,168,171,175,176,177
MANDOR.....	002
MANESTH.....	002,003,028,051,169
MARANTZ.....	051,169
MARELLI.....	000
MARK.....	051,169
MATSUI.....	003,004,009,013,019,025,026,027,028,030,051,062,068,091,123,147,148,164, 169,173,180
MATSUSHITA.....	065
MCMICHAEL.....	041
MEDIATOR.....	051,169
MEDION.....	002,009,038,042,044,047,061,063,067,068,087,103,107,115,154,155,156,168, 171,175,176,177,181,205,206,207,208,228
MEMOREX.....	009
MEMPHIS.....	004,009,113
METZ.....	000,075,135,151,152,201
MICROMAXX.....	002,009,038,042,044,047,061,063,067,068,087,103,107,111,115,154,155,156, 168,171,175,176,177,181,205,206,207,208,228
MICROSTAR.....	002,009,038,042,044,047,061,063,067,068,087,103,107,111,115,154,155,156, 168,171,175,176,177,181,205,206,207,208,228
MINERVA.....	017,101,135
MINOKA.....	051
MITSUBISHI.....	000,027,030,051,054,055,060,098,101,135,170,171
MIMAR.....	003,043,073,093,123
MOJION.....	043
MTC.....	132
MULTI SYSTEM.....	169
MULTITECH.....	003,009,014,019,027,043,045,129,131,169
MURPHY.....	003,018,133
NAD.....	141
NARAO.....	099
NAGANS.....	019,108
NATIONAL.....	064,101
NEC.....	027,056,185
NECKERMANN.....	000,003,008,019,022,051,083,118,132,169
NEI.....	051,068,113,169
NESCO.....	129
NEWTECH.....	009,051
NEW WORLD.....	011
NICAMAGIC.....	003
NIKON.....	002,003,004,011,051,113,164,169
NOBLIKO.....	003,014,017,043
NOGAMATIC.....	139
NOKIA.....	021,031,061,063,077,132,133,141,142,143
NORDMENDE.....	000,021,024,036,045,046,051,111,126,127,139
NORDVISION.....	169
OCEANIC.....	021,141,142
OKANO.....	083
ONEAS.....	003
ONWA.....	069
ORBIT.....	051
ORION.....	009,013,026,028,030,051,062,075,095,099,123,142,147,159,169,171
ORMOND.....	171
OSANI.....	002,003,004,011,074,165
OSO.....	011
OSUME.....	004,029
OTTO VERSAND.....	001,003,008,027,051,076,111,118,120,121,131,132,139,141,169
PAEL.....	003
PALLADIUM.....	003,012,083
PANAMA.....	002,003,009,165
PANASONIC.....	021,064,065,067,101,124,141,142,151,152,186,197
PATHE CINEMA.....	003,037,073,131
PATHE MARCONI.....	022,037,045,046,126,139
PAUSA.....	009
PERIOD.....	004
PHILO.....	000,043,053,129,131
PHILHARMONIC.....	003,165
PHILIPS.....	000,003,041,043,051,088,089,095,111,115,131,141,155,169,200,204
PHOENIX.....	000,051,169
PHONOLA.....	000,051,169
PIONEER.....	010,021,036,051,139,145,169
PLANTRON.....	002,051
POPPY.....	009
PRANDON-PRINCE.....	019,123,141
PRECISION.....	003,165
PRIMA.....	009,021
PRINZ.....	047
PROFEX.....	009,043,141
PROFILE.....	171
PROFATRONIC.....	051
PROLINE.....	004,051,062
PROSONIC.....	003,015,042,088,107,161,169,171
PROTECH.....	002,003,009,014,051,113,129,131,132,165,169
PROVISION.....	169,171
PYE.....	051,068,169
PIYI.....	009
QUASAR.....	129
QUELLE.....	002,003,016,017,018,022,026,030,051,076,129,131,135,141,169,171
QUESTA.....	027
RADIODI.....	051,169
RADIOTONE.....	007,051
RADIOMARELLI.....	000,123,129
RADIONETTE.....	016,018
RANK.....	017,027
RAM.....	017
RCA.....	031
REDIFFUSION.....	141
REVOIX.....	051,169
REX.....	002,019,021,108,157
RFT.....	000,007
R-LINE.....	051,169
ROADSTAR.....	002,009,011
ROBOTRON.....	000
RTF.....	000
SABA.....	000,021,036,045,046,058,111,123,126,127,139,141,142
SACCS.....	037
SAISHO.....	002,003,009,013,028,030,095,123
SALORA.....	019,021,031,047,061,093,107,108,118,121,128,131,132,138,141
SAMBERS.....	014,043,123
SAMSUNG.....	002,003,004,009,030,051,083,090,093,104,105,160,165,169,172,192
SANDRA.....	003
SANSUI.....	051
SANYO.....	003,004,006,016,018,027,029,030,031,040,043,073,127,131,160
SBR.....	041,095,169
SCHAUB LORENZ.....	021,141,142
SCHNEIDER.....	003,011,051,068,071,125,131,139,160,169,177
SEG.....	002,003,014,027,043,088,129,131,169
SEISMODYNE.....	000,013,014,021,026,075,123
SELECO.....	019,021,027,108,131,157
SENCORA.....	009
SENTRA.....	164
SHARP.....	001,005,027,029,059,187,188
SHORAI.....	026
SIREM.....	000,014,123,131
SCATEL.....	037
SIEMENS.....	008,022,029,135
SIERRA.....	051
SIESTA.....	160
SILVER.....	027
SINGER.....	000,014,129,131,228
SINDYNE.....	000,013,014,026,028,075,131,169
SKANTIC.....	021,138,196
SKYWORTH.....	228
SOLARIX.....	021,092
SONITRON.....	006,031
SONICO.....	002,003,009,051,169
SONICOR.....	006,021
SONTEC.....	051,160,169
SONY.....	004,009,027,029,030,074,106,127,130,165,182,183
SOUND & VISION.....	011,014
SOUNDWARE.....	051,169
STANDARD.....	003,009,011,051,165
STARLIGHT.....	169

ROC26 / ROC36 / ROC46 / ROC56

STENWAY.....	120
STERN.....	019,021,157
SUNWAL.....	009,026,062
SUNWOOD.....	009,051
SUPERLA.....	003
SUPRETECH.....	118
SUPRA.....	009
SUSUMU.....	011
SUTRON.....	009
SYDNEY.....	003,165
SYSLINE.....	169
TANDBERG.....	026,157
TANDY.....	001,003,004,011,021,133,165
TASHKO.....	003,019,027,041,056,128,165
TATUNG.....	003,004,025,051,123,165,169
TCM.....	002,009,038,042,044,047,061,063,067,068,087,103,107,111,115,154,155,156, 168,171,175,176,177,181,205,206,207,208,228
TEC.....	003,009,129,131,133,165
TECHNICS.....	065
TELEAIVA.....	022,036,045,111,126,139
TELEFUNKEN.....	002,035,036,050,051,052,078,079,101,108,111,126,127,139,163,166,190
TELETECH.....	009,088,113,129,169
TELETON.....	003,118,132,157,165
TEVION.....	002,009,038,042,044,047,061,063,067,068,087,103,107,111,115,154,155,156, 168,171,175,176,177,181,205,206,207,208,228
TENSAI.....	168,011,018,026,051
TESMET.....	051
TEXET.....	003,165
THOMSON.....	002,023,036,045,046,050,051,052,058,101,102,111,126,127,139,163,166,185
THORN.....	004,018,035,037,054,081,095,111,127,141,164,169
TOKAI.....	004,051
TOKYO.....	003
TOMASHI.....	120
TOSHIBA.....	017,027,082,114,164,189
TOWADA.....	021,131
TRIDENT.....	165
TRILUMPH.....	013,082,123
UHER.....	021,043,051,157
ULTRAVOX.....	000,003,014,129,131,133
UNITED.....	088,169,171
UNIVERSUM.....	002,016,018,051,061,083,102,110,122,129,131,169
UNIVOX.....	037
VESTEL.....	019,021,051,083,092,103,129,131,138,169,171,194,195,196
VEJA.....	009,169
VICTOR.....	027,051,065
VIDEOLOGIQUE.....	003,011
VIDEOSAT.....	129
VIDEO SYSTEM.....	051
VISOLA.....	003
VISION.....	051
VISOREX.....	096
VISTAR.....	133
VORTEC.....	051,169
VOYSON.....	000,019,021,043,051,108
WALTHAM.....	003,037,133,138,165
WATSON.....	051,169
WATT RADIO.....	003,014,037,131
WEGA.....	000,027
WELTRUCK.....	051,169
WESTON.....	131
WHARFEDALE.....	099
WHITE WESTINGHOUSE.....	003,014,043,169
YOKO.....	002,003,009,011,051,165,169
YORK.....	011
ZANUSSI.....	019,108,157
BUSH.....	233,245,246,247,248,275,280
CARON.....	250
CEC.....	231,232
CWLINE.....	233,275
CLATRONIC.....	250
COMBITECH.....	248
CONDOR.....	245,250
CROWN.....	245,250,275
CYBERCOM.....	233,248,262,311,319
CYBERMAXX.....	319
DAEWOO.....	245,250,265,274,319
DANSAI.....	275
DANTAX.....	233
DAYTRON.....	245
DE GRAAF.....	257,266
DECCA.....	231,232,257
DIUL.....	232,233,248,257,262,311,319
DUMONT.....	231,257,258,266
ELEN.....	252
ELDA.....	275
EMERSON.....	301
ESC.....	245
ETILKO.....	275
FERGUSON.....	232,259,271,278,281,294,305
FIDELITY.....	231,312
FINLANDIA.....	257,258,266
FINLUX.....	231,232,237,257,258,266,298
FIRST LINE.....	233,256,265,266,275,298
FISHER.....	258,279
FLINT.....	233
FORMENTI-PHONIX.....	257
FRONTTECH.....	250
FUJITSU.....	231
FUNAI.....	231
GALAXY.....	231
GRC.....	250,275
GE.....	257
GELOSO.....	275
GENERAL.....	250
GENERAL TECHNIC.....	233,248,262,311
GOLDHAND.....	275
GOLDSTAR.....	231,256
GOODMANS.....	231,245,250,252,256,259,275,282,283
GRAETZ.....	232,258,264
GRANADA.....	240,257,258,266,271,285
GRANDIN.....	231,245,250,256,275
GRANDING.....	245,257,260,263,270,271,272,273,275,276,286,287,288,290
HAAT.....	233
HANSAVIC.....	256,257
HCM.....	275,288
HINARI.....	233,248,275,288,301
HISWAH.....	233
HITACHI.....	231,232,257,266,268
HYPSON.....	233,275
IMPEGO.....	250
IMPERIAL.....	231
INNOVATION.....	233,248,262,311
INNO HIT.....	245,250,252,275,275
INTERBU.....	256
INTERFLUNK.....	257,258
INTERVISION.....	231
IRERADIO.....	256,275
ITT.....	232,237,258,264,292,293
ITV.....	245,256
JVC.....	232,293,294,295,296,297
KAISUI.....	275
KARCHER.....	257
KENIDO.....	233,237,236,245,250,265,300
KENWOOD.....	252
KORPEL.....	275
LENCO.....	245
LEYCO.....	275
LIFETEC.....	233,248,262,311,319
LG.....	231,256
LOEWE.....	262,267
LOGME OPTA.....	256,257,271
LOSIK.....	252,275
LUMATRON.....	245,274
LUXOR.....	237,258,282,298
MAGNASONIC.....	258
MANESTH.....	265,275
MBRANTZ.....	257,271,282,299
MATSUI.....	233,248,256,301
M ELECTRONIC.....	231
MEDATOR.....	257
MEDION.....	233,248,262,311,319
MEMOREX.....	231,240,256,258,279
MEMPHIS.....	275
NETZ.....	261,262,263,267,271,273,325
MICROMAXX.....	233,248,262,311,319
MICROSTAR.....	233,248,262,311,319
MIGROS.....	231
MINERVA.....	263,271,050

Video recorder codes / Codes Magnitoscopes / Videorecorder-Codes / Códici Videoregistratori / Códigos de Vídeos / Códigos Videogravadores / Codes Videorecorders / Koder Videobandspielare / Videobändspäler-koder / Kuvantallurim koodit / Kódy videorekordéru / Videomagnit kódjai / Kody Magnetowidow / Kódy videorekordérov / Коды Магнитоскопов / Квдікоі Вітвго

AWA.....	230,231,232,233,248
AKAI.....	232,236,237,238,239,300,329
AKIBA.....	275
AKURA.....	232,244,275
ALBA.....	233,245,246,247,248,250,275
ALLORGAN.....	311
AMBASSADOR.....	250
AMSTRAD.....	231,253,254
ANITECH.....	275
ASA.....	256,257
ASUKA.....	231,256,257,275
BAIRD.....	231,232,237,245,258,259
BASIC LINE.....	233,245,250,275
BAUR.....	257,263
BESTAR.....	245,250
BLACK PANTHER LINE.....	245
BLAUPUNKT.....	257,260,261,262,263,271,309
BONDSTEC.....	250
BRANDT.....	303,305
BROWN VEGA.....	264
BROOKSONIC.....	277

ROC26 / ROC36 / ROC46 / ROC56

MITSUBISHI	231,257,289,294,298
MULTITECH	231,250,257,275
MURPHY	231
NATIONAL	260,262
NEC	232,294,299
NECKERMANN	232,257,264,301
NEI	257
NESCO	275
NIKAI	250,302
NOKIA	232,237,240,252,258,264,292,300
NORMENDE	232,293,294,303,305
OCEANIC	231,232,240
OKANO	233,300
ORION	233,234,246,248,283,301,304
ORSON	231
OSAN	231,256,275
OTTO VERSAND	257
PALLADIUM	232,256,271,275,300
PANASONIC	260,261,262,267,314,321,325
PATHE CINEMA	301
PATHE MARCONI	232
PENTAX	266
PERNO	231
PHILCO	299
PHILIPS	235,242,257,271,290,293,315,317,327
PHONOLA	257
PIONEER	257,294
PORTLAND	245,250
PRINZ	231
PROFEX	275
PROLINE	231,288
PROSONIC	233,245
PYE	257
QUARTZ	258
QUELLE	231,257,258,263,264,271,301
RADIOLA	257
REX	232,293
RIT	250,257
ROADSTAR	245,252,256,275
SABA	232,281,293,303,305,324
SAIKHO	233,248,275,301
SALORA	237,258,292,298
SAMSUNG	252,311,312
SAMURAI	250
SANSUI	232,244,294
SANYO	258,279,284
SAVILLE	248
SBR	257
SCHAUB LORENZ	231,232,237,258,264
SCHNEIDER	231,233,245,250,256,257,265,275
SEG	252,275
SELENODYNE	257
SELECO	232
SENTRA	250
SENTRON	275
SHARP	240,241,282,328
SHINTOM	258,275
SHIVAKI	256
SIEMENS	256,258,263,271
SIVA	256
SINUDYNE	257
SOLAWOX	250
SONOKO	245
SONOLOR	240
SONTEC	256
SONY	249,251,255,308,309,310,313,316
STANDARD	245
STRONG	244
SUNKAI	233
SUNSTAR	231
SUNTRONIC	231
SUNWOOD	275
TASHO	233
TANDREBERG	263,301
TASHIRO	231,240
TAIJUNG	231,232,257
TCM	233,248,262,311,319
TEC	250
TECHNICS	260,262
TELEAUNA	232
TELEFUNKEN	232,280,293,294,295,303,305,306,307,323,324
TENOSAL	275
TENSAI	231,256,275
TEVION	233,248,262,311,319
THOMSON	232,247,293,294,295,305,323,324
THORN	232,258,301
Two HD	242,316
TOKAI	256,275
TOKSAL	275
TOSHIBA	232,257,265,293,298,319,320
TOWADA	275
TOWIRA	275
TRIUMPH	301

TVA	250
UHER	256,264
ULTRAVOX	264
UNITECH	252
UNITED QUICK STAR	245
UNIVERSUM	231,237,239,253,256,257,263,271,290
VICTOR	294,295
VIDEO	233,248,262,311
WEIBLACK	256
WHITE WESTINGHOUSE	264
YAMASHI	275
YOKAN	275
YOKO	250,252,256,275

LVD player codes/Codes Platines Laser/LVD-Spieler-Codes/Codici LVD/Códigos de LVD/Códigos leitores de LVD/Codes LVD-spelers/Koder Laserdisc-spelare/LVD-afspiller-koder/LVD-koodit/Kódy LVD přehrávačů/LVD kódok/Kody Odtwarzaczy Płyt Kompaktowych/Kódy LVD prehrávačov/Коды LVD/Κωδικοί LVD

DENON	252
DISCO VISION	291
EIDA	337
GRUNDIG	318
HITACHI	291
MITSUBISHI	318
NAD	318
PHILIPS	319
PIONEER	291,318
RADIOLA	319
SONY	278
TELEFUNKEN	318
THORN	322

DVD player codes/Codes DVD/DVD-Spieler-Codes/Codici DVD/Códigos de DVD/Códigos DVD/Codes DVD/Koder DVD/DVD-koder/DVD-koodit/Kódy DVD přehrávačů/DVD kódok/Kody DVD/Kódy DVD prehrávačov/Коды DVD/Κωδικοί DVD

ACOUSTIC SOLUTIONS	383
AINA	377
AKAI	369
ALBA	350,381,384
ANGSTRAD	350
APEX	357,384,390
A-TREND	347
BUSH	350,381,382,384
BLACK DIAMOND	350
BRANDT	373
CLASSIC	383
CROWN	373
CYBERCOM	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,664
CYBERHOME	347
CYTRON	356
DAEWOO	353,354,355
DENON	364,389
DENVER	381
DMITECH	351
DUAL	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,383,392,664
EIDA	365,382
EMERSON	375
FERGUSON	373
FINLUX	375
FISHER	378
GE	384
GOLDEN SPHERE	341
GOODMANS	373,382
GOLDSTAR	375
GO-VIDEO	367
GRADIENTE	373
GRUNDIG	370,380,385
H & B	343
HARMON/KARDON	395
HAZ	341,342
HITACHI	367,387
INNOVATION	356,371,372,373
INTEGRA	374
JVC	361,662
KENDO	356
KENWOOD	364,393
KLF	384
KOSS	373
LASONIC	341
LECSON	376
LIFE	371,372,373
LIFTECH	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,664
LIMIT	341
LINN	336
LG	375

ROC26 / ROC36 / ROC46 / ROC56

LOEWE.....	370
MAGNAVOX.....	362
MARANTZ.....	375,379
MAITSHI.....	373
MBO.....	396
MAXIM.....	331
MEDION.....	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,664
MEIZ.....	368
MICROMAXX.....	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,664
MICROSOFT.....	399
MICROSTAR.....	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,664
MITEK.....	349
MITSUBISHI.....	350,366
MUSTEK.....	383
NAD.....	375,394
NAKAMICHI.....	398
ONKYO.....	374
ORITRON.....	373
PACIFIC.....	356
PANASONIC.....	364
PHILIPS.....	362,370,379
PHILIPS MAGNAVOX.....	362
PIONEER.....	368
PROSM.....	335
PROLINE.....	373
PROSCAN.....	399
PROSONIC.....	332,349
RCA.....	384,399
REOC.....	341
REX.....	346
SABA.....	373
SALORA.....	375
SAMPO.....	341,386
SAMSUNG.....	311,338,367
SANYO.....	378
SCHNEIDER.....	350,351,352,356,373
SCHWABER.....	349
SEG.....	341,350,392
SHARP.....	371,394
SHERWOOD.....	391
SHINCO.....	384
SKYMASTER.....	382,383
SM ELECTRONIC.....	382,383
SONY.....	363
SYLVANIA.....	339
TCM.....	269,330,334,335,338,340,341,342,343,344,345,352,356,358,371,372,373,664
TEAC.....	341,368,384
TECHNICS.....	364,399
TEVION.....	269,330,334,335,337,338,340,341,342,343,344,345,352,356,358,371,372,373,664
THEIA DIGITAL.....	368
THOMSON.....	359,360,399
TOSHIBA.....	362
UNITED.....	333,348
UNIVERSUM.....	350
WHARFEDALE.....	376
XENIUS.....	358
YAMAHA.....	364,388
YAMAKAWA.....	397
ZENITH.....	375

Cable receiver codes/Codes Récepteurs Câble/Kabelempfänger-Codes/Codici Ricevitori via Cavo/Códigos de Receptores por Cable/Códigos Receptores Cabo/Codes Kabelontvangers/Koder Kabelmottagare/Kabelmodtager-koder/Καπελιεστασσητιμεν κωδιτ/Kódy kabelových přijímačů/Kábeles venőkészülékek kódjai/Kody Odborníkův Televizijí Kablovej/Kódy káblových přijímačů/Kody Кабельных Приемников/Κωδικόι καλωδιακών δεκτών

CABLETIME.....	448,449,450
CABLE AND WIRELESS.....	606
CYDIE CABLEVISION.....	452
CRYPTOVISION.....	458
FILANET CABLECRYPT.....	474
FILANET COMCRYPT.....	474
FOXTEL.....	602
GEZ.....	452
GRUNDIG.....	415,483
JERROLD.....	494,554
MOVIE TIME.....	551
NTL.....	606
OPTUS.....	494
PACE.....	606
PIONEER.....	415,518,521
SCIENTIFIC ATLANTA.....	524,525
STS.....	551
TELE-1.....	474
TELEWEST.....	606
VISIOPASS.....	487

Satellite receiver codes/Codes Récepteurs Satellites/Satellitenempfänger-Codes/Codici Ricevitori Via Satellite/Códigos de Receptores por Satellite/Códigos Receptores Satélites/Codes Satellietontvangers/Koder Satellitmottagare/Satellitmodtager-koder/SAT-koodit/Kódy satelitních tunerů/Műholdas venőkészülékek kódjai/Kody Odborníkův Satelitarných/Kódy satelitních tunerů/Коды Спутниковых Приемников/Κωδικόι δορυφορικών δεκτών

AKAI.....	552
ALBA.....	401,402,404,405,407,482,562
AIDES.....	405,408,409
ALLSAT.....	410,462,552
ALLSONIC.....	408,428
AMPRE.....	422
AMSTRAD.....	415,416,417,419,421,541,555,584
ANKARO.....	408,428
ANTTRON.....	401,407
APOLLO.....	401
ARCON.....	415,422,424,426,463
ARINSTRONG.....	419
ASAT.....	552
AST.....	435
ASTON.....	406,594
ASTRA.....	419,429,431,432,502
ASTRO.....	407,409,428,439,441
AUDOTON.....	407,462
AVIS.....	415,428,432,456
BARCOM.....	424
BEST.....	424,428
BLAUPUNKT.....	439
BOCA.....	419,502,635
BRANDT.....	565,566,567,574
BRAIN WAVE.....	444
BROADCAST.....	443
BT SATELLITE.....	420,574
BUSH.....	402,404,410,446,482,562
CANAL+.....	569
CHANNEL MASTER.....	405
CHAPARRAL.....	507
CHESS.....	547,586
CITYCOM.....	402,459
CLATRONIC.....	444
CLEMENS KAMPHUIS.....	491
CNT.....	409
COLUMBUS.....	477
COMLINK.....	408
COMTECH.....	456
CONDOR.....	428
CONNECTIONS.....	438,454
CONTEC.....	456,459
COSAT.....	462
CROWN.....	419
CYBERCOM.....	412,413,423,428,493,504,511,566,583,586,587,618,619
CYBERWAXX.....	618
DAERYUNG.....	438
DANSAT.....	410
DDC.....	405
DECCA.....	460
DELEGA.....	405
DEW.....	456
DIAMOND.....	461
DISKOPRESS.....	424,454
DITRISTRAD.....	462
DNT.....	438,552
DONG WOO.....	501
DRAKE.....	463,557
DUAL.....	412,413,423,428,493,504,511,566,583,586,587,618,619
ECHOSTAR.....	425,438,464,465,467,481,578,579,580,581,586
ENHELL.....	401,408,417,419
ELEKA.....	409
EIDA.....	401,428,462,552
EMANON.....	401
EMME ESSE.....	428,446,491
EP SAT.....	402
EURODEC.....	603
EUROSAT.....	419
EUROSKY.....	419,428
EUROSPACE.....	468
EUROSTAR.....	419
EVATAR.....	401,407
FERGUSON.....	402,410,446,471,472,473,603
FIDELITY.....	415,417
FINLANDIA.....	402
FINLUX.....	402,429,475,480,487,608
FINNSAT.....	456,603
FORCE.....	535,553,577
FOXTEL.....	602
FRACARRO.....	562
FRANCE SATELLITE/TV.....	477
FREECOM.....	401,489
FTE.....	420,422,496
FUBA.....	401,424,428,431,438,439,477,480,548,552
GALVOS.....	408,428,432,456,462,478,484,535,582,583

ROC26 / ROC36 / ROC46 / ROC56

GALAXY.....	424
GAN.....	419
GOLDSTAR.....	489
GOODING.....	483
GOODMANS.....	402,482,526
GRANADA.....	429
GROTHUSEN.....	401,489
GRUNDIG.....	402,407,436,439,446,483,495,512,550,555,584,602
HANSEATIC.....	504
HANTOR.....	401,444,501
HANURI.....	409
HELIOCOM.....	422
HINARI.....	405
HIRSCHMANN.....	439,487,488,491,522,547,548,558
HISAWA.....	444
HITACHI.....	402,446,537
HOUSTON.....	462
HUTH.....	408,411,419,443,444,456,462,491
HUMAX.....	485,517,582
HYUNDAI.....	486
IMPERIAL.....	482,562
INNOVATION.....	428,493,504,511,583,586,587,618,619
INTERTRONIC.....	419
INTERVISION.....	462
ITI/NOKIA.....	402,429,446,454,487,537,548
JOHANSSON.....	444
JSR.....	462
JVC.....	483
KATHREIN.....	439,441,459,496,498,499,507,549,552,607,617
KOSMOS.....	489,491,496
KR.....	407
KREISELMEYER.....	439
KYOSAR.....	401
LABGEAR.....	513
LASAT.....	409,428,500,501,502,565,566,567
LENCO.....	401,420,489,503
LENG.....	444
LENOX.....	462
LENSON.....	479
LIFE.....	583
LIFESAT.....	412,413,423,428,493,504,511,583,586,587,618,619
LIFETEC.....	412,413,423,428,493,504,511,583,586,587,618,619
LION.....	468
LG.....	489
LORRAINE.....	489
LUPUS.....	428
LUXOR.....	417,429,537,548
LYONHASE.....	603
MACAB.....	603
MANHATTAN.....	402,403,409,446,462,633
MARANTZ.....	552
MASCOM.....	409
MASPRO.....	402,446,471,483,507,558
MATSUI.....	483,574
MB.....	504
MEDIAWAKT.....	419
MEDIASAT.....	432
MEDION.....	412,413,423,428,493,504,511,566,583,586,587,618,619
MEGA.....	552
METRONIC.....	401,407,408,409,424,601,612,613,614,615,632
MIETZ.....	439
MICROMAX.....	412,413,423,428,493,504,511,583,586,587,618,619
MICROSTAR.....	412,413,423,428,493,504,511,583,586,587,618,619
MICRO TECHNOLOGY.....	468
MINERIA.....	439,483
MITSUBISHI.....	402,439,574
MITSUMI.....	502
MORGANS.....	419,502,552
MORGAN STONEY.....	611
MULTICHOICE.....	602
MULTISTAR.....	496,501
MULTITEC.....	584,587
MURATO.....	437,489
NAVEX.....	444
NEC.....	509,510
NEUHAUS.....	432,462,479
NEXTWAVE.....	414,585
NIKKO.....	419
NOKIA.....	402,429,446,454,487,519,530,531,544,548,563,564
NOMEX.....	622
NORDMENDE.....	401,402,405,409,472,549,603
NOVIS.....	444
OCEANIC.....	461,468
OCTAGON.....	401,407,456
OKANO.....	419,491,496
OPTEX.....	459,462
ORBIT.....	435
ORBITTECH.....	401
ORIGO.....	468
OSAT.....	407
OTTO VERSAND.....	439
PACE.....	402,410,439,446,471,482,508,527,555,559,584
PACIFIC.....	461
PALCOM.....	405,431,477,479
PALLADIUM.....	419,483
PALTEC.....	431
PANASONIC.....	402,446,542,555,584
PANDA.....	402,410
PHILIPS.....	402,427,434,436,446,455,483,493,495,508,515,550,552,561,599,600,605
PHOENIX.....	456,482
PHONOTREND.....	408,462,491
PIONEER.....	620
POLSAT.....	603
POLYTRON.....	459
PREDIO.....	444
PREMIERE.....	462,544,564,569
PRESIDENT.....	419
PROFI.....	503
PROMAX.....	402
PROSAT.....	404,405,408,482,562
PROTEK.....	461
PROVISION.....	409
QUADRAL.....	405,408,428
QUELLE.....	417,439
QUIERO.....	603
RADIAL.....	552
RADIO.....	438,630
RAINBOW.....	407
REDIFFUSION.....	510
REDPOINT.....	432
REDSTAR.....	428
RFT.....	408,552
RUEFICH.....	503
SABA.....	404,409,446,468,471,472,543,556,562,565,571,572,573,575
SABRE.....	402
SAGEMI.....	603,604
SAKURA.....	456,482
SALORA.....	429,509,510,527
SAMSUNG.....	401,426
SAT.....	405,415,435,437
SATCOM.....	443,504,523
SATEC.....	446
SATFORD.....	443
SATMASTER.....	443
SATPARTNER.....	401,407,409,444,489,491
SCHNEIDER.....	428,455,511,583,586,587,618,635
SCHWABER.....	411,412,430,433,440,459,498,504,508,516,566,573,575,576,577,582,583,585,587,598,616,631,633,635
SEEMANN.....	419,432,438
SEG.....	401,428,444,504,541,631,634
SELECO.....	462
SIEMENS.....	439
SILVA.....	489
SKARDIN.....	432
SKY DIGITAL.....	555,584
SKYMASTER.....	408,504,546,547,586,587,588,589,590,591,592,621
SKYMAX.....	552
SKYVISION.....	462
SONY.....	418,555,584
SR.....	419,472,502
STARLAND.....	586
STARTRONIC.....	444
STAR TRAK.....	401
STRONG.....	401,407,428,454,489,545,562
SUOMIA.....	419
SUNSTAR.....	419,502,527
TANDBERG.....	603
TANDY.....	407
TANTEC.....	402,446,471,477,479
TATUNG.....	460
TCM.....	412,413,423,428,493,504,511,583,586,587,618,619
TECO.....	419,502
TECHNILAND.....	443
TECHNISAT.....	438,479,528,529,623
TELANOR.....	405
TELASAT.....	504
TELEFUNKEN.....	401,446,560,565,566,567,574
TELEKA.....	407,419,426,438
TELEMASTER.....	409
TELEMAX.....	500
TELESAT.....	504
TELESTAR.....	479
TELEVES.....	402,610,611
TELEWENDE.....	462
TEVION.....	412,413,423,428,493,504,511,566,583,586,587,618,619
THOMSON.....	402,472,532,560,568,574,603
THORIS.....	461
THORN.....	402,410,446,471,473
TIDIO.....	459
TONINA.....	402,443,462
TPS.....	570
TRAD.....	435,437,489,533
TRASAT.....	480
TRAX.....	439,479,565,609
TWINNER.....	610,611
UNDEN.....	534

ROC26 / ROC36 / ROC46 / ROC56

UNISAT	419,456
UNITOR	424,444
UNIVERSUM	439,475,483,487
VARIOSTAT	439
VECTOR	468
VENTANA	552
VIA DIGITAL	568
VISOCAT	444,462,586,593,594,595,596,597
VIVANCO	536,624
VORTEC	401,426
VTECH	435,437,515,537
WEWA	402
WEWSAT	402
WINERSAT	444
WISI	402,435,437,438,439,533,538,539,540,597,625,626,627,628,629
WITTENBERG	415
WOODSAT	409
ZEHNDER	409,424,428,437,496,498,541,631,632
ZODIAC	407

AUDIO

CD Players

AUCOM	648
AWA	649,650,651,751
AWAI	653,654,655
ALBA	656
ARCAM	732
BESTAR	659
BSR	660
BUSH	661
CARRERA	663
CONDOR	660
CYBERCOM	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803
DENON	665,666
DUAL	643,648,664,668,675,694,730,742,743,744,745,746,747,798,801,802,803
EMERSON	648,659
ELIA	667,668,693,694,745
FISHER	669
GENEVA	659,671,672,673,675,676,677
GOLDSTAR	663
GOODMANS	678,679
GRUNDIG	680,697,698,732
HARMON KARDON	683
HITACHI	648,685,686
INNOVATION	730,742,743,744,745,746,747
JVC	662,687
KENWOOD	669,688,689,690,762
LFETEC	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803
LINN	732
LG	663
LUXMAN	691
MAGNUM	730,742,743,744,745,746,747
MARANTZ	695,732
MAJSUI	696,732
MEDION	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803
MEMOREX	648,659,677
MERIDIAN	732
MICROMEGA	732
MICROMAXX	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803
MICROSTAR	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803
MISSION	732
NAD	671,733,735,736,737,800
NAM	732
NAKAMICHI	699,700
ONKYO	640,701,702,703,785,792
PANASONIC	661,705
PHILIPS	647,706,732
PHILIPS CDV	640
PIONEER	673,677,753
PROTON	732
QUAD	732
REALISTIC	648,659,675
ROADSTAR	706,708
ROTEL	732
SABA	648
SAE	732
SANSUNG	768
SANSUI	647,709,710,711,732
SCHNEIDER	627,660,732
SCOTT	659
SHARP	672,712,713,714
SHERWOOD	782
SINGER	803
SKYMASTER	778
SONY	671,716,717,718,741,748,749,750
TANDBERG	732
TCI	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803
TEAC	795
TECHNICS	705,721,763,787
TELEFUNKEN	648
TEVON	643,664,668,675,694,730,742,743,744,745,746,747,801,802,803

THEORE & ANWENDUNG	804
THOMSON	642,648
TOSHIBA	722,723
UNIVERSUM	732
VECTOR RESEARCH	663
VICTOR	687
WELLTECH	675,694,744
YAMAHA	712,720,725,771
YORK	708

Audio Amplifiers/Tuners/Receivers

CYBERCOM	641,775
DENON	779,781
DUAL	641,775,797
ELIA	667,668
GRUNDIG	697,698,727
HARMON KARDON	682
KENWOOD	761
LFETEC	641,775
LINN	657
MARANTZ	727
MEDION	641,775
MICROSTAR	641,775
MICROMAXX	641,775
NAD	735,736,737,738,799,800
ONKYO	785,792,793
PHILIPS	646,727
SANSUI	727
SCHNEIDER	791
SHERWOOD	782
SONY	739,740,755,757,758,759,760
TCI	641,775
TEAC	794,796
TECHNICS	764,777,788
TEVON	641,775
THEORE & ANWENDUNG	805
THOMSON	642,766
YAMAHA	724,752,770,771,772

Audio Tape Players

AWA	790
DENON	780
GRUNDIG	729,698
HARMON KARDON	681
KENWOOD	761
MAGNAVOX	729
MARANTZ	729
NAD	799
ONKYO	784
PHILIPS	729
SANSUI	729
SHERWOOD	783
SONY	754,755,756
TEAC	794
TECHNICS	764,777,786
THOMSON	642
YAMAHA	724,772

MINI Systems

AWA	773,774
CYBERCOM	652,658,704,745
DUAL	652,658,704,745,797
ELIA	693,745
LFETEC	652,658,704,745
MEDION	652,658,704,745
MICROSTAR	652,658,704,745
MICROMAXX	652,658,704,745
PIONEER	753
SAMSUNG	768
SHARP	789
SONY	741
TCI	652,658,704,745
TEVON	652,658,704,745
WELLTECH	652

Misc.

Video CD	640
Audio Comb	644
DBS	645
CDR	647,675

Home Automation

HOME AUTOMATION	821
X-10 (NEC)	820