

12•30 Wiring diagrams

Wire colours

Bl Blue	Li Purple
Br Brown	Ws White
Ge Yellow	Or Orange
Gr Grey	Ro Red
Gn Green	Sw Black

Key to items

- 1 Battery
- 2 Ignition switch
- 5 Passenger compartment fusebox
- 6 Terminal 30 junction
- 10 Electrical system control unit
- 17 Battery fuseholder
- 100 Audio unit
- 101 CD changer
- 102 LH front bass speaker
- 103 LH front tweeter
- 104 LH rear bass speaker
- 105 LH rear tweeter
- 106 RH front bass speaker
- 107 RH front tweeter
- 108 RH rear bass speaker
- 109 RH rear tweeter
- 110 ABS hydraulic unit
- a = control unit
- b = LH rear outlet valve
- c = LH rear inlet valve
- d = RH rear inlet valve
- e = RH rear outlet valve
- f = RH front inlet valve
- g = RH front outlet
- h = LH front inlet
- i = LH front outlet
- j = LH front EDL outlet
- k = RH front EDL outlet
- l = LH front EDL change over valve
- m = RH front EDL change over valve
- n = ABS solenoid valve relay
- o = return pump relay
- p = return pump
- 111 LH front wheel sensor
- 112 LH rear wheel sensor
- 113 RH front wheel sensor
- 114 RH rear wheel sensor
- 115 TCS switch

Diagram

