

TV SCART Pin Connections

The following tables identify the various pin functions associated with the TV SCART.

TV SCART CVBS Video

| PIN No | FUNCTION |
|---------------|----------------------------------------|
| 19 | Composite Video Output |
| 17 | Composite Video Output return (ground) |

TV SCART RGB Video

| PIN No | FUNCTION |
|---------------|-------------------------------------|
| 15 | Red component video output |
| 13 | Red component video return (ground) |
| 11 | Green component video output |
| 9 | Green component video return |
| 7 | Blue component video output |
| 5 | Blue component video return |

TV SCART Audio

| PIN No | FUNCTION |
|---------------|----------------------------------------------------|
| 3 | Audio output (left) Mono, Left Stereo channel |
| 1 | Audio output (right) Mono, Right Stereo channel |
| 4 | Audio common return (ground) |

TV SCART Control Signals

| PIN No | FUNCTION |
|---------------|------------------------|
| 8 | 0 V: DSD Standby mode |
| | 6 V: Aspect ratio 16:9 |
| | 12 V: Aspect ratio 4:3 |
| 16 | 0 V: CVBS mode |
| | 1-3 V: RGB mode |
| 14 | Return (ground) |