

VCR SCART Pin Connections

The following tables identify the various pin functions associated with the TV SCART.

VCR SCART CVBS Video

PIN No	FUNCTION
19	Composite video output
17	Composite video output return (ground)
20	Composite video input
18	Composite video input return (ground)

VCR SCART RGB Video

PIN No	FUNCTION
15	S-video chrominance I/O
13	S-video chromonance return (ground)

VCR SCART Audio

PIN No	FUNCTION
3	Audio output (left) Mono, Left Stereo channel
1	Audio output (right) Mono, Right Stereo channel
6	Audio input (left) Mono, Left Stereo channel
2	Audio input (right) Mono, Right Stereo channel
4	Audio common return (ground)

VCR SCART Control Signals

PIN No	FUNCTION
8	0 V: DSD Standby mode
	6 V: Aspect ratio 16:9
	12 V: Aspect ratio 4:3
16	Not used
14	Return (ground)