


08-03

20. Wiring Diagram

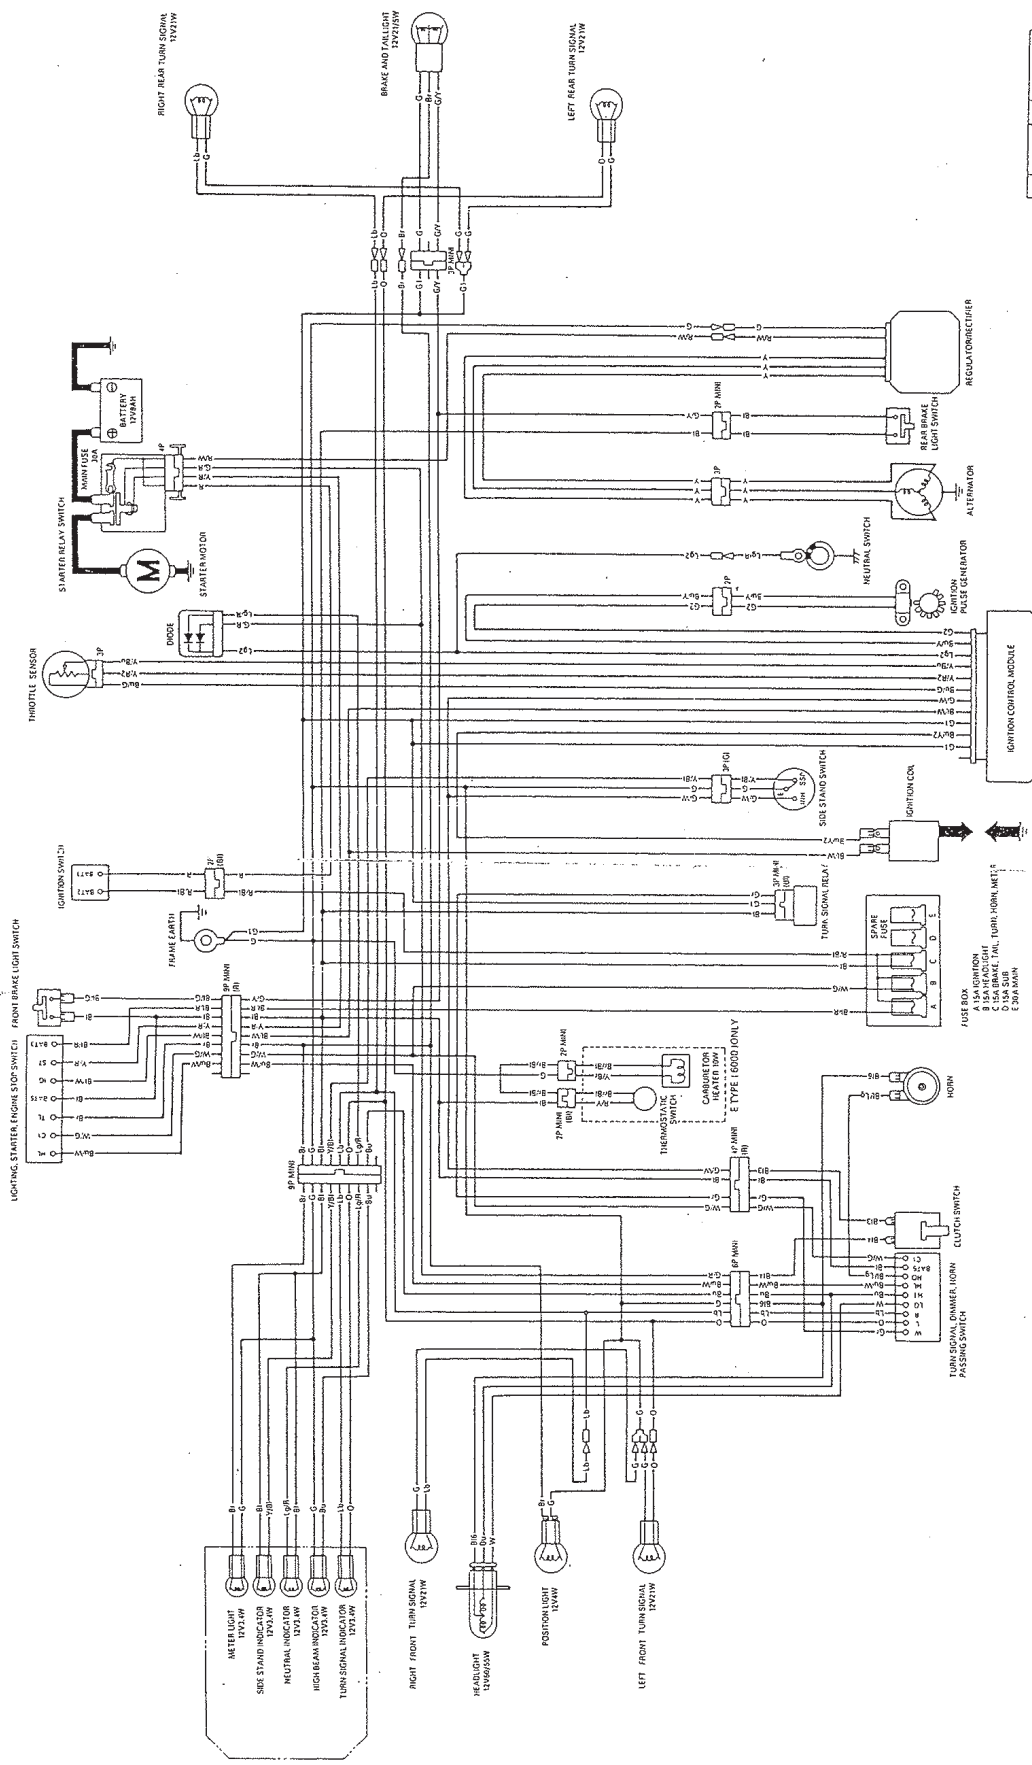

B	BLACK	B	BROWN
Y	YELLOW	O	ORANGE
B _u	BLUE	L _b	LIGHT BLUE
G	GREEN	L _g	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

0030Z-MAK-0100
0030Z-MAK-6000

SWITCH CORRELATION

IGNITION SWITCH	ON	OFF	LOCK	COLOA	R	RR
ENGINE STOP SWITCH	BA13	IG	OFF	COLO	BK	BW
STARTER SWITCH	FREE	PUSH	COLO	BW	YR	
STARTER SWITCH	FREE	PUSH	COLO	BW	YR	
ENGINE STOP SWITCH	BA13	IG	OFF	COLO	BK	BW
LIGHTING SWITCH	BAT1	HL	TL	HL	TL	HL
STARTER SWITCH	FREE	PUSH	COLO	BW	YR	
HORN SWITCH	FREE	PUSH	COLO	BW	YR	
HORN SWITCH	BAT1	NO	HL	LO	HL	LO
TURN SIGNAL SWITCH	L	R	COLO	COLO	L	R
TURN SIGNAL SWITCH	L	R	COLO	COLO	L	R
PASSING SWITCH	FREE	PUSH	COLO	BW	YR	
PASSING SWITCH	FREE	PUSH	COLO	BW	YR	
SIDE STAND SWITCH	UP	DOWN	COLO	YR	G	OW
SIDE STAND SWITCH	UP	DOWN	COLO	YR	G	OW

FUSE BOX

- 1 5A HEADLIGHT
- 2 5A HEADLIGHT
- 3 5A SUB
- 4 5A SUB
- 5 20A MAIN