

Component key for wiring diagrams 1 to 29

Note: Not all the items listed will be fitted to all models

No	Description	No	Description
00200	Alternator with built-in regulator	03319	Horn push button
00500	Battery	03500	Ignition switch
01001	Starter motor	03505	Butterfly valve cut-off switch
01202	Rear front electric window motor	03506	Throttle position switch
01203	Left front electric window motor	03530	Right front electric window switch
01206	Windscreen wiper motor	03531	Left front electric window switch
01207	Rear screen wiper motor	03546	Rear screen wash/wipe switch
01252	Right front door locking motor	03550	Hazard warning lights switch
01253	Left front door locking motor	04010	Steering column switch unit, direction indicators
01254	Right rear door locking motor	04022	Steering column switch unit, headlamps, main beam and dipped, side lights
01255	Left rear door locking motor	04032	Steering column switch unit, windscreen wash/wipe
01400	Windscreen washer pump	04214	Fuel injection system control relay
01401	Rear screen washer pump	04215	Antiskid system failure relay
01420	Electric fuel pump	04225	Radiator fan 2nd speed engagement relay feed
01500	Engine cooling fan	04241	Foglamps relay feed
01502	Injector cooling fan	04260	Electric windows motor relay feed
01504	Ventilation fan	04283	Antiskid system relay
02001	Engine cut-out solenoid on injection pump	04291	Horn relay feed
02010	Fuel injector	04292	Heated rear screen relay feed
02011	Fuel injector	04441	Dim-dip cut-out 04600 Ignition distributor
02012	Fuel injector	04700	Coolant temperature sender unit
02013	Fuel injector	04701	Electronic injection coolant temperature sender unit
02015	Supplementary air valve	04720	Oil pressure sender unit
02210	Accelerator pump outlet cut-out solenoid on carburettor	05008	Right headlamp, main beam and dipped with side light
02215	Supplementary air valve	05009	Left headlamp, main beam and dipped with side light
02400	Ignition coil	05013	Abnormal fuel consumption sensor
02405	Ignition coil with electronic control unit	05015	Right foglamp
02490	Static advance ignition control unit	05016	Left foglamp
02492	Microplex ignition system control unit	05410	Right front direction indicator
03000	Insufficient engine oil pressure switch	05411	Left front direction indicator
03002	Right front door ajar switch	05412	Right front side direction indicator
03003	Left front door ajar switch	05413	Left front side direction indicator
03004	Right rear door ajar switch	05640	Rear number plate lamp
03005	Left rear door ajar switch	05690	Right rear light cluster, sidelight, direction indicator, brake light, rear foglamp
03006	Handbrake 'on' warning switch	05691	Left rear light cluster; side light, direction indicator, brake light, rear foglamp
03007	Brake stop-lamp switch	06000	Centre courtesy light
03008	Reversing light switch	06026	Map reading light
03028	Radiator thermostatic switch	06076	Ideogram fibre optic light
03029	Coolant overheating warning light thermostatic switch	06080	Heater controls light
03034	Injector cooling fan thermostatic switch	06084	Instrument panel light
03035	Accelerator pump outlet cut-out solenoid thermostatic switch	06300	Sidelights warning light
03036	Radiator thermostatic switch with two operating ranges	06305	Main beam headlamps warning light
03053	Map reading light switch	06310	Rear foglamps warning light
03059	Foglamps switch	06311	Foglamps warning light
03060	Rear foglamp switch	06315	Hazard warning lights warning light
03110	Heated rear screen switch	06320	Direction indicators warning light
03114	Ventilation fan switch	06335	Insufficient brake fluid level warning light
03123	Air pressure switch	06336	Handbrake 'on' warning light
03142	Choke warning light switch	06343	Insufficient engine oil pressure warning light
03144	Reset switch	06344	Insufficient brake fluid level warning light
03145	Display switch	06345	Fuel reserve warning light
03305	Right front door open light push button	06350	Coolant overheating warning light
03306	Left front door open light push button		

14•2 Wiring diagrams

Component key for wiring diagrams 1 to 29 (continued)

Note: *Not all the items listed will be fitted to all models*

No	Description	No	Description
06355	Battery charging warning light	08051	Ignition coil condenser
06365	Choke warning light	09000	Dim-dip transformer
06368	Antiskid system failure lamp	09008	Radiator cooling fan 1st speed resistor
06385	Heated rear screen warning light	09100	Heated rear screen
06800	Horn	10022	Cut-off device electronic control unit
06801	Right horn	10500	Control (fuse) box
06802	Left horn	10515	Electronic injection control unit
07000	Coolant level sensor	10571	Central locking control unit
07001	Engine oil level sensor	10584	Antiskid system ECU
07003	Brake fluid level sensor	10586	Pressure modulators
07015	Right front brake pad wear sensor	59000	Cigar lighter
07016	Left front brake pad wear sensor	60000	Instrument panel
07020	Engine speed sensor	60204	Four place fusebox
07021	TDC sensor	70090	General earth
07022	Anti-knock sensor	70091	General earth
07023	Diagnostic socket	70092	Earth plate
07037	Butterfly valve (cut-off) switch	M	Electronic control unit
07050	Fuel gauge		
07051	Instant fuel consumption gauge (econometer)		
07052	Airflow meter		
07060	Idle cut-off device		
07107	Roadwheel speed sensors		
07109	Vacuum switch		
07191	Absolute pressure sensor		
07192	Vacuum switch		
07400	Fuel gauge		
07410	Engine oil temperature gauge		
07415	Coolant temperature gauge		
07420	Engine oil pressure gauge		
07430	Tachometer		
07460	Clock		
07461	Digital clock		

Wire colour codes

A	Light blue
B	White
C	Orange
G	Yellow
H	Grey
L	Blue
M	Brown
N	Black
R	Red
S	Pink
V	Green
Z	Violet

Example of two-colour wire: BN (White/Black)