


SHARP

Important

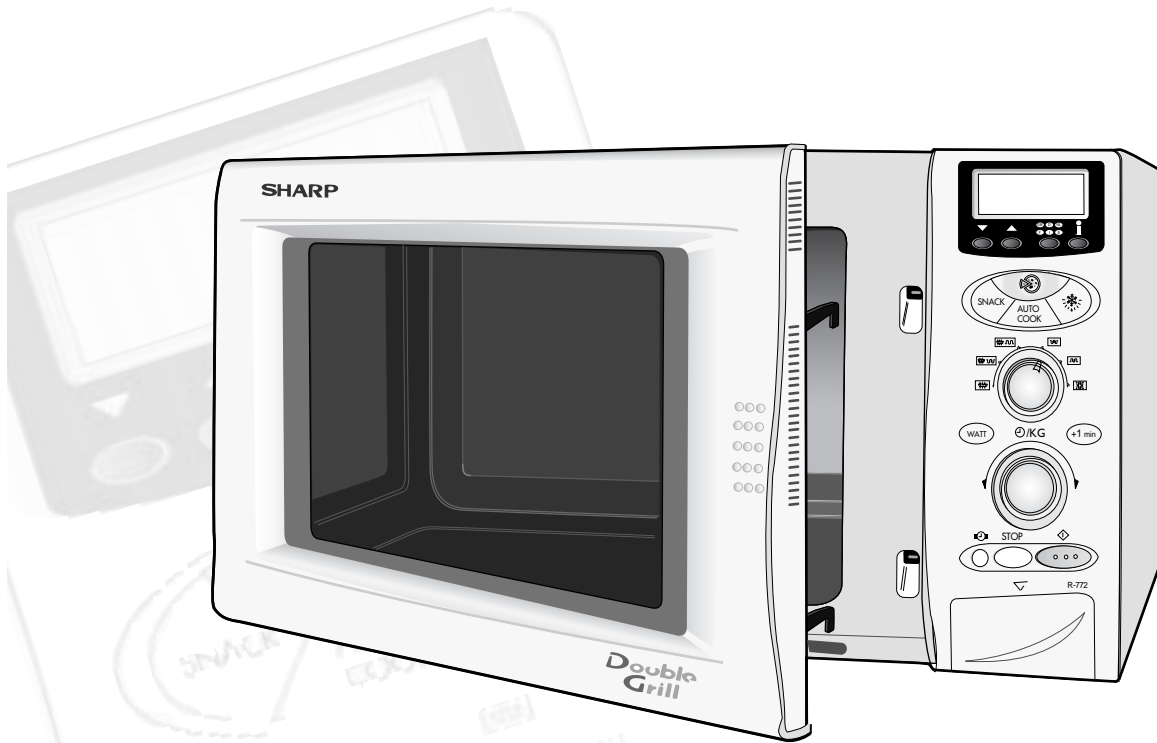

R-772 MICROWAVE OVEN WITH TOP AND BOTTOM GRILL

OPERATION MANUAL WITH COOKBOOK

900W (IEC 705)

ENGLISH



OVEN AND ACCESSORIES2

CONTROL PANEL3

IMPORTANT SAFETY INSTRUCTIONS4-6

INSTALLATION6

BEFORE OPERATION7

SELECTING A LANGUAGE7

USING THE STOP BUTTON8

ENERGY SAVE MODE8

SETTING THE CLOCK9

MICROWAVE POWER LEVELS9

MICROWAVE COOKING10

GRILL COOKING10-11

HEATING WITHOUT FOOD11

DUAL COOKING12

OTHER CONVENIENT FUNCTIONS13-15

AUTOMATIC OPERATION16-17

PIZZA CHART18

SNACK CHART19

AUTO COOK CHART20-21

AUTO DEFROST CHART22

CARE AND CLEANING23

SERVICE CALL CHECK24

SPECIFICATIONS25

SERVICE ADDRESSES26-29


OPERATION MANUAL

This operation manual contains important information which you should read carefully before using your microwave oven.


IMPORTANT: There may be a serious risk to health if this operation manual is not followed or if the oven is modified so that it operates with the door open.



OVEN AND ACCESSORIES

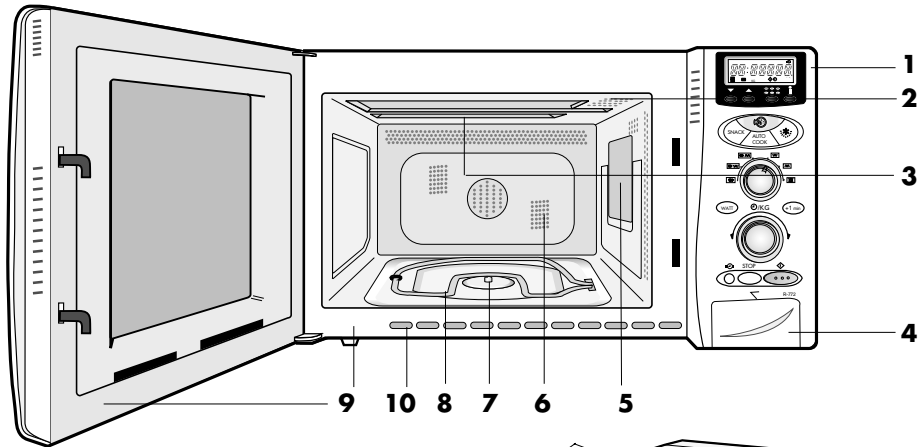

- 1 Control panel
- 2 Oven lamp
- 3 Grill heating element (top grill)
- 4 Door opening button
- 5 Waveguide cover
- 6 Oven cavity
- 7 Turntable motor shaft
- 8 Grill heating element (bottom grill)
- 9 Door seals and sealing surfaces
- 10 Ventilation openings
- 11 Power cord
- 12 Outer cabinet

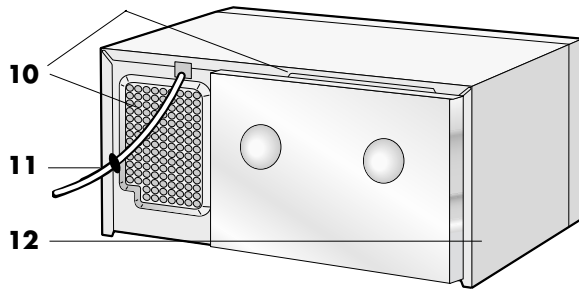

ACCESSORIES:

Check to make sure the following accessories are provided:

- 13 Turntable
- 14 Low Rack
- 15 High Rack


Place the turntable over the turntable motor shaft on the floor of the cavity.

Before first using the turntable and racks, clean with mild soapy water.


Do not cut or scratch the turntable.

WARNING:


The accessories (e.g. turntable) will become very hot during Grill, Dual and Automatic operation (except Auto Defrost) modes. Always use thick oven gloves when removing the food or turntable from the oven to prevent burns.

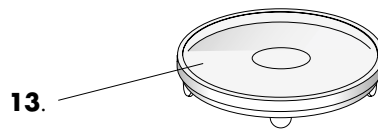

13.

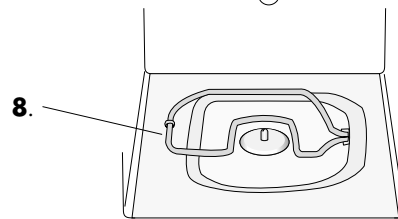

8.

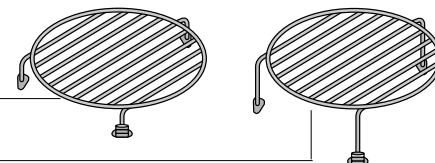


14

15

NOTE:

When you order accessories, please mention the following two items: Part name and model name to your dealer or SHARP authorized service agent.

CONTROL PANEL

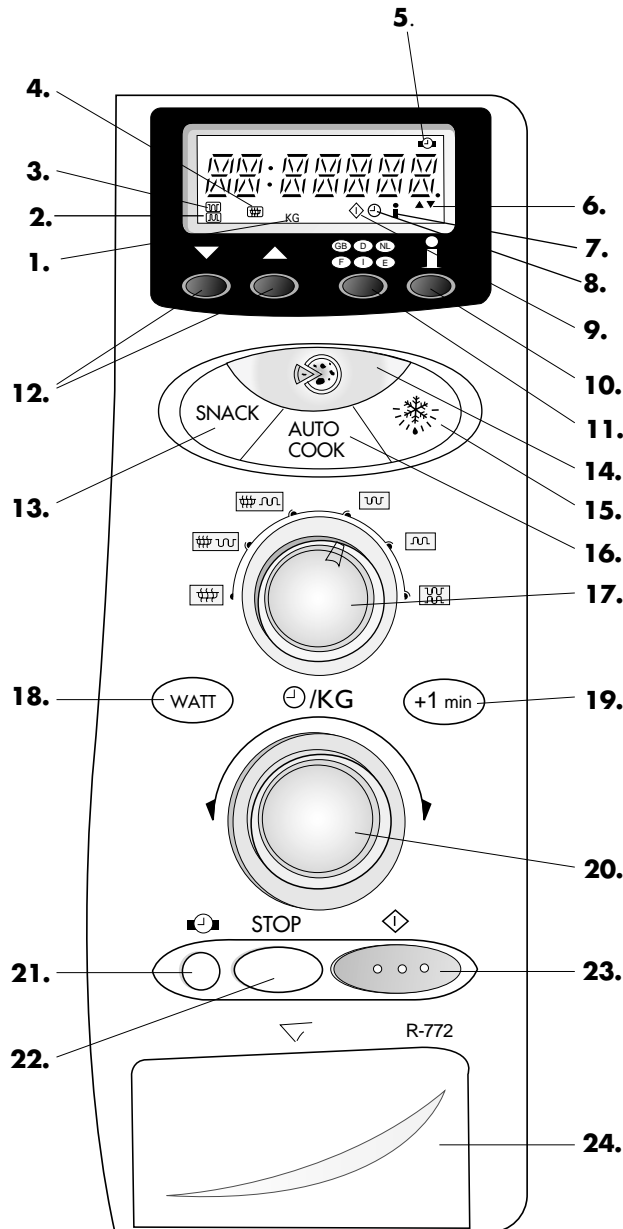

Digital display and indicators:

- 1 **WEIGHT** (kg) indicator
- 2 **BOTTOM GRILL** indicator
- 3 **TOP GRILL** indicator
- 4 **MICROWAVE** indicator
- 5 **CLOCK SET** indicator
- 6 **LESS/MORE** indicator
- 7 **INFORMATION** indicator
- 8 **TIMER** indicator
- 9 **COOKING IN PROGRESS** indicator

Operating buttons:

- 10 **INFORMATION** button
- 11 **LANGUAGE** button
- 12 **LESS/MORE** buttons
- 13 **SNACK** button
- 14 **PIZZA** button
- 15 **AUTO DEFROST** button
- 16 **AUTO COOK** button
- 17 **COOKING MODE** dial

Rotate the dial so that indicator points to appropriate symbol:

- for microwave cooking
- for microwave cooking with TOP GRILL
- for microwave cooking with BOTTOM GRILL
- for TOP GRILL
- for BOTTOM GRILL
- for TOP & BOTTOM GRILLS

- 18 **MICROWAVE POWER LEVEL** button
Press to change the microwave power setting.
- 19 **+ 1 min** button
- 20 **TIME/WEIGHT** dial
Rotate the dial to enter either the cooking/defrosting time or weight of food.
- 21 **CLOCK SETTING** button
- 22 **STOP** button
- 23 **START** button
- 24 **DOOR OPEN** button



IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To avoid the danger of fire

The microwave oven should not be left unattended during operation. Power levels that are too high or cooking times that are too long may overheat foods resulting in a fire.

In cases where the oven is to be installed into kitchen cabinet, the installation frame EBR-4600 (IN)/(B)/(W)/(BK) licensed by SHARP must be used. This is available from your dealer. Refer to the frame installation instructions or ask your dealer for the proper instruction procedure. Only the use of this frame will guarantee the safety and quality of the product. The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency.

The AC power supply must be 230 V, 50 Hz, with a minimum 16 A distribution line fuse, or a minimum 16 A distribution circuit breaker.

It is recommended that a separate circuit serving only this appliance be provided.

Do not place the oven in areas where heat is generated. For example, close to a conventional oven. Do not install the oven in an area of high humidity or where moisture may collect.

Do not store or use the oven outdoors.

If food being heated begins to smoke, DO NOT OPEN THE DOOR. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire.

Use only microwave-safe containers and utensils. See Page X.

Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.

Clean the waveguide cover, the oven cavity and the turntable after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire.

Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings.

Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire.

Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.

To make popcorn, use only special microwave popcorn makers.

Do not store food or any other items inside the oven. Check the settings after you start the oven to ensure the oven is operating as desired.

See the corresponding hints in the cookery book section.

To avoid the possibility of injury

WARNING:

Do not operate the oven if it is damaged or malfunctioning. Check the following before use:

- The door; make sure the door closes properly and ensure it is not misaligned or warped.
- The hinges and safety door latches; check to make sure they are not broken or loose.
- The door seals and sealing surfaces; ensure that they have not been damaged.
- Inside the oven cavity or on the door; make sure there are no dents.
- The power supply cord and plug; ensure that they are not damaged.

Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

Do not operate the oven with the door open or alter the door safety latches in any way.

Do not operate the oven if there is an object between the door seals and sealing surfaces.

Do not allow grease or dirt to build up on the door seals and adjacent parts. Follow instructions for "Care and Cleaning", Page 23.

Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.

To avoid the possibility of electric shock

Under no circumstances should you remove the outer cabinet.

Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent.

Do not immerse the power supply cord or plug in water or any other liquid.

Do not let the power supply cord hang over the edge of a table or work surface.

IMPORTANT SAFETY INSTRUCTIONS



Keep the power supply cord away from heated surfaces, including the rear of the oven.

Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent.

If the power supply cord of this appliance is damaged, it must be replaced with a special cord. The exchange must be made by an authorised SHARP service agent.

To avoid the possibility of explosion and sudden boiling:

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

Never use sealed containers. Remove seals and lids before use. Sealed containers can explode due to a build up of pressure even after the oven has been turned off.

Take care when microwaving liquids. Use a wide-mouthed container to allow bubbles to escape.

Never heat liquids in narrow necked containers such as baby bottles, as this may result in the contents erupting from the container when heated and cause burns.

To prevent sudden eruption of boiling liquid and possible scalding:

1. Stir liquid prior to heating/reheating.
2. It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating.
3. Let liquid stand in the oven at the end of cooking time to prevent delayed eruptive boiling.

Do not cook eggs in their shells, and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven.

Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

To avoid the possibility of burns

Use pot holders or oven gloves when removing food from the oven to prevent burns.

Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns.

To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly.

Temperature of the container is not a true indication of the temperature of the food or drink; always check the food temperature.

Always stand back from the oven door when opening it, to avoid burns from escaping steam and heat.

Slice stuffed baked foods after heating to release steam and avoid burns.

Keep children away from the door to prevent them burning themselves.

Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, ventilation openings, accessories and dishes during **GRILL** mode, **DUAL** mode and **AUTO COOK** operation (except **AUTO DEFROST**) as they will become hot. Before cleaning make sure they are not hot.

To avoid misuse by children

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Do not lean or swing on the oven door. Do not play with the oven or use it as a toy.

Children should be taught all important safety instructions: use of pot holders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.

Other warnings

Never modify the oven in any way.

Do not move the oven while it is in operation.

This oven is for home food preparation only and may only be used for cooking food. It is not suitable for commercial or laboratory use.

To promote trouble-free use of your oven and avoid damage.

Never operate the oven when it is empty except where recommended in the operation manual, see Page 11. Doing so may damage the oven.

When using a browning dish or self-heating material, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable due to heat stress. The preheating time specified in the dish's instructions must not be exceeded.



IMPORTANT SAFETY INSTRUCTIONS

Do not use metal utensils, which reflect microwaves and may cause electrical arcing. Do not put cans in the oven.

Use only the turntable designed for this oven.

Do not place anything on the outer cabinet during operation.

Do not use plastic containers for microwaving if the oven is still hot from using the **GRILL** mode, **DUAL** mode and **AUTO COOK** operation (except **AUTO DEFROST**), because they may melt. Plastic containers must not be used during above modes unless the container manufacturer says they are suitable.

NOTE:

If you are unsure how to connect your oven, please consult an authorised, qualified electrician.


Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the correct electrical connection procedure.

Water vapour or drops may occasionally form on the oven walls or around the door seals and sealing surfaces. This is a normal occurrence and is not an indication of microwave leakage or a malfunction.



INSTALLATION

1. Remove all packing materials from the inside of the oven cavity. Discard the loose polythene sheet from between the door and cavity. Remove the feature sticker, if attached, from the outside of the door.

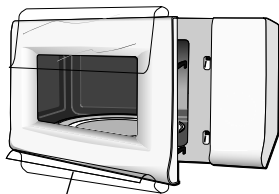


Remove this film

2. Check the oven carefully for any signs of damage.
3. Place the oven on a flat, level surface strong enough to support the oven's weight plus the heaviest item likely to be cooked.

4. The oven door may become hot during cooking. Place or mount the oven so that the bottom of the oven is 85 cm or more above the floor. Keep children away from the door to prevent them burning themselves.

5. Ensure there is a minimum of free space above the oven of 19 cm.

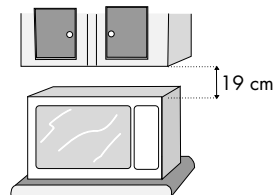

6. Securely connect the plug of the oven to a standard earthed (grounded) household electrical outlet.

BEFORE OPERATION



Your oven has an energy save mode.

1. Plug in the oven. Nothing will appear on the display at this time.
2. Open the door.
The oven display will show "ENERGY SAVE MODE TO GO OUT OF ENERGY SAVE MODE SET LANGUAGE" in 6 languages.
3. Close the door.
4. Press the STOP button. The display will show ".0".
NOTE: At this time English is selected initially. If you keep the energy save mode, go to step 7. If you want to change the language, press the LANGUAGE button, in this case the "Energy Save" mode will be off.
5. Select a language (See below).

6. Set the clock (See page 9).
7. Heat the oven without food (See page 11).

COOKING HINTS:


The oven has an 'Information Display System' which offers you step by step instructions to easily guide you through each feature, and enable you to gain information in your desired language. The oven has an **INFORMATION** button for getting instructions for each button. Indicators will appear in the display, after pressing a button, to inform you of the next operation step.

NOTE: In "ENERGY SAVE" mode the oven will only operate in the English language.

SELECTING A LANGUAGE




Press LANGUAGE button	LANGUAGE
once	ENGLISH
twice	DEUTSCH
3 times	NEDERLANDS
4 times	FRANCAIS
5 times	ITALIAN
6 times	ESPANOL

The oven comes set for English. You can change the language. To change, press the **LANGUAGE** button until the desired language is displayed. Then press the **START**  button.

Example:


Suppose you want to select **Italian**.

 Choose the desired language




x5

 Start the setting



x1

 
Check the display:



NOTE: If you set the language "Energy Save" mode does not work.



 USING THE STOP BUTTON



Use the **STOP** button to:

1. Erase a mistake during programming.
2. Stop the oven temporarily during cooking.
3. Cancel a programme during cooking, press the **STOP** button twice.



ENERGY SAVE MODE

Your oven comes set for the energy save mode with ENGLISH language only.

If you do nothing for 2 minutes after a preceding operation, i.e. plugging in or at the end of cooking, the power will go off automatically. To restore power on, open and then close the door.

If you set the language using the LANGUAGE button or set the clock, energy save mode does not work.

To start energy save mode, follow the instructions below.

Example:

To start the energy save mode, (the current time is 23:35):

Make sure the correct time appears on the display.




Press the **CLOCK SETTING** button.




 
x1



Adjust the display to 0 by rotating the **TIME/WEIGHT** dial.

 
 
 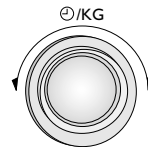


Press **START**  button. The power will be off and the display will show nothing.



x1

Display:




SETTING THE CLOCK




There are two setting modes: 12 hour clock and 24 hour clock.

1. To set the 12 hour clock, press the **CLOCK SETTING** button once, as in Step 1 opposite.
2. To set the 24 hour clock, press the **CLOCK SETTING** button twice, as in Step 2 opposite.

 Step 1.



 Step 2.




Example:

To set the 24 hour clock to 23:35:

Choose the 24 hour clock by pressing the **CLOCK SETTING** button twice.

Set the hours. Rotate the **TIME/WEIGHT** dial clockwise until the correct hour is displayed.

Change from hours to minutes by pressing the **CLOCK SETTING** button once.

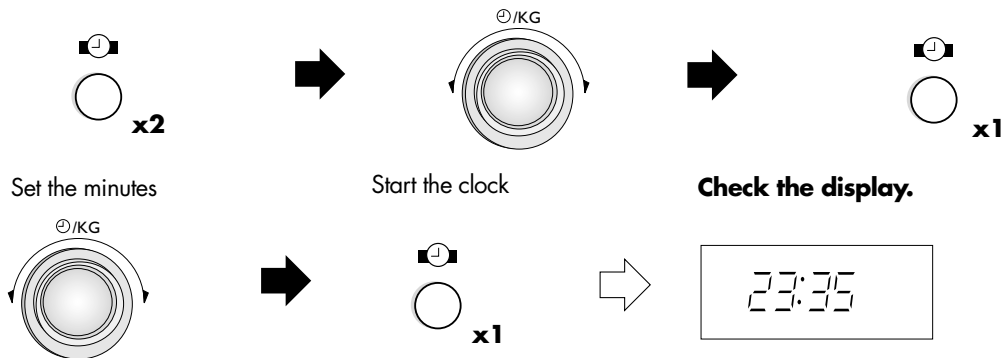

NOTES:

1. You can rotate the **TIME/WEIGHT** dial clockwise or counter clockwise.
2. Press the **STOP** button if you make a mistake during programming.
3. If the oven is in cooking mode and you wish to know the time of day, touch the **CLOCK SETTING** button. As long as your finger is touching the button, the time of day will be displayed.
4. If the electrical power supply to your microwave oven is interrupted, plug in the oven again, then open and close the door. The display will show "ENERGY SAVE MODE TO GO OUT OF
5. ENERGY SAVE MODE SET LANGUAGE" in 6 languages. If this occurs during cooking, the programme will be erased. The time of day will also be erased.
6. When you want to reset the time of day, follow the above example again.
7. If you do not set the clock, press the **STOP** button once. will appear on the display. When the operation of the oven is finished, will reappear on the display instead of the time of day.
7. If you set the clock, energy save mode does not work.

MICROWAVE POWER LEVELS



Your oven has 5 power levels. To choose the power level, follow the advice given in the recipe section.

900 WATT = 100 % output

630 WATT = 70 % output

450 WATT = 50 % output

270 WATT = 30 % output

90 WATT = 10 % output

- To select Microwaving, rotate the **COOKING MODE** dial to the microwave setting
- Select the desired microwave power setting by pressing the **MICROWAVE POWER LEVEL** button.
- If the **MICROWAVE POWER LEVEL** button is pressed once, (100 %) will be displayed. If you miss your desired level, continue pressing the **MICROWAVE POWER LEVEL** button until you reach the level again.
- **If the level is not selected, the level 900 W (100 %) is automatically set.**



MICROWAVE COOKING


Your oven can be programmed for up to 90 minutes. (90.00). The input unit of cooking (defrosting) time varies from 10 seconds to five minutes. It depends on the total length of the cooking (defrosting) time as shown on the table opposite:

Cooking Time:	Increasing unit:
0-5 minutes	10 seconds
5-10 seconds	30 seconds
10-30 minutes	1 minute
30-90 minutes	5 minutes


Example:

Suppose you want to heat soup for 2 minutes and 30 seconds on 630 W microwave power.

Rotate the **COOKING MODE** dial to the microwave setting.

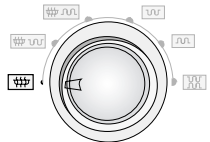


Enter desired cooking time by rotating the **TIME/WEIGHT** dial clockwise.

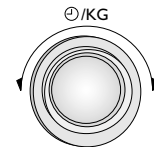


Press the **MICROWAVE POWER LEVEL** button twice for 630 W microwave power.



 Press the **START** button once to start cooking.



Display:

 

NOTES:

- When the door is opened during the cooking process, the cooking time on the digital display stops automatically. The cooking time starts to count down again when the door is closed and the **START** button is pressed.
- If you wish to know the power level during cooking, press the **MICROWAVE POWER LEVEL**

button. As long as your finger is pressing the **MICROWAVE POWER LEVEL** button, the power level will be displayed.

- You can rotate the **TIME/WEIGHT** dial clockwise or counter-clockwise. If you rotate the dial counter-clockwise, the cooking time will decrease from 90 minutes by degrees.



GRILL COOKING

Your oven has 2 grill heating elements, and a combination of 3 grill cooking modes. Select the desired grill mode by rotating the **COOKING MODE** dial to the desired setting.

COOKING MODE DIAL	GRILL HEATING ELEMENT IN USE	DISPLAY
	Top and Bottom Grill together	TOP AND BOTTOM
	Top Grill	TOP GRILL
	Bottom Grill	BOTTOM GRILL


GRILL COOKING




Example:

Suppose you want to cook cheese on toast for 5 minutes using the top grill only: (Place toast on the high rack.)


Rotate the **COOKING MODE** dial to the TOP GRILL setting.

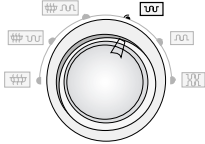



Enter the desired cooking time by rotating the **TIME/WEIGHT** dial clockwise.

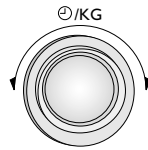

Press the **START** button to start cooking.

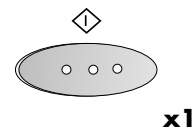

Display:

 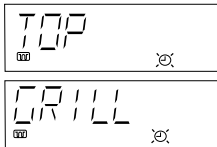

1. The high or low racks are recommended when grilling. Please refer to **AUTO COOK** chart, pages 17-18).
2. You may detect smoke or a burning smell when using the grill for the first time, this is normal and not a sign that the oven is out of order. (Please see heating without food below.)
3. After cooking using TOP GRILL and BOTTOM GRILL the display may show 'NOW COOLING'.

WARNING: The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom grill will become very hot, always use thick oven gloves when removing the food or turntable from the oven to prevent burns.

HEATING WITHOUT FOOD




You may detect smoke or a burning smell when using the grill(s) or dual grill for the first time. This is normal and not a sign that the oven is out of order.


To avoid this problem, when first using the oven, operate both top and bottom grills without food for 20 minutes.

IMPORTANT: During grill operation, to allow smoke or smells to disperse open a window or switch the kitchen ventilation on. Make sure there is no food in the oven.


Rotate the **COOKING MODE** dial to the TOP & BOTTOM GRILL setting.

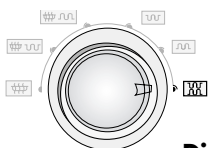


Enter the required heating time. (20 min.)

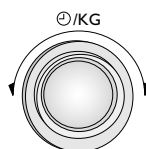

Start cooking by pressing the **START** button.

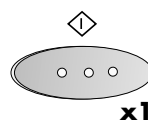

Display:

 

The oven will count down. When the oven has finished cooking, open the door to cool the oven cavity.

 
 

 
 

WARNING:
The oven door, outer cabinet & oven cavity will become hot. Take care to avoid burns when cooling the oven down after operation.

ENGLISH



DUAL COOKING


Your oven has 2 **DUAL** cooking modes to combine the Microwave with the Grill(s). To select the **DUAL** cooking mode, rotate the **COOKING MODE** dial to the desired setting. Generally, dual cooking time shortens the total cooking time.

Setting	COOKING MODE dial	Initial Microwave power	Grill heating element	Display
DUAL 1 		270W	Top grill	
DUAL 2 		270W	Bottom grill	

* If you want to adjust the microwave power, press the **MICROWAVE POWER LEVEL** button. You can select up to 900 W power.

Example:


 
Suppose you want to cook for 20 minutes on DUAL 1, combining 90 W (10 %) with the TOP GRILL:

Rotate the **COOKING MODE** dial to the  DUAL 1 setting, combining microwaving with the TOP GRILL.


Enter the desired cooking time by rotating the **TIME/WEIGHT** dial clockwise.

Press the **MICROWAVE POWER LEVEL** button twice for 90 W microwave power.

Start to cook by pressing the **START**  button.

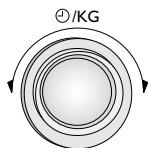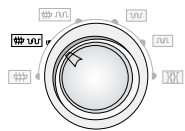


x2

 

x1

 Display:



NOTE: After cooking, the display may show "NOW COOLING".

WARNING: The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom grill will become very hot, always use thick oven gloves when removing the food or turntable from the oven to prevent burns.

OTHER CONVENIENT FUNCTIONS



1. LESS / MORE button.

The **LESS** (▼) and **MORE** (▲) buttons allow you to easily decrease or increase programmed setting times, (for a less well or more well cooked result), used in automatic operations or cooking time while in operation.

a) Changing the pre-programmed time setting.

Example:


Suppose you want to cook 0.9 kg grilled chicken using the **AUTO COOK** button and **MORE** (▲) button.

Select **AUTO COOK** (Grilled Chicken) by pressing the **AUTO COOK** button once.




x1

Enter the amount by rotating the **TIME/WEIGHT** dial clockwise.

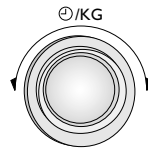


 Choose the desired result (well cooked) by pressing the **MORE** button once.





x1

 Press **START** (◊) button to start cooking.



x1

  Display:



NOTE:

To cancel **LESS** or **MORE**, press the same button again;

To change **MORE** to **LESS** simply press the **LESS** (▼) button;

To change **LESS** to **MORE** simply press the **MORE** (▲) button.

b) Adjusting the heating time while oven is operating.

The cooking time can be decreased or increased in 1 minute steps each time the **LESS** (▼) and **MORE** (▲) buttons are pressed.



OTHER CONVENIENT FUNCTIONS

2. MINUTE PLUS function.


The **+1 min** button allows you to operate the two following functions:

a) 1 minute cooking

You can cook on your desired cooking mode for 1 minute without entering the cooking time.

 

Example:

Suppose you want to cook for 1 minute at 630W microwave power.


Rotate the **COOKING MODE** dial to the  microwave setting.

Press the **WATT** button twice for 630 W microwave power.

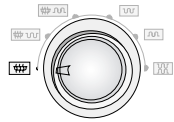


 Press **+1 min** button once to begin cooking.



Display:

 

NOTE:

1. You can use this function for manual cooking only.
2. When the **COOKING MODE** dial is on microwave () and you press the **+1 min** button, the microwave power is always 900 watt. When the **COOKING MODE** dial is on dual (, or ) and you press the **+1 min** button, the microwave power is always 270 watt.
3. To avoid misuse by children the **1 minute cooking** function can be used only within 2 minutes after the preceding operation, ie closing the door or pressing the **STOP** button.

b) Extend the cooking time

You can extend the cooking time in multiples of one minute if the button is pressed while the oven is in operation.

OTHER CONVENIENT FUNCTIONS



3. TO CHECK THE POWER LEVEL

To check the microwave power level during cooking press the **MICROWAVE POWER LEVEL** button.



As long as your finger is pressing the button, the power level will be displayed. The oven continues to count down, although the display shows the power level.

4. INFORMATION button


Each button carries useful information. If you wish to get the information, press the **INFORMATION** button before pressing the desired button.

Example:

Suppose you want to get information about AUTO COOK menu number 1, Grilled chicken:

NOTE:

1. The information message will be repeated twice, and then the display will show the time of day, if set.
2. If you want to cancel the information press the **STOP** button.

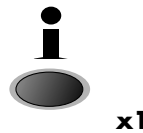








Choose the **INFORMATION** button function.



Press the **AUTO COOK** button once to select the AUTO COOK function. For AC-1 press the button again.




       Check the Display:





AUTOMATIC OPERATION

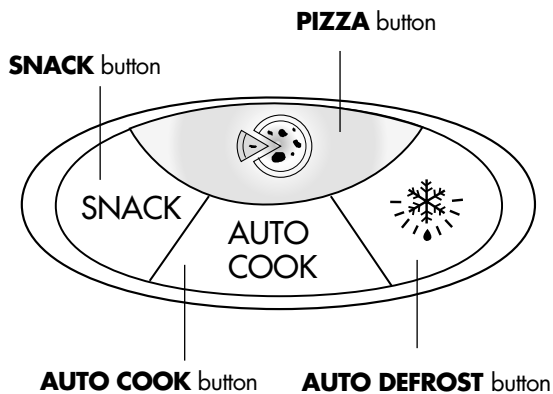

AUTOMATIC OPERATION automatically works out the correct cooking mode and cooking time. You can choose from the 3 SNACK menu, the 3 PIZZA menu, the 4 AUTO COOK menu and the 2 AUTO DEFROST menu.

WARNING:

For SNACK, PIZZA, and AUTO COOK: The oven cavity, door, outer cabinet, turntable, racks, dishes and especially the bottom grill will become very hot. Use thick oven gloves when removing food or the turntable from the oven to prevent burns.


What you need to know when using this automatic function:

1.




PIZZA button

2.

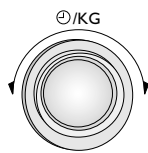


TIME/WEIGHT dial

 
3.



LESS/MORE buttons

 4.



START  button

1. Menu can be input by pressing the **SNACK, PIZZA, AUTO COOK** or **AUTO DEFROST** button until the desired menu number is displayed.


2. The weight of the food can be input by rotating the **TIME/WEIGHT** dial until the desired weight is displayed.

Enter the weight of the food only. Do not include the weight of the container.

For food weighing more or less than weights/quantities given in the cooking chart, cook using manual operation.

3. The programmed cooking times are average times. If you want to alter cooking times pre-programmed in the automatic operations, use the **LESS** (▼) or **MORE** (▲) buttons. For best results follow the cooking chart instructions, pages 15 - 19.

4. To start cooking press **START**  button.

When action is required (e.g. to turn food over) the oven stops, the audible signals sound and the display shows the necessary action. To continue cooking, press the **START**  button.

The final temperature will vary according to the initial temperature. Check food is piping hot after cooking. If necessary, you can extend the cooking time and change the power level.

AUTOMATIC OPERATION





The **SNACK/PIZZA** buttons offer the possibility to cook foods quickly and easily.

Example 1: Suppose you want to cook 200 g of French fried potatoes using the **SNACK** button.


Choose the SNACK menu NO-1 by pressing the **SNACK** button once. Cooking information will appear: The weight indicator will flash on the display:

Enter the weight. 0.2 kg will appear and the cook indicator will flash on the display.

 Press the **START** button to commence cooking.

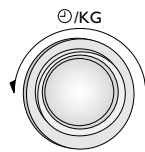

Display:

 



The **AUTO COOK/AUTO DEFROST** buttons offer the possibility to cook foods quickly and easily

Example 2: Suppose you want to cook Grill Skewers (kebabs) weighing 0.4 kg using the **AUTO COOK** button.




Choose the AUTO COOK menu NO-4 by pressing the **AUTO COOK** button 4 times. Cooking information will appear: The weight indicator will flash on the display:

Enter the weight by rotating the **TIME/WEIGHT** dial clockwise.

 Press the **START** button to commence cooking.

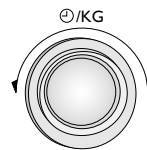

Display:

   



PIZZA CHART

Menu number NO-1.

Frozen Pizza, Frozen Quiche.

Quantity: 0.15 - 0.6 kg Pizza
0.15 - 0.4 kg Quiche
Utensils: Directly on the turntable
Increasing unit: 50 g
Initial food Temp: -18° C, Frozen
Recommended menus: Frozen pizzas, frozen quiches.

Procedure:

- Remove the ready prepared frozen pizza/ quiche from the packaging and place on the turntable. When cooking thick base pizza and ready prepared frozen quiches, press the **MORE (▲)** button before pressing the **PIZZA** button.
- After cooking, place on a plate for serving. For quiche and thick base pizza, allow to stand for 2 minutes.

Menu number NO-2.

Chilled Pizza.

Quantity: 0.15 - 0.45 kg, total weight
Utensils: Directly on the turntable
Increasing unit: 50 g
Initial food Temp: 5° C, Chilled

Procedure:

- Remove the ready prepared chilled pizza from the packaging and place on the turntable.
- After cooking, place on a plate for serving.

Menu number NO-3.

Fresh Pizza, Quiche.

Quantity: 0.7 - 1.0 kg Pizza, 0.7 kg Quiche
Utensils: Directly on the turntable
Increasing unit: 100 g
Initial food Temp: 20° C, Room temperature
Recommended menus: Homemade pizza/Quiche
For quiche use the **MORE (▲)** button

Procedure:

- Prepare the pizza/quiche according to the recipe below.
- Place directly on the turntable.
- After cooking, place on a plate for serving.

PIZZA RECIPE

Ingredients:
300 g Approx. Ready prepared dough
(Ready mix or roll out dough.)
200 g Approx. Tinned tomatoes
150 g Topping as desired
(eg. corn, ham, salami, pineapple.)
50 g Grated cheese
Basil, oregano, thyme
salt, pepper

Procedure:

- Prepare the dough according to the manufacturer's instructions. Roll out to the size of the turntable.
- Lightly grease the turntable and place the pizza base on it and pierce the dough.
- Drain the tomatoes and cut them into pieces. Season the tomatoes with the spices and spread on the dough. Put all other ingredients on the pizza and finally cover with the cheese.
- Cook the pizza with the automatic programme for fresh pizza (NO-3).

QUICHE RECIPE

Ingredients:
200 g Puff pastry (frozen or chilled)
3 Eggs (size M)
200 g Cream or milk
100 g Grated cheese (Emmenthal)
50 g Ham

Procedure:

- Defrost the pastry and roll it out to the size of the turntable, place on and pierce the dough.
- Mix the eggs with the cream and the cheese together. Season with salt and pepper, and pour over the pastry.
- Sprinkle the ham over and cook the quiche with the automatic programme fresh quiche (No 3, **MORE (▲)**)

**Menu number NO-1.****French Fried Potatoes.**

Quantity: 0.2 - 0.4 kg
 Utensils: Directly on the turntable
 Increasing unit: 50 g
 Initial food Temp: -18° C, Frozen
 Recommended
 menus: French fried potatoes, potato
 croquettes.

Procedure:

- Remove the deep-frozen, French-fried potatoes (recommended for conventional ovens) from the package and place them on the turntable.
- For thick French fried potatoes, use the **MORE** (▲) button, for potato croquettes use the **LESS** (▼) button.
- After cooking, remove from the turntable and put on a plate for serving.

Menu number NO-2.**Frozen Baguettes.**

Quantity: 0.15 - 0.5 kg
 Utensils: Directly on the turntable
 Increasing unit: 50 g
 Initial food Temp: -18° C, Frozen
 Recommended
 menus: Baguettes with Pizza topping.
 For ciabatta, use the **LESS** (▼) button.

Procedure:

- Remove deep frozen baguettes from the packaging and place them on the turntable.
- After cooking, place on a plate for serving. (No standing time necessary).

Menu number NO-3.**Fish Fingers, Poultry Meat Pieces.**

Quantity: 0.2 - 0.5 kg
 Utensils: Directly on the turntable
 Increasing unit: 100 g
 Initial food Temp: -18° C, Frozen
 Recommended
 menus: Poultry meat pieces (chicken nuggets), fish fingers.

Procedure:

- Grease the turntable lightly.
- Remove deep frozen fish fingers/chicken nuggets from the packaging, and place them on the turntable.
- After cooking, place on a plate for serving. (No standing time is necessary).



AUTO COOK CHART

Menu number NO-1.

Grilled Chicken

Quantity: 0.9 - 1.8 kg
Utensils: Low Rack
Increasing unit: 100 g
Initial food Temp: 5° C, Chilled
Ingredients: for 1.0kg grilled chicken:
1/2 salt and pepper.
1 tsp paprika, sweet.
2 tbsp oil.

Recommended menus: Grilled chicken

Procedure:

- Mix the ingredients and spread on chicken.
- Pierce the skin of the chicken.
- Place the chicken on the low rack with breast side down.
- When audible signals sound, turn the chicken over.
- After cooking, let the chicken stand for approx. 3 minutes.

Menu number NO-2.

Gratinated Fish Fillet.

Quantity: 0.6 - 1.2 kg
Utensils: Low Rack
Gratin dish
Increasing unit: 100 g
Initial food Temp: 5° C, Chilled
Recommended menus: Fish Gratin

Procedure:

- Prepare fish fillet according to the following recipes.
- Place dish on low rack.
- After cooking, let the food stand covered for approx. 3 minutes.

Recipe 1.

Fish Gratin Italian Style

Ingredients: for 600 g Rose Fish Fillet:
250 g Mozzarella. approx
250 g tomatoes
2 tbsp. anchovy butter
salt and pepper
1 tbsp chopped basil
lemon juice of 1/2 lemon
2 tbsp chopped mixed herbs
75 g grated Gouda (45 % fat)

Procedure:

- Wash the Fish and dry. Sprinkle with lemon juice and salt and grease with the anchovy butter.
- Place in an oval gratin dish (32 cm).
- Sprinkle the gouda over the fish.
- Wash the tomatoes and remove the stalks.
Cut into slices and place on top of the cheese.
- Season with salt, pepper and the mixed herbs.
- Drain the mozzarella, cut into slices and place on the tomatoes. Spread over the basil.
- Place the gratin dish on the low rack and cook on **AUTO COOK** No 2 Gratinated Fish Fillet.

Hint: After cooking remove the fish from the gratin dish and stir in some sauce thickening powder.
Cook again for 1-2 minutes on 900 W power.

Recipe 2.

Gratinated Rose Fish Fillets 'Esterhazy'

Ingredients: for 600 g Rose Fish Fillet:
250 g Leeks
50 g onion
100 g carrot
1 tbsp. butter
salt, pepper and nutmeg
2 tbsp. lemon juice
125 g crème fraîche
100 g grated Gouda (45 % fat)

Procedure:

- Wash the leeks and divide in 2 parts from top to bottom. Cut into thin strips.
- Peel the onions and carrots and cut into thin strips.
- Put the vegetables, butter and spices into a casserole dish and mix well. Cook for 5-6 minutes on 900 W power. Stir once in-between cooking.
- In the meantime wash the fish fillet, dry and sprinkle with lemon juice and salt.
- Mix the Crème fraîche under the vegetables and season again.
- Put half of the vegetables in an oval gratin dish (32 cm). Place the fish on top and cover with the remaining vegetables.
- Spread over the Gouda and place on the low rack. Cook on **AUTO COOK** No 2 Gratinated Fish Fillet.



Recipe 3.

Gratinated Rose Fish - Broccoli.

Ingredients: for 500 g Rose Fish Fillet:
 2 tbsp. lemon juice
 1 tbsp. butter
 2 tbsp flour
 300 ml milk
 chopped dill, pepper and salt
 250 g frozen broccoli
 100 g grated Gouda (45 % fat)

Procedure:

- Wash the fish fillet and dry. Sprinkle with lemon juice and salt.
- Heat together butter and flour in a casserole dish without cover for 1-1¹/₂ mins on 900 W power.
- Add the milk and stir well. Cook again without cover for 3-4 minutes on 900 W power. After cooking stir and season with dill, salt and pepper.
- Defrost the broccoli in a casserole dish for 4-6 mins on 900 W power. Once defrosted, place the broccoli into a gratin dish (32 cm) and put the fish on top and season.
- Pour the sauce over and sprinkle over the cheese
- Place on low rack and cook on **AUTO COOK** No 2 for Gratinated fish fillet.

Menu number NO-3.

Roast Pork.

Quantity: 0.6 - 2.0 kg
 Utensils: Low Rack
 Increasing unit: 100 g
 Initial food Temp: 5° C, Chilled
 Ingredients: for 1000 g rolled lean pork
 1 garlic clove crushed
 2 tbsp oil
 1 tbsp paprika, sweet
 a little cumin powder
 1 tsp salt

Recommended menus: Rolled lean pork.

Procedure:

- Lean roast pork is recommended.
- Mix all ingredients and spread them onto the pork.
- Place the pork on the low rack.
- When audible signal sounds, turn the food over.
- After cooking, let the food stand wrapped in aluminium foil for approx. 10 minutes.

Menu number NO-4.

Grill skewers.

Quantity: 0.2 - 0.8 kg
 Utensils: High Rack
 Increasing unit: 100 g
 Initial food Temp: 5° C, Chilled
 Recommended menus: Coloured meat skewers.

Procedure:

- Prepare the skewers. (You can refer to the attached SHARP cookery book section).
- Put the skewers on the high rack.
- When audible signal sounds, turn the food over.
- After cooking place on a plate and serve.



AUTO DEFROST CHART

Menu number NO-1.

Easy Defrost 1, Poultry

Quantity: 0.9 - 2.0 kg
 Utensils: (see note below)
 Units per press: 100 g
 Initial food Temp: -18° C, Frozen

Procedure:

- Put a plate up side down on the turntable and place the poultry on it.
- When audible signal sounds, turn over. Shield the defrosted parts with aluminium foil if necessary.
- When audible signal sounds, turn over and shield again.
- After defrosting, let stand wrapped in aluminium foil for 30-90 minutes, until thoroughly defrosted.

Menu number NO-1,

Easy defrost 1, Chicken Legs, Steak, Chops, Fish Fillet.

Quantity: 0.2 - 1.0 kg
 Utensils: (see note below.)
 Increasing unit: 100 g
 Initial food Temp: -18° C, Frozen

Procedure:

- Position the food on a plate in a single layer with thinner parts to the centre. If portions are frozen together, try to separate before defrosting.
- When the audible signal sounds, turn the food over and re-arrange. Shield the defrosted parts with aluminium foil if necessary.
- When the audible signal sounds turn the food over, rearrange and shield again.
- After defrosting, let the food stand, wrapped in aluminium foil for 10-30 minutes, until it has thoroughly defrosted.

Menu number NO-2,

Easy defrost 2, Meat joint.

Quantity: 0.6 - 2.0 kg
 Utensils: (see note below.)
 Increasing unit: 100 g
 Initial food Temp: -18° C, Frozen

Procedure:


- Position a plate upside down on the turntable and place the meat on it.
- When the audible signal sounds, turn the meat joint over. Shield the defrosted parts with aluminium foil if necessary.
- When the audible signal sounds, turn the meat joint over and shield again.
- After defrosting, let the food stand, wrapped in aluminium foil for 30-90 minutes, until it has thoroughly defrosted.

NOTE:

- 1 Steaks, Chops, Fish fillets and Chicken legs should be frozen in one layer.
- 2 For shielding the defrosted parts, use small, flat pieces of aluminium foil.
- 3 The poultry should be cooked immediately after defrosting.
- 4 Arrange the food in the oven as shown below:

Chicken legs, Steaks, Chops and Fish fillet.

Poultry and Meat joint.

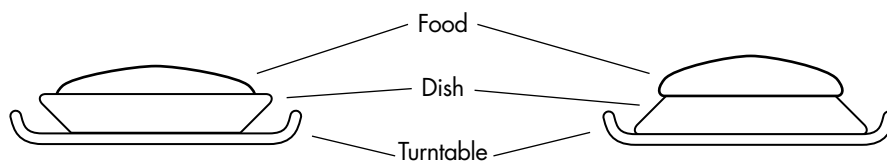



CAUTION: DO NOT USE COMMERCIAL OVEN CLEANERS, ABRASIVE, HARSH CLEANERS OR SCOURING PADS ON ANY PART OF YOUR MICROWAVE OVEN.

WARNING!

After GRILL, DUAL and AUTOMATIC operation (except Auto Defrost) modes, the oven cavity, door, oven cabinet and accessories will become very hot. Before cleaning, make sure they have cooled down.

Oven exterior

The outside of your oven can be cleaned easily with mild soap and water. Make sure the soap is wiped off with a moist cloth, and dry the exterior with a soft towel.

Oven controls

Open the door before cleaning to de-activate the oven controls. Care should be taken when cleaning the oven control. Using a moist cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water. Do not use any sort of chemical or abrasive cleaner.

Oven Interior

1. For cleaning, wipe any splatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use a mild soap and wipe several times with a damp cloth until all residues have been removed. Do not remove the waveguide cover.
2. Make sure that mild soap or water does not penetrate the small vents in the walls which may cause damage to the oven.
3. Do not use spray type cleaners on the oven interior.
4. Heat up your oven regularly by using both heating elements, refer to "Heating without food" on page 11. Remaining food or fat splashed on the oven interior can cause smoke or a bad smell.

Turntable


Remove the turntable. Wash the turntable in mild soapy water. Dry with a soft cloth. The turntable is dishwasher safe.

Low Rack and High Rack

These should be washed in a mild washing up liquid solution and dried. High and Low racks are dishwasher safe.

Door

To remove all trace of dirt, regularly clean both sides of the door, the door seals and adjacent surfaces with a soft, damp cloth.

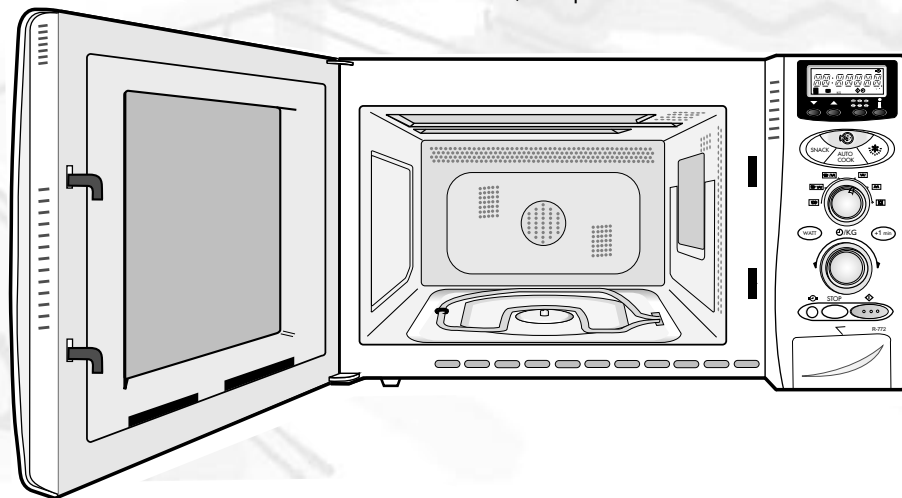



SERVICE CALL CHECK

PLEASE CHECK THE FOLLOWING BEFORE CALLING FOR SERVICE:

1. Power Supply:

Check the power plug is properly connected to a suitable wall outlet.

Check the line fuse/circuit breaker is functioning properly.

2. When the door is opened, does the oven lamp turn on? YES _____ NO _____

3. Place a cup of water (approx. 150 ml) in the oven and close the door securely.

Set the **COOKING MODE** dial to microwave setting.

Programme the oven for one minute on 900 W power and start the oven.

Does the oven lamp come on? YES _____ NO _____

Does the turntable rotate? YES _____ NO _____

NOTE: The turntable turns in either direction.

Does the ventilation work? YES _____ NO _____

(Place your hand over the ventilation openings and check for air flow.)

After 1 minute does the signal sound? YES _____ NO _____

Does the cooking in progress indicator go off? YES _____ NO _____

Is the cup of water warm after the above operation? YES _____ NO _____

4. Set the **COOKING MODE** dial to the TOP & BOTTOM GRILL

setting for 3 minutes. After 3 minutes do both GRILL heating elements become red?

YES _____ NO _____

If you answer "NO" to any of the above questions, call a Service Technician appointed by SHARP and report the results of your check. See inside back cover for details of address.

IMPORTANT: If the display shows nothing even if the power plug is properly connected, the energy save mode should carry on. To release it, open and then close the oven door. See page 9.

NOTE:

- 1.** If you cook the food over the standard time with only the same cooking mode, the power of the oven will lower automatically to avoid overheating. (The microwave power level will be reduced and the grill heating elements will begin to light on and off.)

Cooking mode	Standard time
Microwave 900 W cooking	20 min.
Grill cooking	
TOP GRILL	30 min.
BOTTOM GRILL	45 min.
TOP and BOTTOM GRILL	Top grill - 15 min. Bottom grill - 15 min.
Dual 1	Micro - 20 min. Top grill - 15 min.
Dual 2	Micro - 20 min. Bottom grill - 15 min.

- 2.** After the GRILL (using both heating elements), DUAL and AUTOMATIC OPERATION (except AUTO DEFROST), the cooling fan will run and "NOW COOLING" will appear on the display. Also, when you press the **STOP** button and open the door during the GRILL, DUAL and/or automatic cooking (except AUTO DEFROST), the cooling fan will run; you may, therefore, feel air blowing from the ventilation openings.

SPECIFICATIONS



AC Line Voltage		: 230 V, 50 Hz, single phase
Distribution line fuse/circuit breaker		: Minimum 16 A
AC Power required:	Microwave	: 1.45 KW
	Top Grill	: 1.05 KW
	Bottom Grill	: 0.55 KW
	Triple	: 2.95 KW
Output power:	Microwave	: 900 W (IEC 705)
	Grill	
	Top Grill	: 1.0 KW
	Bottom Grill	: 0.5 KW
Microwave Frequency		: 2450 MHz
Outside Dimensions		: 520 mm (W) x 309 mm (H) x 436 mm (D)
Cavity Dimensions		: 349 mm (W) x 207 mm (H) x 357 mm (D)
Oven Capacity		: 26 litres
Turntable		: ø325 mm, metal
Weight		: approx. 19 kg
Oven lamp		: 25 W/240 - 250 V

This oven complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AS PART OF CONTINUOUS IMPROVEMENT

ÖSTERREICH

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

Manfred Mayer GmbH, Stippackgasse 6, 1234 Wien, Phone: 01-6093120, Fax: 01-6993629 / **MCL-Service GmbH**, Deutschstr. 19, 1232 Wien, Phone: 01-6168800, Fax: 01-6168800-15 / **Karl Rother**, Simmeringer Hauptstr. 11, 1110 Wien, Phone: 01-7498432, Fax: 01-7498432-12 / **Roland Göschl**, Bayerhamerstr. 12c, 5020 Salzburg, Phone: 662-882307, Fax: 662-881926 / **Franz Schuhmann**, Gablonzerweg 18, 4030 Linz, Phone: 732-382280, Fax: 732-382280-8 / **Arnold Moser**, An der Heufurth 28, 6900 Bregenz, Phone: 5574-75777, Fax: 5574-75777 / **Anton Reitmeir**, Leopoldstr. 57, 6020 Innsbruck, Phone: 512-562277, Fax: 512-562277 / **Scheuermann**, Rennsteinerstr. 8, 9500 Villach, Phone: 4242-21174, Fax: 4242-21174 / **Pichler**, Am Wagrain 342, 8055 Graz, Phone: 316-291292, Fax: 316-291292 / **Audio Video Service**, Sonnengasse 13, 9020 Klagenfurt, Phone: 463-43114, Fax: 463-43113

BELGIUM

En cas d'une réclamation concernant une four a micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra.

AVTC, Kleine Winkellaan 54, 1853 Strombeek-Bever, Phone: 02/2674019, Fax: 2679670,

ETS HENROTTE, Rue Du Campinaire 154, 6240 Farcennes, Phone: 071/396290, Fax: 391237

Nouvelle Central Radio (N.G.R) Rue des Joncs 15 L-1818 HOWALD Phone: 00352404078, Fax: 2402085

NEDERLAND

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum.

SHARP ELECTRONICS BENELUX BV - Helpdesk -, Postbus 900, 3990 DW Houten, Telefoon: 09-007427728, Fax: 030-6359621

DEUTSCHLAND

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

01067 Dresden, Gehado Service GmbH, Webergasse 2-4, Tel: 0351-5966254, Fax: -5966244 / **03226 Vetschau**, Bernd Mindach, Juri-Gagarin-Str. 7-9, Tel: 035433-2125 / **04159 Leipzig**, Rudolph Franz, Elli-Voigt-Str. 1, Tel: 0341-581469, Fax: -581469 / **04430 Bienenitz**, OT Gehado Service GmbH Ringstraße 176 Tel: 034205-675/0 Fax: 67544 / **04600 Altenburg**, Mechanik Altenburg, Dostoiewskistr. 17a, Tel: 03447-311102, Fax: -311248 / **06217 Merseburg**, Merseburger Haushaltsg. GmbH, Gotthardstr. 23, Tel: 03461-210290, Fax: -216891 / **06295 Eisleben**, Rudolf Schwarzbach, Hallesche Str. 36, Tel: 03475-3079 / **06618 Naumburg**, Hausgeräte Service, Wenzelstr. 15, Tel: 03445-2016, Fax: -2016 / **06618 Naumburg**, Elektro Schröder, Postring 11-12, Tel: 03445-2960 / **06844 Dessau**, Dessau Elektrik GmbH, Albrechtstr. 116-118, Tel: 0340-213331, Fax: -213332 / **07407 Rudolfstadt**, Elektro Granowski, Emil-Hartmann-Str. 2, Tel: 03672-32123 / **07545 Gera**, ESS GmbH, Amthorstr. 12, Tel: 0365-6112316, Fax: -6112244 / **07607 Hainpitz**, Herrmann&Söhne, Böllschützer Str. 1, Tel: 036691-53490, Fax: -53493 / **07973 Greiz**, Elektro Riederer, Reichenbacher Str. 44d, Tel: 03661-3148, Fax: -2488 / **08280 Aue**, Weichhold GmbH, Juri-Gagarin-Ring 12a, Tel: 03771-552222, Fax: -552255 / **08523 Plauen**, Elektrotechnik Plauen, Tel: 03741-26645, Fax: -26868 / **09126 Chemnitz**, Tele-Service GmbH, Bernsdorfer Str. 213, Tel: 0371-586960, Fax: 0371-55938 / **09221 Neukirchen**, Elektro Walther, Hauptstr. 74, Tel: 0371-37061 / **09246 Pleiße**, ETS Electrotechnische Großh., Zeppelinstr. 8, Tel: 03722-6040, Fax: 03722-604200 / **09328 Lunzenau**, Peter Welsch GmbH, Schulstr. 6, Tel: 037383-6434, Fax: -6600 / **09376 Oelsnitz**, Oelsnitz Elektrotechnik GmbH, Bahnhofstr. 43, Tel: 037298-360, Fax: -36102 / **10178 Berlin**, hatec Handels-Service GmbH, Dircksenstr. 113-117, Tel: 030-2426915, Fax: -2423924 / **10553 Berlin**, Deubel & Höfermann GmbH Wiebestraße 41 Tel: 030-3455055 Fax: 3455056 / **12157 Berlin**, Michael Kittler, Cranachstr. 2, Tel: 030-8554835, Fax: 030-8554835 / **12681 Berlin**, Gehado Service GmbH Wolfenerstraße 36 Tel: 030-936934/0 Fax: 93693444 / **12683 Berlin**, Deubel + Höfermann, Rapsweg 53, Tel: 030-5619112, Fax: -5619112 / **16866 Kyritz**, hatec Handels-Service GmbH, Hamburger Str. 31, Tel: 033971-4137, Fax: -4137 / **17033 Neubrandenburg**, ATV Service GmbH, Woldegker Str. 12, Tel: 0395-587504, Fax: -587518 / **18055 Rostock**, Hetec, Mühlendamm 5, Tel: 0381-36231, Fax: 0381-36231 / **18435 Stralsund**, RDS Haushaltsg. Service, Kedingshäger Str. 78, Tel: 03831-391426, Fax: -390121 / **20357 Hamburg**, Dieter Möller, Schulterblatt 132, Tel: 040-435332, Fax: -4302120 / **20537 Hamburg**, Deubel + Höfermann, Eiffest. 398, Tel: 040-257227, Fax: -2500192 / **23562 Lübeck**, Lutz H. Boenisch, Helmholtzstr. 12, Tel: 0451-51929 / **24116 Kiel**, Jürgen Skop GmbH, Eckernförder Str. 93, Tel: 0431-13038, Fax: -13811 / **24357 Fleckeby**, Kaack Haushaltsg. Service, Südring 14, Tel: 04354-700, Fax: -1311 / **24975 Husby**, Günter Josten, Flensburger Str. 41, Tel: 04634-422, Fax: 723 / **25770 Hemmingstedt**, Dirk Stübner, Koesliner Str. 18, Tel: 0481-64943, Fax: -64764 / **26655 Westerstedde**, Gerhard Ahrenholtz, Südring 37, Tel: 04488-84770, Fax: -847711 / **26802 Moorerland**, Weert Nordbrock, Königstr. 187, Tel: 04954-6654, Fax: -6516 / **27404 Heeslingen**, Helmut Willenbrock, Kirchstr. 9-11, Tel: 04281-1031, Fax: -6467 / **27478 Cuxhaven**, Oskar Wiewandt & Sohn, Am Kanal 5, Tel: 04724-81300, Fax: -813050 / **28207 Bremen**, Hansa Haushaltsg. Service, Neidenburger Str. 20, Tel: 0421-492526, Fax: -440932 / **29439 Lüchow**, Elektro-Kittler, Güldenboden 25, Tel: 05841-3322, Zentrale: 030-8551335 / **30165 Hannover**, Strickling Werkskundendienst, Meelbaumstr. 8, Tel: 0511-3524686, Fax: -3505800 / **33607 Bielefeld**, Voss GmbH, Kuckucksweg 47, Tel: 0521-285058, Fax: -285059 / **34123 Kassel**, von Rappard GmbH, Heinrich-Hertz-Str. 9, Tel: 0561-580950, Fax: -5809570 / **34128 Kassel**, Eckernförder Str. 93, Tel: 0561-61727, Fax: 0561-65470 / **35037 Marburg**, Hans-Georg Fuchs, Wilhelmstr. 16, Tel: 06421-22424, Fax: -27549 / **35415 Pohlheim**, Jung Kundenzentrum, Ludwigstr. 13, Tel: 06403-61131 / **36088 Hünfeld**, Elektro Vogt GmbH, Hauptstr. 22, Tel: 06652-2215, Fax: -5782 / **37671 Hötter**, Elektro-Kühlanlagen Nonn, Krämerstr. 8, Tel: 05271-7959, Fax: -35053 / **38440 Wolfsburg**, G. Gärtner, Grauhorststr. 16, Tel: 05361-31063, Fax: -31272 / **39106 Magdeburg**, Industrie-Elektronik, Kaiser-Otto-Ring 24, Tel: 0391-551402, Fax: -553520 / **40210 Düsseldorf**, Herbert Dahm KG, Bendemannstr. 9, Tel: 0211-35550, Fax: -3555120 / **40476 Düsseldorf**, Horst Leven, Rother Str. 21, Tel: 0211-486025, Fax: -443399 / **41065 Mönchengladbach**, Herbert Hommers, Gutenbergstr. 28, Tel: 02161-603256, Fax: -651951 / **42781 Haan**, Host Kerkühn, Talsir. 8b, Tel: 02129-4466, Fax: -4037 / **44357 Dortmund**, Gehado Service, Freigrafenstr. 23-29, Tel: 0231-937000/0, Fax: 93700044 / **44869 Bochum**, ML Werks-Service GmbH, Ruhrstr. 181, Tel: 02327-77899, Fax: -74692 / **45219 Essen**, R. Drengenberg, Corneliusstr. 39, Tel: 02054-84114 / **46045 Oberhausen**, Elektro Kroppen, Feldmannstr. 76, Tel: 0208-871711, Fax: -876652 / **48165 Münster**, Günter Pfeifer, Rohrkampstr. 23, Tel: 02501-3033 / **49324 Melle**, Borgards GmbH, Plettenberger Str. 50, Tel: 05422-949740, Fax: -949792 / **49492 Westerkappeln**, Elektro Iborg, Goedekingstr. 8, Tel/Fax: 05404-1616 / **50827 Köln**, Hermann F. Esser, Wilhelm-Mauser-Str. 47, Tel: 0221-583006, Fax: -585555 / **51598 Friesenhagen**, Hans Krempel Haustechnik, Mühlenhof 6, Tel: 02734-7377, Fax: -40618 / **52146 Würselen**, Hubert Hamacher, De Gasperstr. 6+10, Tel: 02405-9600, Fax: -2704 / **53757 Sankt Augustin**, HDL Elektro-Kundendienst, Kölnstr. 4, Tel: 02241-334408, Fax: -920334 / **54309 Newel**, Hans Krempel Haustechnik, Römerstr. 22, Tel: 06505-8899 / **55130 Mainz**, Norbert Schwamb, nur telefonische Annahmestelle, Tel: 06131-881070 / **55543 Bad Kreuznach**, Hans Krempel Haustechnik, Industriestr., Tel: 0671-7940, Fax: -79446 / **55569 Monzingen**, Hans Krempel GmbH Jahnstraße 16 Tel: 06751-2841 Fax: 2841 / **56070 Koblenz**, Hans Krempel Haustechnik, August-Horch-Str. 14, Tel: 0261-890938, Fax: 83074 / **57080 Siegen**, Hans Krempel Haustechnik, Gosenbacher Hütte 44, Tel: 0271-354114, Fax: -351408 / **57234 Wilnsdorf**, Elektro Mutschler, Hauptstr. 18, Tel: 02739-3069, Fax: -4699 / **58239 Schwerte**, HHKT Electronica J. Schlütz, Holzener Weg 79, Tel: 02304-82025, Fax: -86360 / **59457 Werl**, Mayer Elektro, Westdahlweg 2, Tel: 02922-3541, Fax: -85382 / **61381 Friedrichsdorf**, Großkücheneinr. Hollmann, Bahnstr. 17a, Tel: 06172-5276, Fax: 75883 / **63150 Heusenstamm**, Heberer Electronic, Goethestr. 10, Tel: 06104-923704, Fax: 923705 / **63739 Aschaffenburg**, Reis Radio Fernsehen, Maximilianstr. 8, Tel: 06021-15177, Fax: -15199 / **65239 Hochheim**, Norbert Schwamb GmbH, Eltvillerstr. 14, Tel: 06146-4085, Fax: -4088 / **65627 Elbrtal**, Rudi Wagner, Am Ohlenrod 10, Tel/Fax: 06436-3444 / **65931 Frankfurt**, Norbert Schwamb, nur telefonische Annahme: 069-371525 / **66117 Saarbrücken**, Hans Krempel Haustechnik, Zinzinger Str. 13, Tel: 0681-500850, Fax: 5008524 / **66280 Sulzbach-Neuweiler**, R. + F. Service Industriestraße Tel: 06897-2370 Fax: 2314 / **67434 Neustadt**, Hans Krempel GmbH Saarländstraße 55 Tel: 06321-83077 Fax: 83077 / **67549 Worms**, Hans Krempel Haustechnik, Müllerstr. 24,

• SERVICE NIEDERLASSUNGEN • ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

Tel: 06241-54224, Fax: - 54225 / **67663 Kaiserslautern**, Hans Krempel Haustechnik, Merkurstr. 6a, Tel: 0631-52078, Fax: - 52079 / **68309 Mannheim**, Hans Krempel Haustechnik, Heppenheimer Str.23, Tel:0621-737978, Fax:722404 / **68309 Mannheim**, Electronic SVC
 Schaaf, Reichenbachstr. 21-23, Tel:0621-727877, Fax:7278750 / **68526 Ladenburg**, Salinger Elektro Service, Brauergasse 2, Tel: 06203-3341, Fax: - 16919 / **70329 Stuttgart**, Elektro Herterich, Fruchstr. 11, Tel: 0711-4201780, Fax: - 426153 / **74564 Crailsheim**, Elektro Reu, Lange Str. 20-22, Tel: 07951-6019, Fax: - 6018 / **75236 Kämpfelbach**, Horst Frei, Goethestr. 19, Tel: 07232-1518, Fax: - 5238 / **76185 Karlsruhe**, Electronic Service Franke, Lotzbeckstr. 9, Tel: 0721-570070, Fax: - 5700736 / **76872 Winden**, Hans Krempel Haustechnik, Hauptstr. 103, Tel: 06349-8571, Fax: - 3390 / **78462 Konstanz**, Elektro Herterich, nur telefonische Annahmestelle: Tel: 07531-27923 / **78737 Fluorn-Winzeln**, Edmund Schneider, Schafbaumstr. 9, Tel: 07402-482, Fax: - 8014 / **79115 Freiburg**, Electronic Service Franke, Wiesentalstr. 13, Tel: 0761-42671-72, Fax: - 42675 / **79650 Schopfheim**, R. Grossmann, Feldbergstr. 21, Tel: 07622-7673, Fax: - 61900 / **80339 München**, Kesel & Schnitt, Schwanthaler Str. 110, Tel: 089-505802, Fax: - 5021596 / **82166 Gräfelfing**, Jung TV Service, Lohenstr. 14, Tel: 089-8545081, Fax: - 852413 / **85095 Denkendorf**, Reinhold Pfeiffer, Michlstr. 3, Tel/Fax: 08466-1319 / **85413 Hörgertshausen**, Elektro Radlmaier, Schloßstr. 7, Tel: 08764-458, Fax: - 1228 / **85609 Aschheim**, Dieter Beise, Waldweg 9a, Tel: 089-9034005, Fax: - 9044859 / **86157 Augsburg**, Johann Haslinger, Stadlberger Str. 67, Tel: 0821-523125, Fax: - 526664 / **87439 Kempten**, Radio Hartmann, Heiligkreuzer Str. 17, Tel: 0831-93231, Fax: 91319 / **89231 Neu-Ulm**, Markus Schneider, Gartenstr. 4, Tel: 0731-85897, Fax: - 74681 / **89564 Nattheim**, Elektro Oechsle GmbH, Fleinheimerstr. 49, Tel: 07321-71442, Fax: - 72341 / **90431 Nürnberg**, Gehado SVC, Dottenheimer Str. 4, Tel:0911-939740, Fax:0911-3263378 / **91126 Schwabach**, Elektro & Elektronik KD, Limbacherstr. 81, Tel: 09122-84135, Fax: - 61677 / **91522 Ansbach**, Elektro Merk GmbH, Am Ring 17, Tel: 0981-89574, Fax: - 86715 / **93102 Pfaffers**, Franz Bernhard, Regensburger Str. 60, Tel: 09481-1505, Fax: - 8124 / **94130 Oberzell**, Elektro Service Schurig, Hameterstr. 31, Tel: 08591-2400, Fax: - 1285 / **96052 Bamberg**, Bernhard Jockl, Aronstr. 2a, Tel: 0951-39332, Fax: - 37423 / **97070 Würzburg**, Wels GmbH, Untere Johannitergasse 16, Tel: 0931-355710, Fax: - 3557121 / **97318 Kitzingen**, K & M Hoffritz GmbH, Herrnstr. 46, Tel: 09321-4221, Fax: - 32185 / **98724 Neuhaus**, DLG Haustechnik GmbH, Eisdorfer Str. 32, Tel: 03679-4651, Fax: - 2169 / **99096 Erfurt**, Ernst Grüsser, Goethestr. 14, Tel: 0361-5626519, Fax: - 5626519 / **99734 Nordhausen**, Südharzer Dienstl. GmbH, Grimmellallee 40, Tel: 03631-2040, Fax: 3654 / **99817 Eisenach**, Blitz Electronic GmbH, Bahnhofstr. 17, Tel: 03691-77291, Fax: 72105

FRANCE

En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes :

A.A.V.I.: 1, Rue du Mont de Terre, 59818 Lesquin Cédex. Tél : 03 20 62 18 98 - Fax : 03 20 86 20 60. Départements desservis : 02, 08, 59, 62, 80 / **ASYSTEC** : P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville. Tél : 01 39 88 80 00 - Fax : 01 34 38 91 20. Départements desservis : 60, 77, 93, 95 / **ATELIER ROUSSEL** : 12, Bld Flandre Dunkerque, 56100 Lorient. Tél : 02 97 83 07 41 - Fax: 02 97 87 02 36. Départements desservis : 22,29,35,44,56 / **C.E.A.T.** : 9, Rue de Venise , 21000 Dijon. Tél : 03 80 66 15 57 - Fax: 03 80 67 12 36. Départements desservis : 10,21,25,39,52,58,71,89 / **C.M.T.S.** : 38, Rue des Ormeaux , 75020 Paris. Tél : 01 43 70 20 00 - Fax: 01 43 70 36 46. Départements desservis : 75,77,78,91,92,93,94,95 / **C.T.E.** : Zone Tilly - 116 rte de Thionville, 57140 Woippy. Tél : 03 87 30 14 14 - Fax: 03 87 30 85 07. Départements desservis : 51,54,55,57,88 / **ELECMA** : 6 Bld Gueidon , 13013 Marseille. Tél : 04 91 06 22 56 - Fax : 04 91 06 22 90. Départements desservis : 13,26,30,34,43,48,83,84 / **ELECTRO SERVICE** : 21 rue de Mulhouse, BP 122, 68313 ILLZACH. Tél : 03 89 62 50 00 - Fax : 03 89 50 80 14. Départements desservis : 67,68,70,90 / **M.E.C.** : 118 Bld Tonnellé, 37020 Tours. Tél : 02 47 77 90 90 - Fax : 02 47 77 90 91. Départements desservis : 18,36,37,41,45,44,49,79,85,86 / **M.R.T.** : 74, Rue Albert Einstein , 72021 Le Mans Cedex. Tél : 02 43 28 52 20 - Fax: 02 43 24 93 81. Départements desservis : 28,53,61,72 / **ROSSIGNOL** : ZL du Brezet Est, 6 rue P. Boulanger,63100 Clermont Ferrand. Tél : 73 91 93 09, Fax:73 92 28 79. Départements desservis : 3, 15, 19, 23, 43, 63 / **SETELEC** : 23, Rue du Chatelet,76420 Bihorel les Rouen. Tél : 35 60 64 39 - Fax:35 59 93 48. Départements desservis : 14,27,50,76 / **S.T.E.** : 3, Chemin de l'Industrie,06110 Le Cannet Rocheville. Tél : 93 46 05 00 - Fax: 93 46 51 18. Départements desservis : 04,06 / **S.T.V.S.** : 18, Rue Benoit Malon,42000 Saint Etienne. Tél : 77 32 74 57, Fax: 77 37 45 29. Départements desservis : 03,07,42,43,63 / **S.T.V.S.** : 10, Chemin Saint-Gobain ,69190 Saint Fons. Tél : 78 70 03 32 - Fax: 78 70 86 61. Départements desservis : 01,38,69,71,73,74 / **TECH SERVICE** : Batiment G-Impasse Boudeville,31100 Toulouse. Tél : 61 44 98 45 - Fax: 62 14 16 13. Départements desservis : 09,11,31,32,33,40,47,64,65,66,81,82 / **TIMO VIDEO** : 29 rue Elisabeth,91330 Yerres. Tél : 69 48 04 80 - Fax: 69 83 36 10. Départements desservis : 28, 45, 77, 89, 912, 94 / **U.N.T.D.** : 1, Rue des Lourdines, 76000 Rouen. Tél : 35 72 28 04 - Fax: 35 73 18 32. Départements desservis : 14,27,50,76

ITALIA

NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP

Microcentro, Via Falloppio 11, 20100 Milano, Phone: 02-26827306 / **Rota G.**, Via Martinella 65, 24020 Torre Boldone (BG), Phone: 035-344492 / **ServiceTVA**, Via Vergnano 59, 25127 Brescia, Phone: 011-2296000, Fax: 011253921 / **Tre Esse**, Via M. Coppino 96/e, 10147 Torino, Phone: 011-2296000, Fax: 011-253921 / **Video Service s.n.c.**, Via Giordano 52/54, 16100 Genova, Phone: 010-6043580 / **Tecnoservice s.n.c.**, Via San Vigilio 64/b-c-d, 39100 Bolzano, Phone: 0471-289062 / **Campi**, Via Noalese 87, 31100 Treviso, Phone: 0422-436245, Fax: 0422-435996 / **Video Service**, Via Vitruvio 11, 37100 Verona, Phone: 045-566299, Fax: 045-573865 / **Video Hi-fi**, Via Longhi 16 a/b, 40128 Bologna, Phone: 051-360986, Fax: 051-366863 / **Aerre Digit**, Via Marbellini 10/12, 50127 Firenze, Phone: 055-410874, Fax: 055-411490 / **Saec di Coppa**, Via Rinchiostra Nord 34, 54100 Massa, Phone: 0585-251724, Fax: 0585-791177 / **Tecniconsult**, Via Mad. Alta 185, 06100Perugia, Phone: 075-5003089 / **Digitecnica s.n.c.**, Via Zuccarini 1- Zona Baraccola, 60131 Candia (AN) Phone :071-2866067 / **S.A.R.E. s.r.l.**, Via Barbana 35/37, 00142 Roma, Phone 06-5406796 / **Tecno Labs**, Via Naz. Delle Puglie 294, 80026 Casoria (NA), Phone: 081-5845923 / **Marcantonio**, Via G.M.Giovene 45, 70124 Bari, Phone: 080-5618029 / **Audio Video**, Via A. de Gasperi 44, 88018 Vibo Valentia , Phone: 0963-45571/2 / **A.V.S.**, Via Sassari2/c, 95100 Catania, Phone: 095-446696, Fax: 095-434337 / **AS. TEC.**, Via R. Villasanta 227, 09100 Cagliari, Phone: 070-524153, Fax: 070-504109

ESPAÑA

En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o infórmense en una de las SHARP Service casas siguientes.

MERINO NICOLAS JOSE A., -945/ 25.18.92 - AV JUDIZMENDI 24, 01003 VITORIA-GASTEIZ, ALAVA / **TELE-COLOR** - 96/585.24.60, CL DEL VENT 9, 03500 BENIDORM, ALICANTE / **TELECOM ELECTRONICA** - 96/539.50.21, CL HERNAN CORTES 8, 03600 ELDA, ALICANTE / **EUROSAT, S.L.** - 96/525.80.40, CL MONTERO RIOS 3303013 ALICANTE, ALICANTE / **ELECTRONICA GOMEZ** - 96/ 546.75.81, CL BALTASAR TRISTANY 100, 03201 ELCHE, ALICANTE / **ANGEL AVELLAN PUIG** - 965/ 21.32.55, CL POETA QUINTANA 13, 03004 ALICANTE, ALICANTE / **ELECTRONICA ELER** - 965/ 25.63.32, CL PINOSO 8, 03012 ALICANTE, ALICANTE / **INSAT, CB** - 971/ 36.53.18, CL PINTOR CALBO 30, 07703 MAHON, BALEARES (MENORCA) / **REPARACIONES ORTEGA** - 971/ 39.01.55, CL VIA PUNICA 33, 07800 IBIZA, BALEARES (IBIZA) / **AUDIO IMAGEN** - 971/ 31.46.59, CL JOSE RIQUER LLOBET 8, 07800 IBIZA, BALEARES (IBIZA) / **IRTESA ELECTRONICA** - 971/ 20.47.02, CL JAUME FERRAN 72 BJS, 07004 PALMA DE MALLORCA, BALEARES (MALLORCA) / **INSTALACIONES MAES, S.L.** - 971/ 27.49.47, CL SON NADAL 63, 07008 PALMA DE MALLORCA, BALEARES (MALLORCA) / **ELECTRON. PONS GOMILA SA** - 971/ 37.22.76, CR NUEVA 162, 07730 AYLOR, BALEARES (MENORCA) / **JOSE MARQUES ANGLADA, S.L.** - 971/ 38.54.54, CL LEPANTO 19, 07760 CIUDADELA, BALEARES (MENORCA) / **ANOIA ELECTROVISION** - 93/ 805.11.90, AV BALMES 12, 08700 IGUALADA, BARCELONA / **AUDIO VISION** - 385.78.08, CL MARE DEU MONTSERRAT 22, 08922 STA.COLOMA, BARCELONA / **SAC-2, S.C.P.** - 331.77.54, CL RIERA BLANCA 113, 08028 BARCELONA, BARCELONA / **FERMO** - 465.22.00, AV MORERA 5, 08915 BADALONA, BARCELONA / **ELEC.SAFONT** - 821.30.03, CL GRAL. MANSO SOLA 31, 08600 BERGA, BARCELONA / **SERVINTERS, S.C.C.L.** - 389.44.60 - PZ CASAGEMES 20, 08911 BADALONA, BARCELONA / **TECNIK'S, S.C.P.** - 630.11.20, CL JOAN BARDINA 32, 08830 SANT BOI DE LL. BARCELONA / **CE. VA. SAT, S.C.** - 785.51.11, CR MATADEPERA 87, 08225 TERRASSA, BARCELONA / **LAUREA S.A.T.** -

• SERVICE NIEDERLASSUNGEN • ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

889.02.48, CL GUILLERIES BIS 20, 08500 VIC, BARCELONA / **CE. VA. SAT, S.C.** -710.76.13, PS RUBIO I ORS 105, 08203 SABADELL, BARCELONA / **VILLARET POLO RAMON** -798.02.48, CL MOLÍ DE VENT 21, 08303 MATARÓ, BARCELONA / **ESTARLICH PRADAS VICENTE** -766.22.33, CL INDUSTRIA 131, 08370 CALELLA, BARCELONA / **VIDEOCOLOR** -93/454.99.08, CL VILLARROEL 44, 08011 BARCELONA, BARCELONA / **ELDE** -872.85.42, CL BRUCH 55, 08240 MANRESA, BARCELONA / **PULGAR I EDO S.L.** -93/436.44.11, CL CASTILLEJOS 333, 08025 BARCELONA, BARCELONA / **ELECTRONICA MATEOS** -849.28.77, CR DE CALDAS (BAJOS) 76, 08400 GRANOLLERS, BARCELONA / **ANTONIO ROBLES SANCHEZ** -872.55.41, CL SANT BARTOMEU 42, 08240 MANRESA, BARCELONA / **TOP ELECTRONICA**, 890.35.91, CL MISSER RUFET 4 Bjos, 08720 VILAFRANCA PENEDES, BARCELONA / **LA CLINICA DEL ELECTROD.**, 93/236.44.11, CL BALMES 160, 08008 BARCELONA, BARCELONA / **FIX SERVICIO TECNICO**, 675.59.02, CL SANT RAMON 3 L2, 08190 SANT CUGAT VALLES, BARCELONA / **SONITEV ELECTRONICA, C.B.**, 815.74.44, CL AIGUA 143, 08800 VILANOVA I GELTRU, BARCELONA / **TOTVISIO ELECTRONICA S.L.**, 873.88.81, PJ FERRER 14, 08240 MANRESA, BARCELONA / **4 EN 1 REPARACIONES**, 430.97.2, CL TAQUIGRAFO MARTI 19, 08028 BARCELONA, BARCELONA / **MOVILFRIT S.A.**, 93/630.14.53, CL OSCA 11.C POL.SALINAS, 08830 SANT BOI DE LL., BARCELONA / **TELE-SERVEI BRUC S.L.**, 93/207.08.08, CL ROSSELLO 289, 08037 BARCELONA, BARCELONA / **SABE ELECTRONICA**, 964/21.52.65, CL JOAQUIN COSTA 46, 12004 CASTELLON, CASTELLON / **F.CARCELLER-F.CERVERA,C.B.**, 964/45.44.65, CL CARRERO 29, 12500 VINAROS, CASTELLON / **ASISTE, S.L.**, 964/21.57.69, AV DE VALENCIA NAVE 19, 12006 CASTELLON, CASTELLON / **TECHNOTRONIC**, 971/32.27.62, CL IBIZA 12, 07860 SAN FCO. JAVIER, FORMENTERA / **REPARACIONES PILSA S.C.**, 972/20.66.96, CL J. PASCUAL I PRATS 8, 17004 GERONA, GERONA / **SATEL**, 972/26.55.19, PS DE BARCELONA 12, 17800 OLOT, GERONA / **SALLERAS PUIG JUAN**, 972/50.67.54, CL POU ARTESIA 4, 17600 FIGUERES, GERONA / **RIERA DAVIU**, 972/50.32.64, CL TORRAS Y BAGES 19, 17600 FIGUERES, GERONA / **LAVISON, C.B.**, 972/23.01.22, CL MONTSENY 35, 17005 GERONA, GERONA / **MONJE UREÑA MANUEL**, 972/70.25.52, CL SANT QUINTI 33, 17534 RIBES DE FRESER, GERONA / **ESTUDIOS 3, C.B.**, 943/45.37.97, PZ DE LOS ESTUDIOS 3, 20011 SAN SEBASTIAN, GUIPUZCOA / **NOMBRE, TILFO, CALLE, CIUDAD, PROVINCIA / TEKNIBAT ELECTRONICA**, 943/70.24.37, CL ZEZENBIDE 4, 20600 EIBAR, GUIPUZCOA / **REPARACIONES URRUTI S.L.**, 943/45.84.10, PS AINTZIETA 32, 20014 SAN SEBASTIAN, GUIPUZCOA / **TELESERVIC**, 974/31.34.44, CL ESTADILLA 6, 22300 BARBASTRO, HUESCA / **SERVIELECTRO**, 974/21.00.14, CL BAITASAR GRACIAN 5, 22002 HUESCA, HUESCA / **TELESONIC**, 974/36.32.97, CL TERUEL 6, 22700 JACA, HUESCA / **TELESERVICIO**, 974/22.01.39, CL TENERIAS 20, 22001 HUESCA, HUESCA / **SATEF**, 973/50.08.48, AV RAVAL DEL CARME 12, 25300 TARRAGA, LERIDA / **IELSA, C.B.**, 973/24.71.27, CL TARRAGONA 40, 25005 LLEIDA, LLEIDA / **CRISTEL**, 973/27.08.26, CL VALLCALENT 32, 25006 LLEIDA, LLEIDA / **UNITEC**, 948/82.74.34, CL FUENTE CANONIGOS 5, 31500 TUDELA, NAVARRA / **TELSAN, C.B.**, 948/24.19.50, CL GAYARRE 1 B.JOS., 31005 PAMPLONA, NAVARRA / **EURO TECNICOS ELECTRONICA**, 977/32.24.89, CL LEPANTO 16-18, 43202 REUS, TARRAGONA / **ELECTRO SERVEI C.B.**, 977/51.04.42, PS MOREIRA 10, 43500 TORTOSA, TARRAGONA / **A.B.R. ELECTRONICA S.L.**, 977/50.21.20, CL CALDERON LA BARCA 3, 43520 ROQUETAS, TARRAGONA / **CURTO GAMUNDI S.R.C.**, 977/44.13.14, CL RIEROL CAPUTXINS 6, 43500 TORTOSA, TARRAGONA / **SELECO S.L.**, 977/70.00.12, CL CALDERON DE LA BARCA 11, 43870 AMPOSTA, TARRAGONA / **ELECTRONICA S. TORRES**, 977/21.21.48, CL JOAN MIRO 4 ESC.D 1-2, 43005 TARRAGONA, TARRAGONA / **BUIRA TECNIC'S**, 977/66.04.37, CL SAN JAVIER 55, 43700 EL VENDRELL, TARRAGONA / **TECNO SERVEIS MORA**, 977/40.08.83, CL PAU PICASSO 1, 43740 MORA D'EBRE, TARRAGONA / **SERTECS, S.C.**, 977/22.18.51, CL CAPUTXINS (BAJOS) 22, 43001 TARRAGONA, TARRAGONA / **ELECTRONICA JOSEP**, 977/88.04.41, CTRA. IGUALADA 29 B.JOS., 43420 STA. COLOMA QUERALT, TARRAGONA / **MARTORELL ALTES**, 977/75.32.41, CL ROSETA MAURI 10, 43205 REUS, TARRAGONA / **TELESERVICIO S.C.**, 978/87.08.10, CL ROMUALDO SOLER 4, 44600 ALCANIZ, TERUEL / **ELECTRONICA ALCANIZ S.L.**, 979/87.07.94, CL CARMEN 21, 44600 ALCANIZ, TERUEL / **SONOVISION, C.B.**, 978/60.11.74, CL ABADIA 5, 44001 TERUEL, TERUEL / **ELECTRONICA MONCHO**, 96/287.23.29, CL PARE PASCUAL CAT. 5, 46700 GANDIA, VALENCIA / **ENVISA ELECTRONIC, S.L.**, 96/241.24.87, CL GENERAL ESPARTERO 9, 46600 ALZIRA, VALENCIA / **ANTONIO MONLEON, S.L.**, 96/334.55.87, AV DE LA PLATA 91, 46006 VALENCIA, VALENCIA / **TECNO HOGAR**, 96/286.53.35, CL DOS DE MAYO 41, 46700 GANDIA, VALENCIA / **SERVICIOS ELECTRONICOS**, 96/340.20.34, CL DOCTOR OLORIZ 3, 46009 VALENCIA, VALENCIA / **ELECTRONICA LAS HERAS**, 96/238.11.14, CL JOSE IRANZO 6, 46870 ONTINYENT, VALENCIA / **NEGREDO MARTIN DANIEL**, 94/411.22.82, CL PADRE PERNET 8, 48004 BILBAO, VIZCAYA / **COLLANTES MARTIN ONOFRE**, 94/483.21.22, CL ORTUÑO DE ALANGO 7, 48920 PORTUGALETE, VIZCAYA / **ARGI GILTZ**, 94/443.77.93, CL AUTONOMIA 15, 48012 BILBAO, VIZCAYA / **SERVITELE**, 94/444.89.02, CL AUTONOMIA 24 Galerías, 48012 BILBAO, VIZCAYA / **CINCA MONTERDE ANTONIO**, 976/31.69.65, CL VIA UNIVERSITAT 52, 50010 ZARAGOZA, ZARAGOZA / **ARAGON TELEVIDEO, S.C.**, 976/32.97.12, CL BATALLA CLAVIJO 18, 50010 ZARAGOZA, ZARAGOZA / **TV VIDEO JIMENEZ, S.L.**, 967/34.04.43, CL JUAN XXIII 38, 02640 ALMANSA, ALBACETE / **JUMAN**, 967/22.40.78, CL EJERCITO 1, 02002 ALBACETE, ALBACETE / **TELEVIDEO**, 950/40.18.63, CL VELAZQUEZ 7 LOCALA, 04770 ADRA, ALMERIA / **SERVICIO TECNICO PONCE**, 950/45.67.53, UB MONTE ALMAGRO 10, 04610 CUEVAS DE ALMANZORA, ALMERIA / **SONIVITEL S.L.**, 950/22.97.55, CL POETA PACO AQUINO 51, 04005 ALMERIA, ALMERIA / **ELECTRONICA EDIMAR, S.A.**, 98/535.34.51, CL CANGAS DE ONIS 4, 33207 GIJON, ASTURIAS / **CAÑEDO S.T.**, 98/522.29.68, CL OTERO, S/N C. CIAL, 33008 OVIEDO, ASTURIAS / **ALVAREZ OLIVAR CASILDA**, 98/522.37.39, CL SAN JOSE 12, 33003 OVIEDO, ASTURIAS / **SANTIAGO VALDERREY**, 98/563.18.61, CL DR. VENANCIO MITEZ 7, 33710 NAVIA, ASTURIAS / **ASTUSETEL S.L.**, 98/539.10.11, CL CEA BERMUDEZ 9, 33208 GIJON, ASTURIAS / **ASTURSERVICE**, 98/556.83.87, CL SANCHEZ CALVO 6 Bjos., 33401 AVILES, ASTURIAS / **JUAN MORILLON DEL CORRO**, 98/567.40.24, AV DE GIJON 19, 33930 LA FELGUERA/LANGREO, ASTURIAS / **S.A.T. JUAN-MANUEL**, 98/581.22.48, CL URIA 60, 33800 CANGAS DE NARCEA, ASTURIAS / **DANIEL SERRANO LABRADO**, 920/37.15.16, CL JOSE GOCHICOA 16, 05400 ARENAS DE S.PEDRO, AVILA / **ELECTRONICA GREDOS**, 920/22.48.39, CL EDUARDO MARQUINA 24, 05001 AVILA, AVILA / **JIMENEZ ALMOHADA**, 920/25.08.76, CL JACINTO BENAVENTE 1, 05001 AVILA, AVILA / **ELECTRONICA BOTE**, 924/22.17.40, PZ PORTUGAL 2, 06001 BADAJOZ, BADAJOZ / **MARCIAL LAGOA GONZALEZ**, 924/49.03.33, CL RAMON Y CAJAL 7, 06100 OLIVENZA, BADAJOZ / **C.E. VILANOVENSE C.B.**, 924/84.59.92, CL CAMINO MAGACELA 4 LOCAL5, 06700 VILLANUEVA SERENA, BADAJOZ / **ELECTRONICA CENTENO S.L.**, 924/57.53.08, AV DEL ZAFRA 1, 06310 PUEBLA SANCHO PEREZ, BADAJOZ / **INDALECIO AMAYA SANCHEZ**, 924/66.47.01, CL CARRERAS 11, 06200 ALMENDRALEJO, BADAJOZ / **PATRICIO ELECTRONICA**, 924/33.04.13, CL REYES HUERTAS 7, 06800 MERIDA, BADAJOZ / **ELECTRONICA MAS**, 947/31.49.94, CL ALFONSO VI 6, 09200 MIRANDA DE EBRO, BURGOS / **SERVITEC BURGOS S.L.**, 947/22.41.68, CL LAVADEROS 7-9, 09007 BURGOS, BURGOS / **RUIZ GARCIA JOSE**, 927/22.48.86, CL ECUADOR 5-B, 10005 CACERES, CACERES / **ARSENIO SANCHEZ, C.B.**, 927/41.11.21, CL TORNAVACAS 9, 10600 PLASENCIA, CACERES / **ZABALA VAZQUEZ JOSE**, 927/57.06.13, CL DEL AGUA 39, 10460 LOSAR DE LA VERA, CACERES / **RADIO SANCHEZ C.B.**, 927/32.06.88, AV DE MIAJADAS S/N, 10200 TRUJILLO, CACERES / **ELECTRONICA JEDA**, CL PAGADOR 31, 11500 PTO. STA. MARIA, CADIZ / **SERVICIO TECNICO**, 956/87.07.05, CL DIVINA PASTORA E-1 L-4, 11402 JEREZ LA FRONTERA, CADIZ / **JOSE BORJA Y JOSE ARANA**, 956/66.60.53, CL SAN ANTONIO 31, 11201 ALGECIRAS, CADIZ / **VHIFITEL**, 956/46.25.01, CL FCO.FDEZ.ORDOIEZ 5, 11600 UBRIQUE, CADIZ / **GALAN SAT S.L.**, 956/20.14.17, CL CRUZ ROJA ESPAÑOLA 11, 11009 CADIZ, CADIZ / **GALAN SAT S.L.**, 956/83.35.35, CL FACTORIA MATAGORDA 52, 11500 PUERTO REAL, CADIZ / **ELECTRONICA SEYMA**, 942/23.69.19, CL DEL MONTE 69 C Bjos, 39006 SANTANDER, CANTABRIA / **TELE-NUOVA**, 926/50.59.96, CL CAMPO 56, 13700 TOMELLOSO, CIUDAD REAL / **ELECTRONICA ARELLANO**, 926/54.78.95, CL LORENZO RIVAS 14, 13600 ALCÁZAR DE SAN JUAN, CIUDAD REAL / **ELECTRONICA LARA**, 926/21.17.87, CL DE LA JARA 1, 13002 CIUDAD REAL, CIUDAD REAL / **MANUEL VAZQUEZ**, 926/42.09.93, CL ADUANA 3, 13500 PUERTOLLANO, CIUDAD REAL / **ELECTRODIAZ S.L.**, 926/32.23.24, CL BUENSUCESO 10, 13300 VALDEPEÑAS, CIUDAD REAL / **DUELAS CAÍAS TEODORO**, 957/26.35.06, CL HERMANO JUAN FDEZ 15, 14014 CORDOBA, CORDOBA / **ELECTRONICA SALES**, 957/66.09.04, CL ANDALUCIA 11, 14920 AGUILAR FRONTERA, CORDOBA / **LAVISON ELECTRONICA S.L.**, 957/75.01.75, CM DE LA BARCA 3, 14010 CORDOBA, CORDOBA / **ANTONIO GONZALEZ**, 957/57.10.50, CL GRAL PRIMO RIVERA 61, 14200 PEÑARROYA, CORDOBA / **ELECTRONICA GARCIA**, 969/22.24.83, CL RAMON Y CAJAL 17, 16004 CUENCA, CUENCA / **GALLARDO ALONSO MIGUEL**, 958/67.64.81, CL CARMEN 104, 18510 BENALUA DE GUADIX, GRANADA / **VILCHEZ VILCHEZ RAFAEL**, 958/60.06.50, CL AMADEO VIVES 9, 18600 MOTRIL, GRANADA / **ELECTRONICA WENCESLAO**, 958/81.16.16, CL FONTIVEROS 42, 18008 GRANADA, GRANADA / **DIGIMAT ELECTRONICA**, 958/70.04.52, CL CASICAS 7, 18800 BAZA, GRANADA / **MEGATECNICA EXTREMERA**, 958/26.06.01, C/. MOZART L-2 Ed.Granate, 18004 GRANADA, GRANADA / **TECNICAS MARVI S.L.**, 949/23.27.63, PZ CAPITAN BOIXAREU 51, 19001 GUADALAJARA,

• SERVICE NIEDERLASSUNGEN • ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

GUADALAJARA / **ABRIL SANCHEZ VALENTIN**, 959/ 10.60.41, CL CADIZ 2, 21270 CALA, HUELVA / **TELESONID HUELVA, S.C.A.**, 959/ 24.38.60, CL FCO.VAZQUEZ LIMON 4, 21002 HUELVA, HUELVA / **ELECTRONICA SUR**, 959/ 47.11.51, CL M. LERDO DE TEJADA 9, 21400 AYAMONTE, HUELVA / **ELECTRO HIMEGA, S.A.**, 953/ 24.22.56, CL ADARVES BAJOS 4-C, 23001 JAEN, JAEN / **ELECTRONICA JUMAR**, 953/ 26.17.08, CL GOYA (LAS FLORES) 1, 23006 JAEN, JAEN / **ELECTRONICA GONZALEZ**, 953/ 50.33.82, CORREDERA SAN BARTOLOME 11, 23740 ANDUJAR, JAEN / **UNISERVIC ELECTRONICA**, 953/ 75.14.19, CL GOYA 1 BJS, 23400 UBEDA, JAEN / **NOMBRE1, TLFNO, CALLE, CIUDAD, PROVINCIA / ANUMA**, 953/ 69.70.41, CL PAREDON 24, 23700 UINARES, JAEN / **TALLERES INSTALUZ**, 981/ 26.80.26, CL JUAN FLOREZ 110, 15005 LA CORUÑA, LA CORUÑA / **GARCIA QUINTELA ARTURO**, 981/ 70.21.07, CL XOANE, 15100 CARBALLO, LA CORUÑA / **MANUEL MATO SENARIS**, 981/ 53.71.14, CL SILVOUTA-PEDRA DA, 15896 SANTIAGO COMPOSTELA, LA CORUÑA / **ZENER ELECTRONICA**, 981/ 22.07.00, CL RONDA DE MONTE ALTO 15, 15002 LA CORUÑA, LA CORUÑA / **S.T. MENDEZ**, 981/ 27.52.52, CL GIL VICENTE 13, 15011 LA CORUÑA, LA CORUÑA / **ELECTRONICA CASTILLA**, 981/ 32.14.09, CR CASTILLA 377-bis bjos, 15404 FERROL, LA CORUÑA / **BANDIN AUDIO**, 981/ 86.60.23, CL RUJA ARCOS MOLDES 2 B-3, 15920 RIANXO, LA CORUÑA / **ELECTRONICA TORRES, S.C.**, 941/ 24.76.15, AV NAVARRA 14, 26001 LOGROÑO, LA RIOJA / **TOP SERVICE**, 941/ 13.50.35, CL ACHUTEGUI DE BLAS 17, 26500 CALAHORRA, LA RIOJA / **AGUADO GIL ROBERTO**, 941/ 25.25.53, AV VIANA 10, 26001 LOGROÑO, LA RIOJA / **TELSON**, 987/ 21.25.18, CL BATALLA CLAVIJO 2, 24006 LEON, LEON / **SALVADOR RODRIGUEZ, C.B.**, 987/ 40.36.02, CL ORTEGA Y GASSET 24, 24400 PONFERRADA, LEON / **PROSAT**, 987/ 20.34.10, PZ DOCE MARTIRES 5, 24004 LEON, LEON / **ELECTRONICA FOUQUES**, 982/ 40.24.38, CL BENITO VICETTO 34, 27400 MONFORTE DE LEMOS, LUGO / **TELEVEXO S.L.**, 982/ 58.18.57, CL NOSA SRA. do CARMEN 82, 27880 BURELA, LUGO / **ELECTRONICA PENELO**, 982/ 21.47.43, CL SERRA GA#IDOIRA 63, 27004 LUGO, LUGO / **GOMESCAN**, 91/ 305.48.90, PZ DEL JUBILADO 8, 28042 BARAJAS-MADRID, MADRID / **ELECTRONICA GARMAN, C.B.**, 91/ 368.01.79, CL MANDARINA 15, 28027 MADRID, MADRID / **ELECTRONICA ANSAR**, 91/ 460.47.45, CL TOMASA RUIZ 4, 28019 MADRID, MADRID / **TEC-NORTE**, 91/ 851.63.47, CL SANTIAGO APOSTOL 12, 28400 COLLADO VILLALBA, MADRID / **VARIOSAT, S.L.**, 91/ 662.04.68, CL ISLA DE CORCEGA 24, 28100 ALCOBENDAS, MADRID / **ELBESERVI, S.A.**, 91/ 386.27.11, CL DR.R. CASTROVIEJO 19, 28029 MADRID, MADRID / **ALCALA SERVITEC C.B.**, 91/ 889.00.32, CL SANTA URSULA 5, 28801 ALCALA DE HENARES, MADRID / **GARMAN C.B.**, CL CARLOS SOLE 38 local, 28038 MADRID, MADRID / **AVILES SANCHEZ ANTONIO**, 952/ 36.16.02, CL CIUDAD DE ANDUJAR 2, 29006 MALAGA, MALAGA / **VIDEO TALLER, S.C.**, 952/ 54.23.95, EDIF. LA NORIA B BJS-5, 29740 TORRE DEL MAR, MALAGA / **SERVISUEL, EDIF. LA UNION**, 952/ 46.90.28, CM DE LAS CA#ADAS LC 2, 29640 FUENGIROLA, MALAGA / **BISER, S.L.**, 952/ 25.55.53, CL LOZANO DE TORRES 8, 29013 MALAGA, MALAGA / **ELECTRO RONDA**, 952/ 87.59.99, CL SANTA CECILIA 11, 29400 RONDA, MALAGA / **DIEGO LOPEZ JODAR**, 95/ 280.12.23, PZ DEL RELOJ 13, 29680 ESTEPONA, MALAGA / **CARO PORLAN RAIMUNDO**, 968/ 46.18.11, CL JOSE MOULIAA 45, 30800 LORCA, MURCIA / **REG., C.B.**, 968/ 51.00.06, CL ANTONIO OLIVER 17, 30204 CARTAGENA, MURCIA / **ELECTROSERVICIOS SEBA, C.B.**, 968/ 29.85.93, CL ISAAC ALBENZ 4 BJS, 30009 MURCIA, MURCIA / **VISATEL**, 968/ 24.16.47, CL TORRE ALVAREZ S/N, 30007 MURCIA, MURCIA / **ELECTRO SERVICIOS PLAZA,**, 968/ 28.45.67, CL GOMEZ CORTINA 10, 30005 MURCIA, MURCIA / **RAFAEL GOMEZ YELO**, 968/ 26.14.67, PS CORBERA 17, 30002 MURCIA, MURCIA / **FERNANDEZ GONZALEZ JOSE**, 988/ 23.48.53, AV BUENOS AIRES 75 BJS, 32004 ORENSE, ORENSE / **ELECTRONICA JAVIER**, 979/ 75.03.74, CL RAMIREZ 5, 34005 PALENCIA, PALENCIA / **CENTRAL DE SERVICIOS**, 986/ 37.47.45, CL ASTURIAS (BAJO) 10, 36206 VIGO, PONTEVEDRA / **MONTAJES SERVICIOS TECN.**, 986/ 84.16.36, CL LOUREIRO CRESPO 43, 36004 PONTEVEDRA, PONTEVEDRA / **SIAL-ALVIMO S.L.**, 986/ 29.93.01, C/ C.TORRECEDEIRA 92 bjos, 36202 VIGO, PONTEVEDRA / **ELECTRONICA CAMBADOS**, 986/ 50.83.27, CL CAMILO JOSE CELA 13, 36600 VILAGARCIA AROUSA, PONTEVEDRA / **ALMAT ELECTRONICA**, 923/ 22.45.08, CL GALILEO 21, 37004 SALAMANCA, SALAMANCA / **GUIJO S.T.**, 921/ 42.94.18, CL RAMON Y CAJAL 1, 40002 SEGOVIA, SEGOVIA / **AVITELSAT, S.A.**, 954/ 66.21.52, CL ESPINOSA Y CARCEL 31, 41005 SEVILLA, SEVILLA / **VANHCOLOR, S.L.**, 95/ 433.83.03, CL SAN JACINTO 96, 41010 SEVILLA, SEVILLA / **TELEPAL**, 95/ 464.95.80, CL JULIO VERNE 49, 41006 SEVILLA, SEVILLA / **AUVITEL, S.L.**, 95/ 427.57.07, CL VIRGEN DE AFRICA 20, 41011 SEVILLA, SEVILLA / **AUDIO COLOR**, 95/ 457.94.47, CL GOLGOTA 3 LOCALIZDA., 41003 SEVILLA, SEVILLA / **ELECTRO 93 S.L.**, 95/ 472.37.16, CL MELLIZA 1, 41700 DOS HERMANAS, SEVILLA / **TECO**, 975/ 22.61.25, CL ANTOLIN DE SORIA 10, 42003 SORIA, SORIA / **ELECTRONICA RIVAS**, 925/ 80.55.46, CL BARRIO SAN JUAN 1, 45600 TALAVERA LA REINA, TOLEDO / **ELECTRONICA FE-CAR, S.L.**, 925/ 21.21.45, AV SANTA BARBARA 30, 45006 TOLEDO, TOLEDO / **ELECTRONICA JOPAL S.L.**, 925/ 25.04.42, AV SANTA BARBARA S/N, 45006 TOLEDO, TOLEDO / **ELECTRO ANAYA**, 925/ 48.09.81, CL VERTEDERA ALTA 14, 45700 CONSUEGRA, TOLEDO / **TELESERVICIOS**, 983/ 30.92.61, CL ESGUEVA 6, 47003 VALLADOLID, VALLADOLID / **ASIST. TECNICA MARCOS**, 983/ 29.78.66, CL PIO DEL RIO HORTEGA 2-4, 47014 VALLADOLID, VALLADOLID / **ELECTRONICA VITELSON**, 983/ 80.43.56, PZ DEL MERCADO 9, 47400 MEDINA DEL CAMPO, VALLADOLID / **R.T.V. BLANCO**, 980/ 51.14.41, CL EDUARDO JULIAN PEREZ 9, 49018 ZAMORA, ZAMORA

SWITZERLAND

FALCOMAT AG, Allmendstrasse 134, 4058 BASEL. Tel. 061601-1919. Fax. 061601-5755

SWEDEN

Vid förfrågningar angående din mikrovågsgugn var vänlig kontakta din återförsäljare eller någon av Sharps representanter
Centralservice Umeå, Formvägen 8, 90621 Umeå, Phone: 090-125001, Fax: 090-131135 / **MN Elektronikservice AB**, Flygplatsinfarten 10A, 161 11 Bromma, Phone: 08-6275900, Fax: 08-6275160 / **Jönköpings Antenn & TV Service**, Fridhemsvägen 20, 553 02 Jönköping, Phone: 036-161690, Fax: 036-160211 / **Ratronik Radio & TV Service**, Nordlandergatan 15, 931 32 Skellefteå, Phone: 0910-17305, Fax: 0910-16844 / **Tomi Elektronik AB**, Bäckvägen 90, 126 47 Hägersten, Phone: 08-186170, Fax: 08-186175 / **Tretronik**, Östermovägen 33, 854 62 Sundsvall, Phone: 060-155925, Fax: 060-173690 / **TV-Trim Service AB**, S:T Pauligatan 37, 416 60 Göteborg, Phone: 031-847200, Fax: 031-847500

NORWAY

Finn Clausen AS, Postbox 274, No-0511 Oslo, Phone: 47-22635000, Fax: 47-22646655
Norsk Elektronik senter, Postbox 13, No-2007 Kjeller, Phone: +47-63804500, Fax: +47-63804501

ICELAND

Braedurnir Ormsson Ltd, PO box 8790, IS-128 Reykjavik, Phone: +354-5332800, Fax: +354-5332810
Hjólmtækni Ehf, Skeifar, IS-108 Reykjavik, Phone: +354-5332150, Fax: +354-5332151

DENMARK

Sö Höyem AS, Büllowsvej 3, DK-1870 Fredriksberg C, Phone: 45-31224434, Fax: 45-31224127
Almstock Radio & Tv service, Sallingsvej 61, DK-2720 Vanløse, Phone: 45-38740021, Fax: 45-38740031

SUOMI

Oy Perkkio, PL 40 Rällsintie 6, SF-00721 Helsinki, Phone: +35-8947805000, Fax: +35-8947805480
Theho Video, Kuocaankatu 7, SF-00520 Helsinki, Phone: +35-891451500, Fax: +35-891461767

ENGLISH

SHARP

SHARP ELECTRONICS (EUROPE) GMBH.

Sonninstrasse 3, 20097 Hamburg 1
Germany

PRINTED IN THE UK
TINS-A163URRO