



Note: Power pins for the LM1881 are not shown and MUST be connected to system Vcc and GND.
Vcc is pin 8.
GND is pin 4.

| | | |
|------------------------------------|---------------------------|--------------|
| Xbox VGA Converter - By Ken Gasper | | |
| Title LM1881 Sync Sperator | | |
| Size A | Document Number LM1881 | Rev 1 |
| Date: | Tuesday, March 19, 2002 | Sheet 3 of 3 |