


X88	AC connector
31	Battery -
30	Battery +
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A166	Distributor
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
50	Ignition switch - start signal
Y3	Injector
B83	Manifold absolute pressure (MAP) sensor
W21	Octane coding plug
B72	Oxygen sensor (O2S)
B147	Throttle position (TP) sensor
X79	Transmission connector - AT
B33	Vehicle speed sensor (VSS)

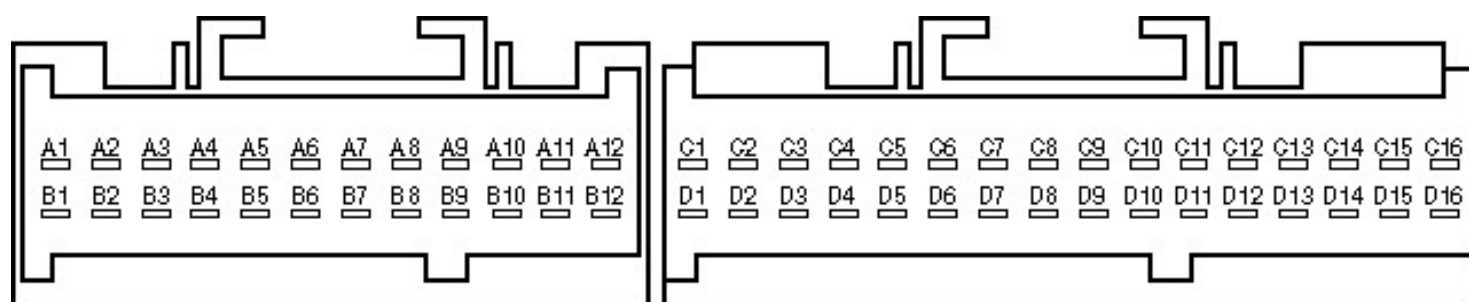

A.D74496

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

