

## Key-press's specification

### I. Alarm setting

When the setting key "⏏" of the remote controller is pressed once, the horn of the alarm will make a sound and the car lights will flash once. Then, the central lock automatically locks up and the electrically operated door windows automatically rise (optional). Three seconds after that, ACC/side door starts detection and LED flashes. Vibration alarm and ultrasonic alarm will be triggered after eight seconds.

### II. Cancellation of alarm setting

① When the setting cancellation key "⏏" of the remote controller is pressed once, the horn of the alarm will make two sounds and the car lights will flash twice. Then the central lock automatically releases and the alarm setting is cancelled. If no one enters the car within 25sec, the system will automatically lock up and be in state of alertness.

② When the setting cancellation key is pressed down and held for two seconds, luggage compartment will be opened by means of remote control (+/- is optional).

### III. Mute theft protection

When the MUTE "⏏" key of the remote controller is pressed, the horn of the alarm will keep silent and the car lights will flash once. Then, the central lock automatically locks up and the electrically operated door windows automatically rise (optional). The system automatically enters in state of theft protection and the LED automatically flashes after eight seconds.

### IV. Car seeking

① When the setting key "⏏" of the remote controller is pressed down and held for 2 second insetting mode, the car lights will flash for 15sec and the horn makes continuous sounds. When the key is pressed again, the horn will stop giving sounds and the system will be in the state of alertness.

② When the MUTE key "⏏" is pressed for 2sec, the car lights will flash for 10sec and the horn will keep silent. When the key is pressed again, the horn will stop giving sounds and the system will be in the state of alertness.

③ When the car seeking key "⏏" is pressed in any mode, the horn will make 15 sounds and, at the same time, the car lights will flash for 15sec.

## Function instructions

### 1. Theft protection

In case of the opening of car door by force, turn on ACC/e.g. Impact, haul and lift, the alarm system is immediately triggered. When the alarm system is activated, the horn will give loud sounds, the direction lights flash and the engine stop. After the triggering of the alarm system, the warning horn will sound for 40sec and then automatically stop and the system restore the state of alertness.

### 2. Holding of horn

When the alarm system is activated, the horn will give loud sounds. The sounding of the horn may be suspended by directly pressing the setting key. In this case, the alarm system is still in the state of alertness.

### 3. Electrically operated door windows

When the setting key of the remote controller is pressed once, the horn of the alarm will make a sound and the car lights will flash once. Then, the electrically operated door windows automatically rise and stop after 30sec. (struck slightly, direction light flash, siren chirp one second, LED flash rapidly, strike heavily, direction light flash, siren chirp three seconds, LED flash rapidly, strike

### 4. Identifying function in triggering state

If the alarm system is triggered in the state of theft protection, two modes of alarm are available: intermittent sounding in the mode of impact and continuous sounding in the mode of triggering.