

5. Protection against seizure

When the car key is turned to ACC/ON position and the MUTE key "⏏" is pressed in driving, the car lights will flash rapidly, indicating that the system is in the pre-state of protection against seizure. Pressing the setting key "⏏" again brings the system into the state of protection against seizure. Now the horn sounds and the direction lights flash rapidly. After 15 seconds, the engine is stopped. The state can be exited only when the key "⏏" is pressed.

6. Automation of central control lock

- ① Pressing the key "⏏" releases and setting key "⏏" in driving remotely controls the locking or unlocking of the central lock without starting the alarm system.
- ② When the car doors are properly closed and the car key turned to ACC/ON position in driving, the car doors will be automatically locked if the brake is treaded down after 15sec. The function prevents the car doors from locking when there is no person in the car.
- ③ The car doors will be automatically unlocked when the key is removed, allowing easy getting down/on the car.

Precaution: The car doors will not be automatically locked if the door cars are not properly closed and the car key is not turned to ACC/ON position.

7. Door closing failure/warning function

- ① The warning light will keep flashing to warn the automobiles behind when the front doors are not properly closed and the key is not turned to ACC/ON position in driving. The light automatically stops flashing after 30sec.
- ② When the front doors are not properly closed and the key is turned to ACC/ON position in driving, the warning light will keep flashing to warn the automobiles behind until they are properly closed.

8. Car seeking

- ① Visible and audible car seeking: When the car seeking key is pressed down, the horn will sound for 15sec and engine stop while the car is flashing.
- ② Silent car seeking: When the car seeking key is pressed down and held for 2sec in setting mode, the horn will not sound for 10 secretary and engine stop while the car is flashing.

9. Secondary theft protection

After the cancellation of alarm setting, the system will automatically return to the state of theft protection if the car doors are not opened or the car is not started within 25sec.

The function ensures that the normal protective functions will be restored within 25sec even the alarm setting is cancelled by accidental key pressing.

10 LED display

- ① State of theft protection: LED flashed twice, pause for 1seconds.
- ② State of alarm: LED flashed fastly.

11. Lockup of engine

An optional cut-off relay may be employed so that the power supply to the engine is cut off temporarily in the state of alertness so as to prevent the engine from startup.

12. Intrusion warning

Though car owner cannot discover an intrusion when a car door is opened in the theft protection, the horn will, when the setting is cancelled, make three sounds in addition to the original two sounds to remind the owner of checking for hiding of any person so as to prevent hijacking.

13. Distress signal/way clearing

When the car seeking key is pressed in any mode, the alarm horn will sound for 15sec and the car lights will flash for 15sec to give distress signal. To stop it, press the cancellation key one.