

14. Memory after power failure

When the power supply is cut off in the state of theft protection, the system will automatically restore the state after power recovery. When the power supply is cut off in the normal state, the system will automatically restore the normal state after power recovery. The function facilitates effective theft protection and will not cause any trouble during car maintenance.

15. Warning of closing failure of side door

When the setting key of the remote controller is pressed once, the horn of the alarm will make a sound and the car lights will flash once. The horn will make another three sounds if a car door is not properly closed, reminding car owner of closing failure. The horn will give alarm after 30sec. Now the owner may terminate the state of theft protection and set it again after correctly closing the door.

16. When owner gets away from the car after parking it, the direction lights will flash three times after 10sec to remind him of starting the alarm system.

17. Emergency reset

If car owner has lost his remote controller in the state of alertness, he may unlock the car door with a key. Now the alarm system raises alarm. The owner may turn the key to ACC/ON and press down and hold the RESET key for 2sec. Then the horn makes two sounds, the direction lights flash twice and the central lock releases to terminate the state of alertness and to allow the owner to drive the car normally.

18. Encoding (studying) procedures of the remote controller and main unit

Turn the car key to ACC/ON position and press down and hold the STUDY button for 2sec. Then the direction lights steadily illuminates and is in the state of study. Now, the horn will make a sound when any key of the remote controller is pressed, in-