

dicating success of duplication of the relevant function. It is possible to duplicate the function for four remotecontrollers within 6sec by pressing the STUDY key. After 6sec or the duplication of 4 remote controllers, or the duplication of a duplicated remote controller, the main unit will terminate the state of study and the direction lights will go out. For duplicating some new functions, the previously duplicated remote controllers will be cleared away.

J1. Setting of flash or no flash
The system has been set to the mode of flash (namely the lights flash or not when opening a car door) at factory.

J2. Setting of electric/pneumatic lock
The system has been set to electric lock at factory with 0.5sec

of output time of the central lock (Sw2 shortcircuit is in ON position). If it is set to pneumatic lock, the output time of the central lock will be 3.5sec (Sw2 short circuit is in OFF position).

J3. Setting of window rise/no window rise
The system has been set to the mode of no window rise at factory (namely closing the windows or not in the state of theft protection)

J4. doom light delay option
when car owner stop car, open vehicle door and get out from his car, room light will be on constantly for 5 seconds or 15 seconds, this is optional and depends on actual choice.

			
Alarm	W/O alarm	MUTE	SEEK CALL

main engine installation fig

