
SYSTEM 2316 Installation Manual

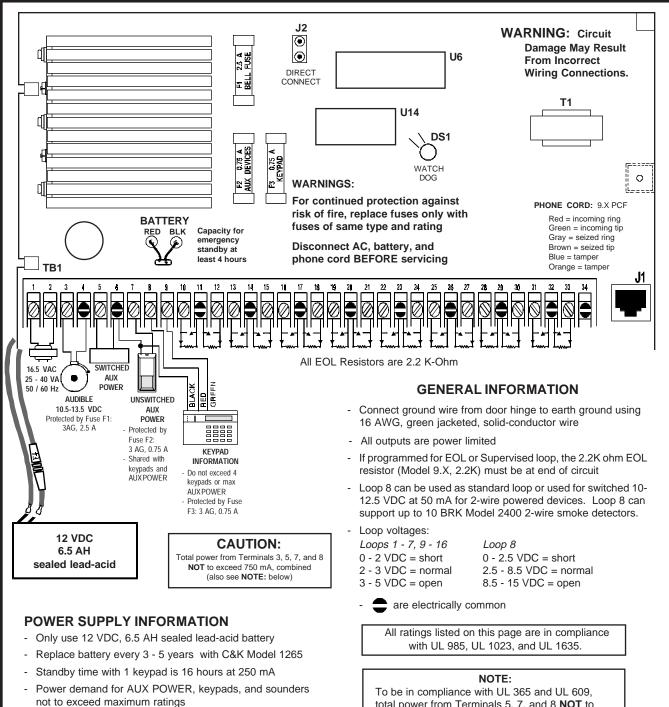

total power from Terminals 5, 7, and 8 **NOT** to exceed 150 mA combined.



Install transformer on unswitched power receptacle Remove AC and battery power before replacing fuses

- Maximum battery charge current = 350 mA