



Position	Part number	Name	Position	Part number	Name
101	95001001	Rear crankcase	411	95004501	Capacitor
103	YF203007	Oil seal 20x30x7	413	95004800	AC overload protection
104	YF061204	Oil seal 6x12x4	501	95004500	Alternator
105	950000105	Stud bolt M6x113	502	95004500	
106	95002004	Cylinder gasket	503	950000503	Fan
107	95002100	Cylinder	504	950000504	Bearing 6203-RZ (díra pro čep)
108	95002003	Cylinder head gasket	509	95004700	Socket 12V
109	95002002	Cylinder head	511	950000511	DC overload protection
110	A969P	Spark plug	516	95001005	Engine cover
111	950000414	Ignition CDI	517	95001006	Robber foot
113	95002001	Cylinder cover	601	950000601	Governor lever
118	95003400	Starter assembly	603	950000603	Spring
119	95003009	Nut M10x1,25	607	950000607	Holder
120	950000120	Flywheel	609	95002007	Bushing
124	950000124	Coil ignition	613	95005006	Governor fork
125	95001002	Front crankcase	614	950000614	Shaft
126	6004	Bearing 6004	615	950000615	Spring
201	95003100	Crankshaft with connecting rod	616	950000616	Governor rod
202	950000202	Needle bearing	701	95006100	Fuel tank
203	95003004	Piston pin clip	703	95006002	Fuel tank sieve
204	95003005	Piston	705	95006200	Fuel tank cap
205	95003200	Piston ring	706	95006005	Fuel tank handle
207	95003002	Piston Pin	710	950000710	Seal ring
301	95005003	Insulator gasket	711	95006300	Fuel faucet
302	95005200	Carburetor insulator	712	950000712	Fuel tube
304	95005004	Carburetor gasket	713	950000713	Fuel tube clip
305	95005100	Carburetor	801	95002200	Muffler
306	95005002	Carburetor intake gasket	802	95002005	Muffler gasket
307	950000307	Air filter gasket	900	950000800	Frame
403	950000403	Engine switch			
405	950000405	Air filter element			
406	950000406	Panel			
407	950000407	Socket			
408	950000408	Fixing plate			