



--- Circuitry not used in some versions
 e See ports first
 * Nominal value
 # Ground
 # Chassis
 ▽ Common tie point
 Measurements made in Channel 1 with switching as shown unless noted.
 Item numbers in rectangles appear in the alignment/adjustment instructions.
 Supply voltage maintained as shown at input.
 Voltages measured with digital meter, no signal.
 Controls adjusted for normal operation.
 Arrow at control indicates direction of advance.
 Terminal identification may not be found on unit.
 Value in () used in some versions.