


Press both buttons simultaneously for 8 seconds

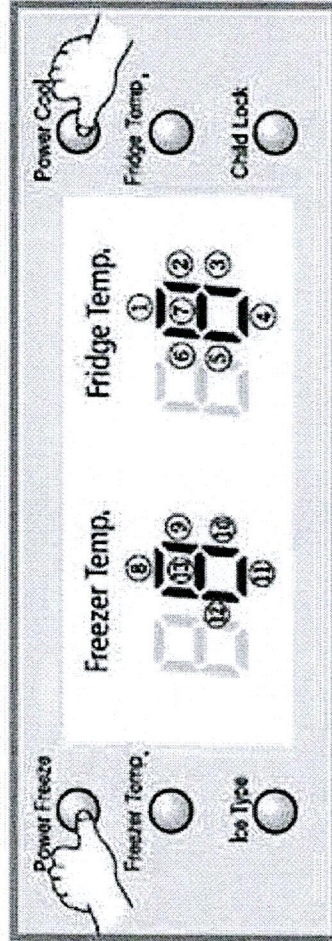

If any LEDs blink, the corresponding sensors and components must be checked for an error.

NO	Error
①	ICE-MAKER SENSOR
②	R-SENSOR
③	R-DEF-SENSOR
④	R-FAN ERROR
⑤	I/M function error X
⑥	CoolSelect Zone™ SENSOR
⑦	R-DEFROST ERROR
⑧	EXIT-SENSOR
⑨	F-SENSOR
⑩	F-DEF ERROR
⑪	F-FAN ERROR
⑫	C-FAN ERROR
⑬	F-DEFROST ERROR