

## 3.1.2 Odea Giro, Talea Giro

"Appliance ready" LED:

- **Permanently on:** The appliance is ready for use.
- **Flashing:** The appliance has to finish the heating-up phase.


"Empty dreg drawer" LED:

- **Permanently on:** Empty the dreg drawer. The appliance must be switched on for this procedure.

Control to set how much coffee is dispensed into the cup.

Coffee dispensing key:

- **Flashing slowly:** 1 coffee selected (key pressed once).
- **Flashing rapidly:** 2 coffees selected (key pressed twice).

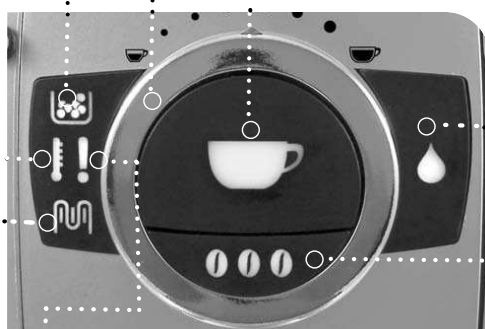

"Hot water" key:

- **Off:** The appliance dispenses steam.
- **On:** The appliance dispenses hot water.

Ground coffee quantity (Opti-dose) key.



Alarm LED:

- **Permanently on (one or more causes):** No coffee left, water tank is empty, the residual water tray is full (in this case the dreg drawer also has to be emptied to prevent problems).
- **Flashing slowly (one or more causes):** Brewing unit is missing, dreg drawer has not been inserted, coffee container cover has not been inserted, service door is open, rotary knob for opening the hot water / steam is not in the right position.
- **Flashing rapidly:** Ventilate the water system.

"Descaling" LED:

- **Flashing:** Start the descaling cycle.

**Reset: Press the hot water key for 10 seconds**

 and  LEDs flashing alternately: turn off the appliance. Turn the appliance back on after 30 seconds and wait until the movements stop. Then turn the appliance off again. Remove the brewing unit and clean thoroughly (see page 29). If the display reappears when you turn the machine back on, contact the Service Centre.