



NOTE

1.This converter doesn't isolate the RS232 (left) section from the RS485 section. Beware at voltage drop from one to other earth or ground: this interface will be destroyed when discharge the current drop

2.In this drawing are not showed the power pins on ICs they are: IC1:VCC(16),GND(15) IC2:VCC(8),GND(5)

3.Please take carefully to trim RV1 for obtain 5V, start with cursor of RV1 to ground, than you must measure on output 1.25V, then get up cursor to measure 5V. Make this operation without ICs mounted to prevent destroying if output voltage raises over 5V.

Corrieri Gabriele		
Quick reference archive		
Title Siemens S7-200 PPI Converter		
Size A4	Document Number QRA.0009/01	Rev 1.0
Date:	Wednesday, August 07, 2002	Sheet 1 of 1