

## PREPROGRAMMED UNIVERSAL REMOTE CONTROL

### 1. HOW TO SET UP THE UNIT. (PROCEDURE 1)

LOCATE THE CORRECT CODE OF THE DEVICE'S BRAND/MODEL FROM ATTACHED CODE LIST. KEY IN THE CODE TO FUNCTION THE UNIT AS FOLLOWS.

STEP 1) HOLD **SET** THEN PRESS ANY KEY OF THE TV1, TV2, VCR1, VCR2, SAT, CABLE, CD, DVD, HF, AUX SIMULTANEOUSLY UNTIL THE LED IS ON. THEN RELEASE BOTH THE KEYS.

2) ENTER CODE  
(3 DIGITS)

3) PRESS POWER

- AFTER COMPLETION OF THE SETTING, IF ACCURATE, ALL THE DEVICES AND FUNCTIONS CAN BE CONTROLLED. OTHERWISE, THE CODE MAY NOT BE CORRECT FOR YOUR DEVICE, PLEASE REPEAT THE SAME PROCESS FROM STEPS 1) TO 3) BY ENTERING OTHER CODES UNTIL GETTING THE CORRECT ONE FOR YOUR DEVICE.

NOTE: A) DO NOT EXCEED 10 SECONDS BETWEEN EACH STEPS.

- B) THERE MIGHT BE OTHER CODES THAN THE CORRECT CODE WHICH CAN ALSO CONTROL SOME, BUT NOT ALL FUNCTIONS. SUGGEST ALWAYS TO LOCATE THE VERY EXACT CODE.

STEP 4) PRESS ANY DEVICE KEY TO QUIT THE SETTING.

### 2. HOW TO WORK WITH "QUICK SEARCH" (PROCEDURE 2)

IN CASE THE CODE COULD NOT BE LOCATED FROM THE CODE LIST, PLEASE TRY THE QUICK SEARCH:

STEP 1) TURN ON **POWER SWITCH** OF THE CONTROLLED DEVICE.

STEP 2) HOLD **SET** AND PRESS THE DEVICE KEY OF THE **TV1,TV2,VCR1,VCR2  
SAT,CABLE,CD,  
DVD,HIF,AUX**  
WHICH YOU WANT TO CONTROL SIMULTANEOUSLY UNTIL THE LED IS ON, THEN RELEASE BOTH THE KEYS.

STEP 3) PRESS **SET** AGAIN AND RELEASE, THE "QUICK SEARCH" MODE IS ON WITH THE LED BLINKING.

STEP 4) CONTINUE PRESSING **POWER** (268 TIMES MAX.) TO TURN OFF THE DEVICE TO CHECK IF THE ON/OFF SWITCH OF CONTROLLED DEVICE HAS ACTION.

STEP 5) AFTER COMPLETION OF THE QUICK SEARCH, IF ACCURATE, ALL THE DEVICES AND FUNCTIONS CAN BE CONTROLLED (CHECK FUNCTION KEYS EXCEPT "SET", "PLAY" FOR VCR & CD/DVD/HIF/AUX AND DEVICE KEYS). OTHERWISE, THE CODE MAY NOT BE THE VERY CORRECT ONE FOR YOUR DEVICE. PLEASE REPEAT STEP 4) - IF STILL AT SEARCH MODE - UNTIL GETTING THE CORRECT CODE.

IF SOME DEVICES ARE NOT VERY SENSITIVE TO THE POWER SIGNAL, YOU CAN USE TOGGLE SWITCH BY PRESSING "SET" KEY TO CHANGE THE SEARCHING DIRECTION AND QUICKLY FIND OUT THE CORRECT CODE. THE SEARCHING DIRECTION IS SET AS FORWARD DIRECTION PRIOR YOU CAN CHANGE IT BY PRESSING THE "SET" KEY.

NOTE: 1. DO NOT EXCEED 30 SECONDS BETWEEN NEXT PRESSING OF THE KEY.

NOTE: 2. WHEN QUICK SEARCH MODE IS ON, THE EXACT DEVICE CAN BE SEARCH MODE BY PRESSING THE CONTRAST DEVICE KEYS, FOR EXAMPLES. (PLEASE SEE THE TABLE 1)

**TABLE 1: DEVICE CODES ON SETUP MODE OR QUICK SEARCH MODE ARE SHOWN BELOW:**

DEVICE NAME	FOR DEVICE (@ Search Mode)	TOTAL CODES	DEVICE CODE	CODES RANGE ON SET UP MODE	CODES RANGE ON QUICK SEARCH MODE
TV1	TV/CTV/TXT	291	000-268-700-721	000-624-700-721 750-751,800-840	000-268-700-721
TV2	TV/CTV/TXT	291	000-268-700-721	000-624-700-721 750-751,800-840	000-268-700-721
VCR1	VCR	104	269-370-750-751	000-624-700-721 750-751,800-840	269-370/750-751
VCR2	VCR	104	269-370-750-751	000-624-700-721 750-751,800-840	269-370/750-751
SAT	SATELLITE/CABLE	194	371-523,800-840	000-624-700-721 750-751,800-840	371-523,800-840
CABLE	SATELLITE/CABLE	194	371-523,800-840	000-624-700-721 750-751,800-840	371-523,800-840
HIFI/CD/ DVD/AUX	CD/LD/DVD/ VCD/AMPHIFI	151	524-674	000-624-700-721 750-751,800-840	524-674

### 3. HOW TO SWITCH OVER TO DIFFERENT DEVICE. (PROCEDURE 3)

STEP 1) PRESS ANY KEY OF THE **TV1,TV2,VCR1,VCR2,SAT,  
CABLE,CD/DVD/HIFI/AUX** TO QUIT THE FIRST DEVICE MODE.

STEP 2) GO TO PROCEDURES "1" OR "2" FOR THE SETTING OF OTHER DEVICES, IN SEQUENCE OF TV1,TV2,VCR1,VCR2,SAT,CABLE,CD/DVD/HIFI/AUX. THEN THE DEVICES CAN BE SHIFTED BY PRESSING THE SET KEYS

### 4. HOW TO GET THE CODE DISPLAY (3 DIGITS). (PROCEDURE 4)

STEP 1) HOLD **SET** THEN PRESS **1** SIMULTANEOUSLY, AND RELEASE, THE COUNT OF BLINKING REPRESENTS THE NUMERAL OF THE 1ST DIGIT

STEP 2) HOLD [SET] THEN PRESS [2] SIMULTANEOUSLY, AND RELEASE. COUNT OF BLINKING REPRESENTS THE NUMERAL OF THE 2ND DIGIT.

STEP 3) HOLD [SET] THEN PRESS [3] SIMULTANEOUSLY, AND RELEASE. THE COUNT OF BLINKING REPRESENTS THE NUMERAL OF THE 3RD DIGIT.

PLEASE WRITE DOWN THE CODE (3 DIGITS) FOR FUTURE REFERENCE

### INITIAL STATUS OF THE DEVICE CODES

Device	Init_code	Brand
TV1	027	Philips(TV)
TV2	075	Telefunken(TV)
TV3	126	Sony(TV)
VCR1	278	Philips(VCR)
VCR2	284	Grundig(VCR)
SAT1	424	Philips(Satellite)
SAT2	521	GMI-909(Cable)
AUX1	552	Philips(CD)
AUX2	559	Philips(LD)
AUX3	658	Pioneer(DVD)

\* Initial Device: TV1

### 5. POWER SOURCE: 2 x "AA" SIZE

### 6. THE STATUS OF POR (POWER ON RESET):

WARM UP: LED FLASHES 2 TIMES (THE DEVICE CODE IS THE PRIOR SETTING CODE).

COOLUP: LED FLASHES 3 TIMES (THE DEVICE CODE IS AT INITIAL STATUS).

### 7. IMPORTANT HINT: FOR DIFFERENT CODES, ONE TYPE OF FUNCTION KEY CAN CONTROL VARIOUS FUNCTIONS. FOR EXAMPLES:-

THE CORRECT CODES FOR ONE MODEL OF TOSHIBA TV ARE # 139, 136 AND THE DEY FOR CON +, BRI +, IS \*-\*-. THE ONLY KEYS \*+/-\* CAN CONTROL UP/DW THE FUNCTIONS... COLOR, CONTRAST... IF USING # 137 OR # 138, THE TV CAN BE TURNED ON, THE DEYS CH +, VOL +/... CAN OPERATE, HOWEVER, THE DEY FOR CONT +, COL +/- ON CODE # 138 IS \*◀◀ AND ONLY KEYS \*+/-\* CAN CONTROL UP/DW ALL FUNCTIONS... COLOR, CONTRAST, BRIGHTNESS...; THE KEY FOR CONT +, COL +/- ON CODE # 137 IS \*▶▶. NO KEY CAN CONTROL UP/DW FOR THE FUNCTIONS... COLOR, CONTRAST, BRIGHTNESS...

## TV/TXT

## TXTVTV

Model	Code	Model	Code
ACE	713	CGM	093
Admiral	032,155	Chaparral	216
Aiwa	261	Clarivox	001,166,167
Akai	005,159,169	Contec	033,253
Albiral	001	Crosley	024,025,145,155
Amstrad	006		231
ASA	007,009,013,032	CTC C latronic	096
	094,155,161	Daewoo	168,09
Audiosonic	160	Decca(UK)	002,004,026,028
Ausind	008		031,258
	004,007,012,014	Dual	255,258
Autovox	015,078,079,104	Dual-Tec	004,011,019,020
	153	Dumont	155
	033,159,160,	Elbe	001,171
AWA	189,220	Elite	108
Baird	162	Elman	019,029
Basic Line	163	Emerson	146,155
BEKO	170,226	Europhon	000,004,019,020
	010,017,018,020		030,146
	054,231,232,233	Fenner	033,193,240
Blaupunkt	234,236,241	Fidelity(UK)	003,034,229
BPL	026,160,162,163	Filmnet	202,248
Brionvega	104,155,164,165		007,008,009,013
	200,201,257	Finlux	025,026,029,035
BSR	016,019,021,253		094,161,169,221
Bush(UK)	022	Fisher	025,036,155,167
Cabletime	246,247,251		170,255
Century	145,146,155	Fornenti-Phoenix	003,008,025,037
	019,023,024,145		038,159
CGE	151,169,170,231	France Telecom	266



## TV/TXT

Model	Code	Model	Code
Funzi	016,160,253	Hotel TV	704
	002,004,019,025		003,004,033,153
GBC	026,031,033,039	Hyper	193
	040,041,042		019,023,024,145
	004,019,025,032	Imperial	151,169,170,231
Geloso	033,039,149,150		000,004,031,043
	003,004,043,080	Inno Hit	060,146,175
Goldstar	153,172,252,700		005,027,040,045
	701	Interfunk	046,052,069,070
Goodmans	119		071,073,075,155
Gorenje	170,173		008,039,043,060
	002,004,027,041	Irradio	153,262
Granada(UK)	044,045,046,047		005,032,033,040
	048,049		041,045,049,069
	003,010,018,020	ITT-Nokia	070,071,072,074
Grundig	045,050,051,053		076,162,168,176
	054,056,094		177
	025,027,037,044	Janco	249,250
Hanseatic	052,055,258	JVC	077,119,178,179
Hantarex	000	Kaisui	163
Hemmermann	057	Karcher	159,163,175
	033,044,058,059	Kendo	146
Hinari	060	Kennedy	025,078,079
	004,040,041,042	Korting	037,155,157
	044,047,055,061		033,039,183,238
Hitachi	062,063,064,065	Lenco	239,240
	066,067,068,174		004
	221,222,710	Lenori	004
		Loewe Opta	052,018,155,156
			189,213,242
		Logik	028

## TV/TXT

Model	Code	Model	Code
Luma	032,082	Noblisko	003,006,029,051
	005,045,047,055	Noblisko	146
Luxor	068,083,084,085	NOKIA	720
	086,087,162,177		065,067,075,098
	000,019,025,029	Nordmende	099,100,101,102
Magnadyne	057,47,149,150		103,104,134,185
	155		186,222
Magnafoon	000,003,006,029	Oceanic(F)	005,040,105,106
	030		107
Maranz	026,027	Onceas	004
	004,006,028,041		006,016,028,057
Matsui	088,182	Orion	088,108,109,187
Maximal	058		188,189,253
Meletronic	255	Otto Versand	025,027,044,052
	018,053,089,090		055
Metz	091,155,180,183	Pael	003,008
	010,018,045,051	Palladium	197
Minerva	053		011,003,019,037
	044,052,092,119	Panasonic	040,106,110,114
Mitsubishi	154,155,151,182		112,114,190,241
	707		019,023,024,025
	000,003,093,094	Philco	161,155,169,170
Mivar	095,245,259		231
Multisystem	159	Philex	229
Multitech	096,070,172		003,026,027,046
Murphy(UK)	041	Philips	073,113,115,155
NEC	184		191,192,193,194
	004,026,044,055		223,266,230,242
Neckermann	082,097,170	Phonola	175
N.E.L.	166	Pilot	721

## TV/TXT

Model	Code	Model	Code
Pioneer	000,027,067,243	Sambers	000,004,008,029
Polestar	214		030,043
Prandoni-Prince	008,032,146	Samsung	026,033,043,159
Praxis	217		160,170,175,212
Prosat	001		215,702,703,716
Quelle	004,005,007,008	Sanyo	013,031,044,074
	009,010,013,026		119,120,121,122
	027,028,045,050		123,162,167,170
	051,052,069,094		182,195,205
	153,221,231,232	004,011,015,019	Schneider
234,235,236,253	258,262		
Radiola	242		
Rank(UK)	022	SEG	086
RBM(UK)	022,094	Seleco	011,058,078
RCA	204,210,211	Sharp	044,054,119,124
Redifusion(UK)	005,041,116		196,198,225,227
REX	011,021,032,078	SHOV	033
	079,118	Siarem	000,025,029,155
Roadstar	030	Sicatel	001
SABA	000,065,067,075	Siemens	010,231,232,233
	085,098,099,100		234,236
	103,117,155,185	Siesta	254
	186,222,224	Silver	160
Saisho	004,006,026,088	Singer	025,029,147,149
	182,244		155
Salora	005,047,048,055	Sinudyne	006,016,025,026
	066,068,069,076		029,057,109,125
	082,086,097,162		155,192,197,253
	177,195,248,250	Sony	028,119,126,127
	267,268		128,129,130,182

## TV/TXT

Model	Code	Model	Code
Sony	199,228,260,705	Voxson	032,1 <sup>95</sup>
Stern	078	Watson	037
Tai Wah.	218,219	Walt Radio	001,003,025,029
Tandberg	180,253,266		030,057
Tatung	002,004,026,028	Wega Color	119,143
	031,131	White	03,037,159
Technovision	263	Yoko	004,159
Tele+1	248	Zanussi	078
Teleavia	186	Zenith	203,237
Telefunken	067,075,098,132	Others	206,207,208,264
	133,134,135,140		265
	185,186,231,235	北京(BEIJING)	706,711
Teleservice	203,246	牡丹	160
Thomson	065,067,075,078	長虹(Chang Hong)	141,175,711,717
	098,100,103,185		718,719
	186,222	鬆日	711
Thom-Ferguson	001,135,136,137	東大	711
	140,144,148,152	東實	711
	160,166,229,256	東華	711
Toshiba	022,044,094,119	佳麗彩	709,701
	138,139,141,142	美觀	708
Uher	011,012,036,037	海信	033
	038,078,255	神彩	711
Ultravox	003,025,082,096	康力	711
	146,155	康佳(KONKA)	706,712,714
Universum	094,160,221	康藝	708
Univox	001	熊貓(PANDA)	706
Vegavox	169	榮華	706
Videocon	033,138,141,715	摩登	708
Voxson	032,155	環宇	175,706



## TV/TXT

Model	Code	Model	Code
鶯歌	711		

## VCR

Model	Code	Model	Code
Akai	269,270,271,309 310,356,357	Granada(UK)	272,278,283,314 369
Anitsch	311	Grunding	272,275,284,361 369
ASA	282	Hanseatic	278,285
Baird	271,273	Hinari	281,286,287,317 360
Blaupunkt	272,274,275,312 369	Hitachi	273,281,285,288
Briovega	276,283	ITT-Nokia	270,273,276,290 291,292,316
Bush(UK)	281	JVC	270,273,292,318 319,320,321,328
CANAL+	804	Lenco	325,355
CGM	270,277	Loewe Opta	272,278,369
Dansai	281	Logik	287,322,360
Decca(UK)	278	Luma	322
Dual	273,279	Luxor	285,291
Elbe	313	Magnasonic	291
Emerson	286	Marantz	272,278,301
Finlux	278	Matsui	287,322,332
Fisher	280,314,315,316	Memorex	282,314
Funai	359	Metz	272,275,294,369 370
GBC	281	Minerva	272,275,369
CEC(UK)	278	Mitsubishi	278,281,293,320

## VCR

Model	Code	Model	Code
Mitsubishi	362,751	REX	273,279,319
Multitech	281,325		270,273,279,292
NAD	363	SABA	295,318,319,321
NEC	273,313,320		326,337,338
Neckermann	270,272,273,278 285,286,369	Saisho	286,287,322,332 360
Nobilko	272,369	Salora	283,285,314
	270,273,279,292 295,296,297,318	Samsung	289
Nordmende	319,321,323,324 326,327,328,329 330	Sansui	320
	286,322,331,332 333,360	Sanyo	291,314,316,339
Osaki	282	Schneider	278,281,289
Otto Versand	278,285	Sears	315
Palladium	271,356	SEG	281,289
Panasonic	274,290,312,354	Seleco	309
Penney	313	Senta	277
Pentax	288	Sharp	301,302,341
Philips	278,302,334,335 336,369	Shinton	356
Phonola	175	Siemens	272,275,291,369
Pioneer	278,320,334,336 363,364,365	Sinudyne	278,287
		Sony	288,299,340,342 343,344,367,750
PYE	320	Tandberg	322
Quartz	314	Tatung	278
Quelle	272,275,278,286 298,369		270,273,279,292
RCA	349	Telefunken	318,319,321,323 330,345,346,347
		Telemeister	359
		Thomson	270,273,279,292 318,323,324,328
		Thom-Ferguson	270,273,300,303

## VCR

Model	Code	Model	Code
	304,305,306,308	Vector	313
Thorn-Ferguson	319,329,330,348	Victor	318,328,366
	368	Video	313
TMK	286	White	276,282
Toshiba	273,292,307	Westinghouse	
Uher	273,289	Xenon	322
Ultravox	276	Others	350,351,352,353

## SAT/DSS

Model	Code	Model	Code
AB	812	DNT	409,428,430
Aiba	407		487
Aifa Gold	810,811	Drake	376,445,446
AlphaStar	826		447,495
Amstrad	371,372,408	Dvnsat	491,492
	488		377,378,379
Ankaro	373		386,409,411
ANSA	821,822	Echostar	412,457,458
Apollo	402		460,461,462
Astra	372,409,488		486,800,821
ASTRX	840		827
Aura	430,487	EMME ESSE	463,464,465
Barcom	373	Eurosky	421
Benjamin	468	Eurostar	465
BEST	453	Finlux	414,415
Bush(UK)	402	Force	836
Cambridge	375	Fortec Star	808,809
CANAL+	804	Fracarro	380,381
Chaparral	374,410	Freecom	426

## SAT/DSS

Model	Code	Model	Code
FTE	399	Mitsubishi	489
Fuba	413	Morgans	421
Funtach	823,824	Multitech	422,478,493
Giucar Record	382,416	NEC	822
Grunding	383,400,402	Neckermann	421
Hanseatic	484	Network	394
Hirschmann	415	NOKIA	720,807
Hitachi	483,828,829	Obritech	426
HTS	827		394,395,400
Hughes	828,829	Pace	402,485,814
Huth	421,479		815
HWALIN	816	Palcom	396
ICX International	417	Palladium	421
ITT-Nokia	384,385,418	Palsat	423
Jeemon	386	Panasat	819
Jerrold	454	Panasonic	473,832
Johansson	387	Pansat	455
Kathrein	388,389,390	Philips	402,424,425
	419,469		477,803,830
Lenco	423,426,480		831
	481,482	Pioneer	474
Luxor	384,391,392	Premier	802
Macab	420	Primestat	454
Macom	444	Prosat	405,451,479
Magnavox	477,830,831	Quelle	393
Maspro	388,393,402	Radix	409,428,430
	490		487
Metz	383	RCA	450,818,835
MINA	494	RC-AD	456
Minerva	383,400,484	Redifusion(UK)	822



# SAT/DSS

Model	Code	Model	Code
Sakura	397,398	Thom-Ferguson	485
Salora	391,418	Toshiba	442,444,833
Samsung	459,475,476	TPS	805
SAT 100	372,488	Uniden	403,404,406
Sateco	426		443,830,831
Scientific Atlanta	452	United Satellite	440
SET	825,837,838	US Electronics	417
	839	Vector	430,487
Siemens	383	Viewstar	477
Sintrack	427	Vortic Star	801
Skymaster	479	Vtech	434
Snoy	472,834	Winer	387,449
Star	470	WISI	409,420,435
Strong	399,423,426		436,437,438
	480		439
STS	393	Zehnder	390
STV	413	Zenith	441,444,445
Sun Moon Star	813		446,447
Tadiran	817	Others	820
Tantec	396		
Technisat	409,428,429		
	430,431,487		
Technosat	467		
Tedelex	466		
Teknika	471		
Telemax	432		
Telemeister	398,409,428		
	430,469,487		
Thom-Ferguson	394,395,400		
	401,402,433		

# CABLE

Model	Code	Model	Code
ABC	452	KOKA	502,506
AEON	502	LEON	499
APO	516	OAK	500
Asiagiant	501,513	Paragon	806
BEST	498	Skygiant	511,512
Eastern	507,508,509	TADA	448,523
	510	Taicom	502
GMI	499,515,519	Tay Shoen	506,517
	521	Toshiba	522
IEEC	506,514	Trans	497,518,520
JEBSEE	496	Winer	501
Jerrold	417	WISO	503,504

# HIFI

Model	Code	Model	Code
Blaupunkt	568	Onkyo	536,537
Fisher	529	Panasonic	538
Hitachi	530	Pioneer	545
Kenwood	527,531,532	Sanyo	539
	533,534	Sharp	531
Lenco	595,596,597	Sherwood	540,541,577
	598,599,600		578
Nordmende	601	Sony	617
	535,549	Technics	542
		Yamaha	543,544



## CD

Model	Code	Model	Code
Aiwa	581	Philips	552,553,579
ATLE	579		604
Denon	547	Pioneer	554,555,610
Fisher	546	Proton	553
Haitai	548	Radiotone	549
Inkei	541	ROTEL	553,582,583
JBL	623,624	SAE	553
JVC	605	Sansui	603
Karcher	549	Sanyo	604,606
Kenwood	550,580	Sharp	550,566
Lenco	060,549	Sony	556,557,575
Luxor	528		607
Magnavox	553,576,604	Sylvania	553,604
Mission	553	Teac	608,611
NEC	551	Technics	558,609
Onkyo	613,614,615	Victor	605
	616	Yamaha	612

## LD/VCD/DVD

Model	Code	Model	Code
Aiwa	626	Kenwood	572,630,663
ANSA	671,672,673	Legend-V	650
Caravell	622	Magnavox	571
Daewoo	660	Micromega	675
DCS	642	Mitsubishi	662
Denca	665	Panasonic	573,574,629
Goldstar	633		639
Haitai	648	Philips	559,675
JVC	664	Pioneer	571,658

## LD/VCD/DVD

Model	Code	Model	Code
RCA	602,661,667	牡丹	649
Samsung	637,666	長虹(Chang Hong)	627,634
Sharp	628	奇聲三碟	641
Snoy	575,631,657	鬆立(Solive)	632
Tatung	659	皇牌(TCL)	627
Thonson	668	美多	644,655
Toshiba	571,640	新格(Shinco)	647
Zenith	570	麥科特(MKT)	651
Others	674	規華(SMC)	636
山星	627	厦星(Xiaxing)	652
日聲	627	愛多(IDALL)	635,653
天樂	643	銀河(Yinhe)	656
步步高(BBK)	654	熊貓(PANDA)	645
金格(Gynco)	646	聲王三碟	638

## AUX

Model	Code	Model	Code
Blaupunkt	569(VHS)	Philips	560(EQ)
Cabletime	524,525,526		561(PIP)
	(CTV)		562(TAPE)
Denon	564(TUNE)		565(TUNE)
Lenco	566(DECK)		567(DCC)
	585,586,587	ROTEL	584(TAPE)
	588,589,590		563(TAPE)
	591,592,593	Sony	575(CDV)
	594(CD)		618(TUNE)
		Others	625 (A-B-Switch)

FORMEMORYOF CODEOFYOURMODEL

TV1 :

TV2 :

VCR1 :

VCR2 :

SAT :

CABLE :

CD/DVD/HIFI :

AUX :

# URC 22C-15

UNIVERSAL  
REMOTE CONTROL

OPERATE:

TV\*VCR\*CABLE\*SATELLITE\*CD\*LD  
VCD\*DVD\*TAPE\*TURNER\*AMP

## INSTRUCTION BOOKLET

- WORK WITH MOST MAJOR BRANDS
- EASY SET UP INSTRUCTIONS INSIDE

RIGHT RESERVED TO IMPROVE  
SPECIFICATIONS WITHOUT NOTICE