



Go/No Go Test Script Specification, Electrical

Applicable for K320 and W200

Contents

- 1... General 4**
 - 1.1 About This Document 4
 - 1.2 Script Requirements 4
 - 1.3 Channel Allocation Table..... 5
 - 1.4 Power Level Allocation Table..... 5
 - 1.5 Test Limits..... 5
 - 1.6 Attenuation Factors 6
 - 1.7 Scripts..... 6
- 2... Test Sequence using an RF Shield Box and Coupler..... 6**
 - 2.1 Initializing and Call Setup 6
 - 2.2 Audio Loopback 8
 - 2.3 Measurement Group ALLMEAS LCH 900 8
 - 2.4 Measurement Group ALLMEAS MCH 900 8
 - 2.5 Measurement Group ALLMEAS HCH 900..... 9
 - 2.6 Measurement Group ALLMEAS LCH 1800 9
 - 2.7 Measurement Group ALLMEAS MCH 1800 10
 - 2.8 Measurement Group ALLMEAS HCH 1800..... 10
 - 2.9 Measurement Group ALLMEAS LCH 1900 11
 - 2.10 Measurement Group ALLMEAS MCH 1900 11
 - 2.11 Measurement Group ALLMEAS HCH 1900..... 12
- 3... Test Sequence using a Direct Line Connection 13**
 - 3.1 Initializing and Call Setup 13
 - 3.2 Audio Loopback 14
 - 3.3 Measurement Group ALLMEAS LCH 900 14
 - 3.4 Measurement Group ALLMEAS MCH 900 14
 - 3.5 Measurement Group ALLMEAS HCH 900..... 15
 - 3.6 Measurement Group ALLMEAS LCH 1800 15
 - 3.7 Measurement Group ALLMEAS MCH 1800 15
 - 3.8 Measurement Group ALLMEAS HCH 1800..... 16
 - 3.9 Measurement Group ALLMEAS LCH 1900 17
 - 3.10 Measurement Group ALLMEAS MCH 1900 17
 - 3.11 Measurement Group ALLMEAS HCH 1900..... 18
- 4... Attenuation Factors for Sony Ericsson K320..... 19**
 - 4.1 Using the Rohde & Schwarz RF Shield Box and Coupler 19
 - 4.2 Using a Direct Line Connection 19
- 5... W200i Test Sequence using an RF Shield Box and Coupler..... 20**
 - 5.1 Initializing and Call Setup 20



5.2 Audio Loopback 22

5.3 Measurement Group ALLMEAS LCH 900 22

5.4 Measurement Group ALLMEAS MCH 900 22

5.5 Measurement Group ALLMEAS HCH 900 23

5.6 Measurement Group ALLMEAS LCH 1800 23

5.7 Measurement Group ALLMEAS MCH 1800 24

5.8 Measurement Group ALLMEAS HCH 1800 24

5.9 Measurement Group ALLMEAS LCH 1900 25

5.10 Measurement Group ALLMEAS MCH 1900 25

5.11 Measurement Group ALLMEAS HCH 1900 26

6... W200i Test Sequence using a Direct Line Connection 27

6.1 Initializing and Call Setup 27

6.2 Audio Loopback 28

6.3 Measurement Group ALLMEAS LCH 900 28

6.4 Measurement Group ALLMEAS MCH 900 28

6.5 Measurement Group ALLMEAS HCH 900 29

6.6 Measurement Group ALLMEAS LCH 1800 29

6.7 Measurement Group ALLMEAS MCH 1800 30

6.8 Measurement Group ALLMEAS HCH 1800 30

6.9 Measurement Group ALLMEAS LCH 1900 31

6.10 Measurement Group ALLMEAS MCH 1900 31

6.11 Measurement Group ALLMEAS HCH 1900 32

7... W200a Test Sequence using an RF Shield Box and Coupler 33

7.1 Initializing and Call Setup 33

7.2 Audio Loopback 35

7.3 Measurement Group ALLMEAS LCH 850 35

7.4 Measurement Group ALLMEAS MCH 850 35

7.5 Measurement Group ALLMEAS HCH 850 36

7.6 Measurement Group ALLMEAS LCH 1900 36

7.7 Measurement Group ALLMEAS MCH 1900 37

7.8 Measurement Group ALLMEAS HCH 1900 37

7.9 Measurement Group ALLMEAS LCH 1800 38

7.10 Measurement Group ALLMEAS MCH 1800 38

7.11 Measurement Group ALLMEAS HCH 1800 39

8... W200a Test Sequence using a Direct Line Connection 40

8.1 Initializing and Call Setup 40

8.2 Audio Loopback 41

8.3 Measurement Group ALLMEAS LCH 850 41

8.4 Measurement Group ALLMEAS MCH 850 41

8.5 Measurement Group ALLMEAS HCH 850 42

8.6 Measurement Group ALLMEAS LCH 1900 42

8.7 Measurement Group ALLMEAS MCH 1900 43

8.8 Measurement Group ALLMEAS HCH 1900 43

8.9 Measurement Group ALLMEAS LCH 1800 44

8.10 Measurement Group ALLMEAS MCH 1800 44

8.11 Measurement Group ALLMEAS HCH 1800 45

9... Attenuation Factors 45

9.1 W200i loss values for the Rohde & Schwarz RF Shield Box and Coupler 46



9.2	W200i Loss Values for a Direct Line Connection	47
9.3	W200a Loss Values for the Rohde & Schwarz RF Shield Box and Coupler..	47
9.4	W200a Loss Values for a Direct Line Connection.....	48
10.	Revision History.....	49



1 General

1.1 About This Document

This document contains the test requirements for a GSM tri-band (900/1800/1900) pocket transceiver using an antenna coupler or direct line connection. These test sequences should be used as an arrival and verification test of radio functionality.

Tests are done in signaling mode, i.e. a call has been established to the test instrument. The test instrument controls the transceiver unit. RF performance is measured with an antenna coupler or the direct line connection, whichever method is selected.

1.2 Script Requirements

- The test should be designed so those users with little or no system expertise can perform accurate testing.
- The measurements should run automatically, though a certain amount of manual work is included (and mandatory), such as MS call setup (i.e. dialling number).
- It should be possible to print or store the measurement results.
- It should be possible to change the channels used in testing due to possible local radio interference. The ranges for these settings are specified under the *Channel Allocation Table*.
- All functions and settings should be protected in such a manner that the end-user cannot directly change them. (For example, a password or encrypted settings file.)
- The attenuation factors that should be used are stated in section 4. The test instrument must be capable of using different attenuation factors for RX and TX. It must also be possible to use various attenuation factors for different channels in each band.

NOTE! Any setups other than the one stated in this document must be discussed and exempted by Sony Ericsson to be approved.



1.3 Channel Allocation Table

Band	Ch definition	Any ARFCN of:
GSM900	Low	975-979
GSM900	Mid	36-40
GSM900	High	120-124
GSM 1800	Low	512-516
GSM 1800	Mid	697-701
GSM 1800	High	881-885
GSM1900	Low	512-516
GSM1900	Mid	658-662
GSM1900	High	806-810

1.4 Power Level Allocation Table

Band	PL definition	Powerlevel (PL)
GSM900	Lowest	19
GSM900	Mid	12
GSM900	Highest	5
GSM1800/1900	Lowest	15
GSM1800/1900	Mid	8
GSM1800/1900	Highest	0

1.5 Test Limits

The test limits for each measurement are specified in the Sequence Tables.

1. Since the coupler introduces higher measurement inaccuracy, some measurements may have wider limits than stated in the GSM specifications.
2. The direct line connection limits conform to the phase 2 GSM specification.



1.6 Attenuation Factors

The different scripts must be configured with the correct attenuation factors and named after the product that they are designed to test. The attenuation factors to be used are stated in section 4.

1.7 Scripts

General scripts for the different system/system combinations may be developed. No hand-over is necessary if not stated, however, Sony Ericsson mobiles are capable of hand-over between GSM900/1800 and might therefore be used to decrease test time.

2 Test Sequence using an RF Shield Box and Coupler

2.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

2.1.1 Sequence

1. Initialize instrument
2. Insert a test-SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Position the mobile in the coupler according to the picture.



Rohde & Schwarz Shield Box and Coupler

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.
6. Close the lid on the shielding box.



2.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

2.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

2.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

2.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

2.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



2.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

2.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

2.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

2.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units



2.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

2.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

2.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

2.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg



2.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

2.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

2.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

2.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



2.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

2.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

2.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.

3 Test Sequence using a Direct Line Connection

3.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

3.1.1 Sequence

1. Initialize instrument
2. Insert a test-SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results. A dummy battery can also be used.
3. Connect the mobile to the RF fixture according to the picture. (Install RF cable to RF probe.)



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.



3.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge pass or fail before the test is continued.

3.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

3.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

3.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

3.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



3.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

3.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

3.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

3.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

3.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
-----------	-------	------



TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

3.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

3.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

3.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg



3.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

3.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

3.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

3.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



3.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

3.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

3.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.

4 Attenuation Factors for Sony Ericsson K320

4.1 Using the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the Sony Ericsson K320 in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	10.08	13.66
	Mid	12.13	10.61
	High	12.58	10.53
GSM 1800	Low	9.41	11.91
	Mid	8.19	10.17
	High	8.08	7.98
GSM 1900	Low	9.52	8.18
	Mid	11.30	8.52
	High	14.36	8.92

* See Channel Allocation Table

4.2 Using a Direct Line Connection

- The following values shall be used when testing the Sony Ericsson K320 with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable (**SEMC part # RPM 119 855**), RF Probe (**SEMC part # RNT 403 303/001**) and RF Fixture (**SEMC part # NTZ 112 1066**).

Band	Channel*	Attenuation	
		RX	TX
GSM 900	ALL	0.8	0.8
GSM 1800	ALL	1.3	1.3
GSM 1900	ALL	1.3	1.3

* See Channel Allocation Table




5 W200i Test Sequence using an RF Shield Box and Coupler

5.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

5.1.1 Sequence

7. Initialize instrument
8. Insert a test SIM and attach a fully charged standard battery to the mobile (install battery cover before testing). It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
9. Position the mobile in the coupler according to the picture.

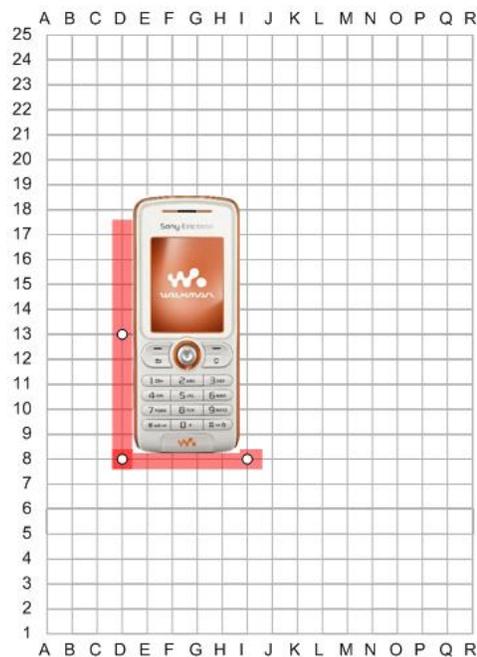

Rohde & Schwarz Shield Box and Coupler

10. Turn on the mobile and wait for registration.
11. Set up a call to the instrument or let the instrument call the MS.
12. Close the lid on the shielding box.



5.2 Audio Loopback

4. Set power level to high.
5. Activate audio loopback in the instrument.
6. Operator must acknowledge passed or failed before the test is continued.

5.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

5.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

5.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

5.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



5.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

5.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

5.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

5.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units



5.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

5.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

5.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

5.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg



5.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

5.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

5.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

5.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



5.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

5.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg

5.11.2 Call Disconnect Sequence

3. Disconnect call.
4. End test.

6 W200i Test Sequence using a Direct Line Connection

6.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

6.1.1 Sequence

6. Initialize instrument
7. Insert a Test SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
8. Connect the mobile to the RF fixture according to the picture.



9. Turn on the mobile and wait for registration.
10. Set up a call to the instrument or let the instrument call the MS.



6.2 Audio Loopback

4. Set power level to high.
5. Activate audio loopback in the instrument.
6. Operator must acknowledge passed or failed before the test is continued.

6.3 Measurement Group ALLMEAS LCH 900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 900	

6.3.1 Sequence

Measurement	Test Limits	Unit
TX power	33 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

6.4 Measurement Group ALLMEAS MCH 900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 900	

6.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



6.5 Measurement Group ALLMEAS HCH 900

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 900	

6.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

6.6 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

6.6.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units



6.7 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

6.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

6.8 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

6.8.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg



6.9 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

6.9.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

6.10 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

6.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



6.11 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

6.11.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg

6.11.2 Call Disconnect Sequence

1. Disconnect call.
2. End test.




7 W200a Test Sequence using an RF Shield Box and Coupler

7.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

7.1.1 Sequence

1. Initialize instrument
2. Insert a test SIM and attach a fully charged standard battery to the mobile (install battery cover before testing). It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Position the mobile in the coupler according to the picture.

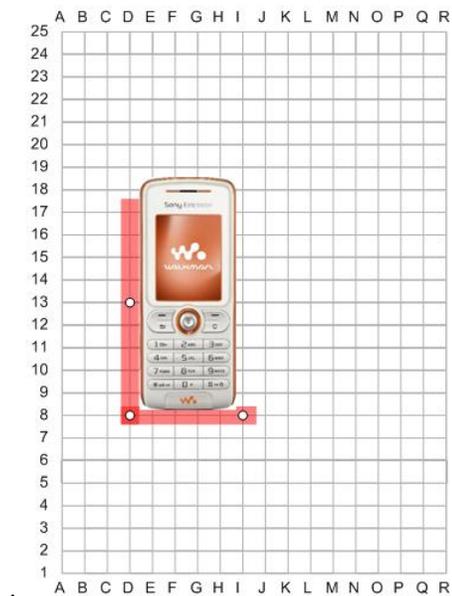

. Rohde & Schwarz Shield Box and Coupler

4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.
6. Close the lid on the shielding box.



7.2 Audio Loopback

7. Set power level to high.
8. Activate audio loopback in the instrument.
9. Operator must acknowledge passed or failed before the test is continued.

7.3 Measurement Group ALLMEAS LCH 850

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 850	

7.3.1 Sequence

Measurement	Test Limits	Unit
TX power	29 +/-4	dB
RMS Phase error	0 +/-5	deg
Rx Level	34-50	dB
Rx Quality	0-3	Units

7.4 Measurement Group ALLMEAS MCH 850

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 850	

7.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



7.5 Measurement Group ALLMEAS HCH 850

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 850	

7.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-7	dB
RMS Phase error	0 +/-5	deg

7.6 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

7.6.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units



7.7 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

7.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units

7.8 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

7.8.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase error	0 +/-5	deg



7.9 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

7.9.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-4	dB
RMS Phase Error	0 +/-5	deg
Rx Level	34-50	dB
RX Quality	0-3	Units

7.10 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

7.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-5	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	2-14	dB
Rx Quality	0-3	Units



7.11 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

7.11.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-7	dB
RMS Phase error	0 +/-5	deg

7.11.2 Call Disconnect Sequence

5. Disconnect call.
6. End test.

8 W200a Test Sequence using a Direct Line Connection

8.1 Initializing and Call Setup

Parameter	Value	Unit
BCCH	Mid	Ch
TCH	Mid	Ch
TX power level	High	PL
RF output power	-40	dBm
System	GSM 900	

8.1.1 Sequence

1. Initialize instrument
2. Insert a test-SIM and attach a fully charged standard battery to the mobile. It's very important that a fully charged battery is used otherwise there is a high risk for incorrect test results.
3. Connect the mobile to the RF fixture according to the picture.



4. Turn on the mobile and wait for registration.
5. Set up a call to the instrument or let the instrument call the MS.



8.2 Audio Loopback

1. Set power level to high.
2. Activate audio loopback in the instrument.
3. Operator must acknowledge passed or failed before the test is continued.

8.3 Measurement Group ALLMEAS LCH 850

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 850	

8.3.1 Sequence

Measurement	Test Limits	Unit
TX power	29 +/-2	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
Rx Quality	0-3	Units

8.4 Measurement Group ALLMEAS MCH 850

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 850	

8.4.1 Sequence

Measurement	Test Limits	Unit
TX power	19 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



8.5 Measurement Group ALLMEAS HCH 850

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 850	

8.5.1 Sequence

Measurement	Test Limits	Unit
TX power	5 +/-5	dB
RMS Phase error	0 +/-5	deg

8.6 Measurement Group ALLMEAS LCH 1900

Parameter	Value	Unit
TCH	Low	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1900	

8.6.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units



8.7 Measurement Group ALLMEAS MCH 1900

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1900	

8.7.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units

8.8 Measurement Group ALLMEAS HCH 1900

Parameter	Value	Unit
TCH	High	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1900	

8.8.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase error	0 +/-5	deg



8.9 Measurement Group ALLMEAS LCH 1800

Parameter	Value	Unit
TCH	Low	Ch
TX power level	High	PL
RF output power	-68	dBm
System	GSM 1800	

8.9.1 Sequence

Measurement	Test Limits	Unit
TX power	30 +/-2	dB
RMS Phase Error	0 +/-5	deg
Rx Level	36-48	dB
RX Quality	0-3	Units

8.10 Measurement Group ALLMEAS MCH 1800

Parameter	Value	Unit
TCH	Mid	Ch
TX power level	Mid	PL
RF output power	-102	dBm
System	GSM 1800	

8.10.1 Sequence

Measurement	Test Limits	Unit
TX power	14 +/-3	dB
RMS Phase error	0 +/-5	deg
Peak Phase error	0 +/-20	deg
Freq. error	+/-0.1 ppm	Hz
Rx Level	4-12	dB
Rx Quality	0-3	Units



8.11 Measurement Group ALLMEAS HCH 1800

Parameter	Value	Unit
TCH	High	Ch
TX power level	Low	PL
RF output power	-68	dBm
System	GSM 1800	

8.11.1 Sequence

Measurement	Test Limits	Unit
TX power	0 +/-5	dB
RMS Phase error	0 +/-5	deg

8.11.2 Call Disconnect Sequence

- a. Disconnect call.
- b. End Test.

9 Attenuation Factors



9.1 W200i loss values for the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the W200i in the Rohde & Schwarz RF shield box (R&S part # 1150.1008.02) using the Rohde & Schwarz coupler (R&S part # 1150.0801.02) and SEMC RF-cable (SEMC part # RPM 119 855). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

NOTE! These values are only valid if you using the Grid Positioning Plate (R&S part number 1158.9789.00)

Band	Channel*	Attenuation	
		RX	TX
GSM 900	Low	9.70	7.19
	Mid	12.00	6.90
	High	14.55	7.87
GSM 1800	Low	6.90	8.36
	Mid	6.30	6.53
	High	5.80	6.66
GSM 1900	Low	6.35	6.63
	Mid	8.00	5.37
	High	12.55	4.97

- See Channel Allocation Table



9.2 W200i Loss Values for a Direct Line Connection

2. The following values shall be used when testing the W200i with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF-cable cable (**SEMC part # RPM 119 855**), RF Probe (**SEMC part # RNT 403 303/001**) and RF Fixture (**SEMC part # NTZ 112 1066**).

Band	Channel*	Attenuation	
		RX	TX
GSM 900	ALL	0.8	0.8
GSM 1800	ALL	1.3	1.3
GSM 1900	ALL	1.3	1.3

* See Channel Allocation Table

9.3 W200a Loss Values for the Rohde & Schwarz RF Shield Box and Coupler

The following values shall be used when testing the W200a in the Rohde & Schwarz RF shield box (**R&S part # 1150.1008.02**) using the Rohde & Schwarz coupler (**R&S part # 1150.0801.02**) and SEMC RF-cable (**SEMC part # RPM 119 855**). A precision type N Male to SMA Female adapter is required to connect the cable to the RF shield box.

NOTE! These values are only valid if you using the Grid Positioning Plate (**R&S part number 1158.9789.00**)

Band	Channel*	Attenuation	
		RX	TX
GSM 850	Low	7.35	8.00
	Mid	8.70	10.42
	High	6.90	11.55
GSM 1800	Low	6.45	10.23
	Mid	6.80	10.49
	High	6.70	9.32
GSM 1900	Low	6.30	5.98
	Mid	6.70	4.90
	High	8.00	5.33

- See Channel Allocation Table

9.4 W200a Loss Values for a Direct Line Connection

- The following values shall be used when testing the W200a with a Direct Line connection. The Direct Line connection shall consist of a SEMC RF- cable (**SEMC part # RPM 119 855**), RF Probe (**SEMC part # RNT 403 303/001**) and RF Fixture (**SEMC part # NTZ 112 1066**).

Band	Channel*	Attenuation	
		RX	TX
GSM 850	ALL	0.8	0.8
GSM 1800	ALL	1.3	1.3
GSM 1900	ALL	1.3	1.3

* See Channel Allocation Table



10 Revision History

Rev.	Date	Changes / Comments
A	2006-10-27	Initial Release
B	2007-05-07	W200 added
C	2007-09-26	Updated the part numbers for the tools required to perform a Conducted GNG test on the W200