


### Code Word

A group of code bit is called a code word, a code word consists of 12 AD bit followed by 1 SYNC.Bit. The 12 AD bits is address code or data code according to the different suffix of LX2272. See the next diagram:

A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	SYN
										0		C

### Application Circuit Diagram

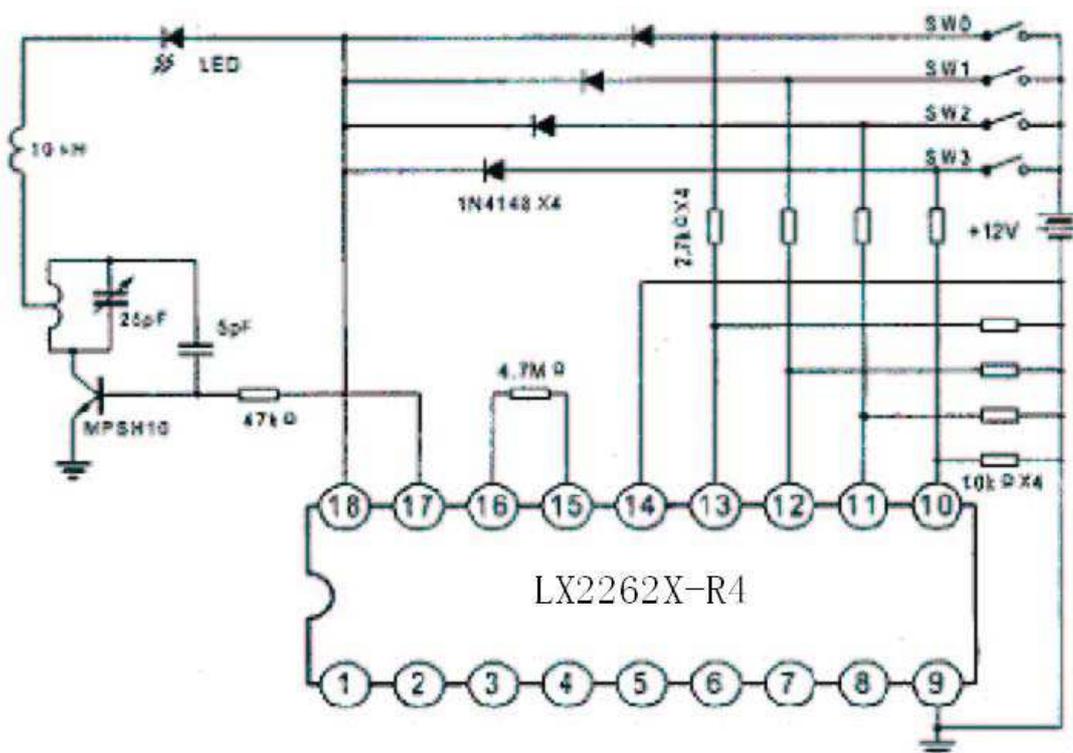

UHF frequency band 4 data transmitting circuit