



TROUBLESHOOTING GUIDE


1. NO POWER

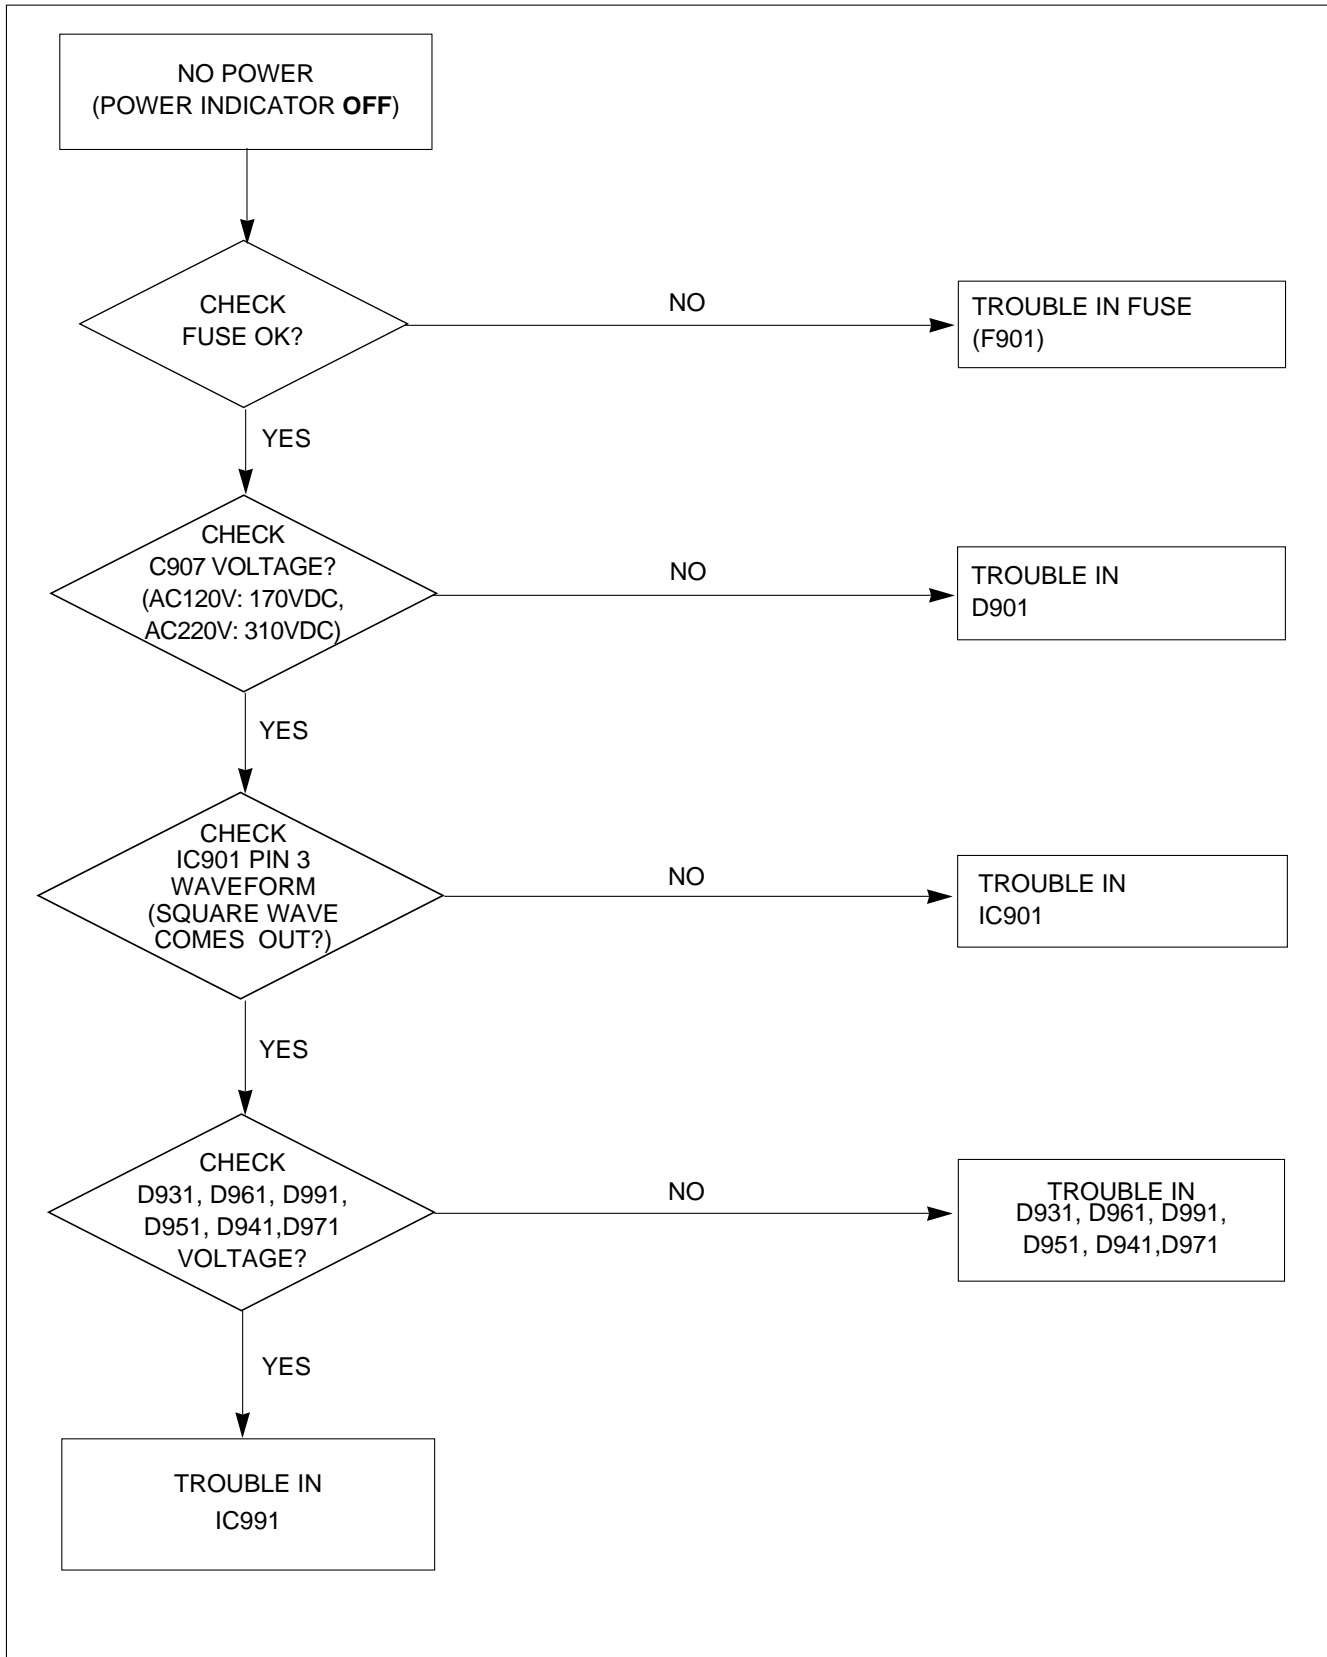


2. NO CHARACTER

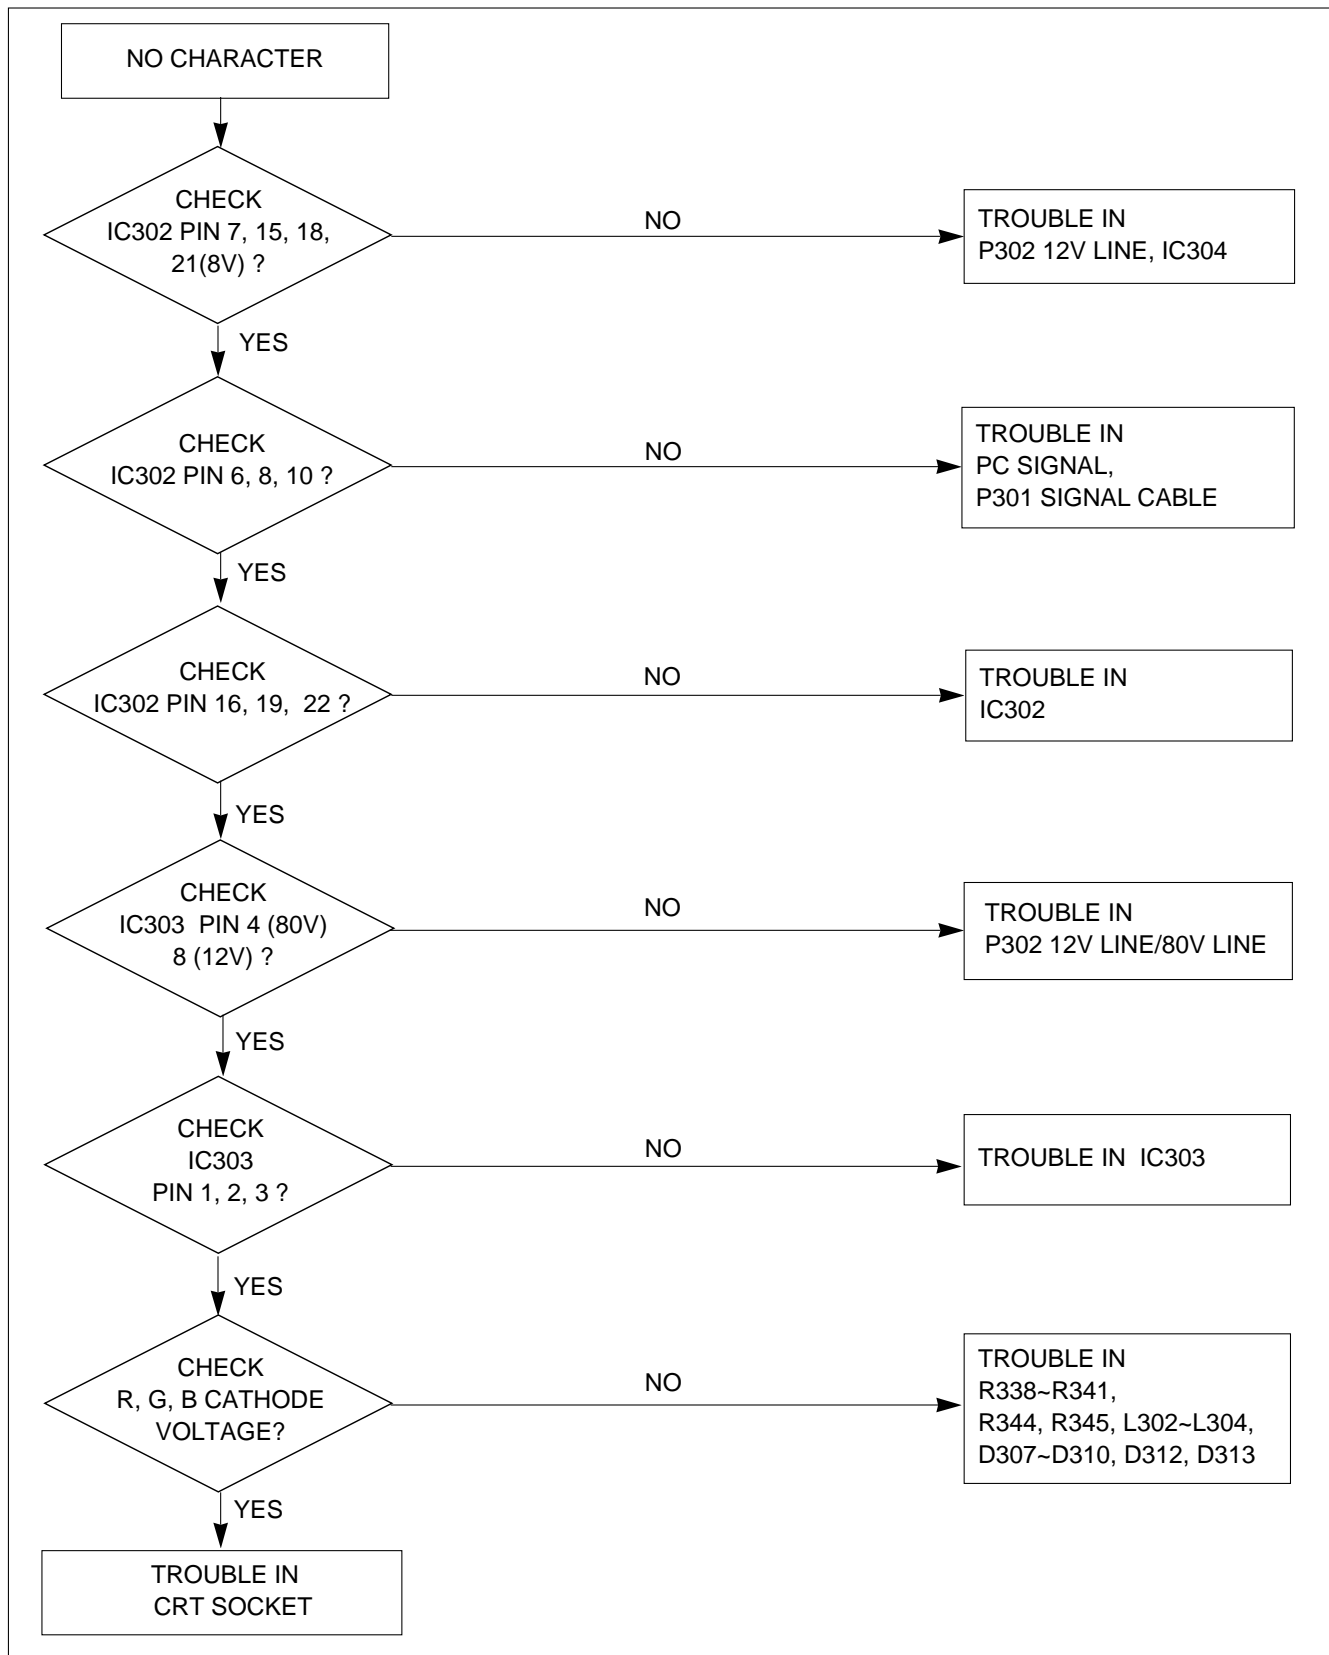

3. NO RASTER

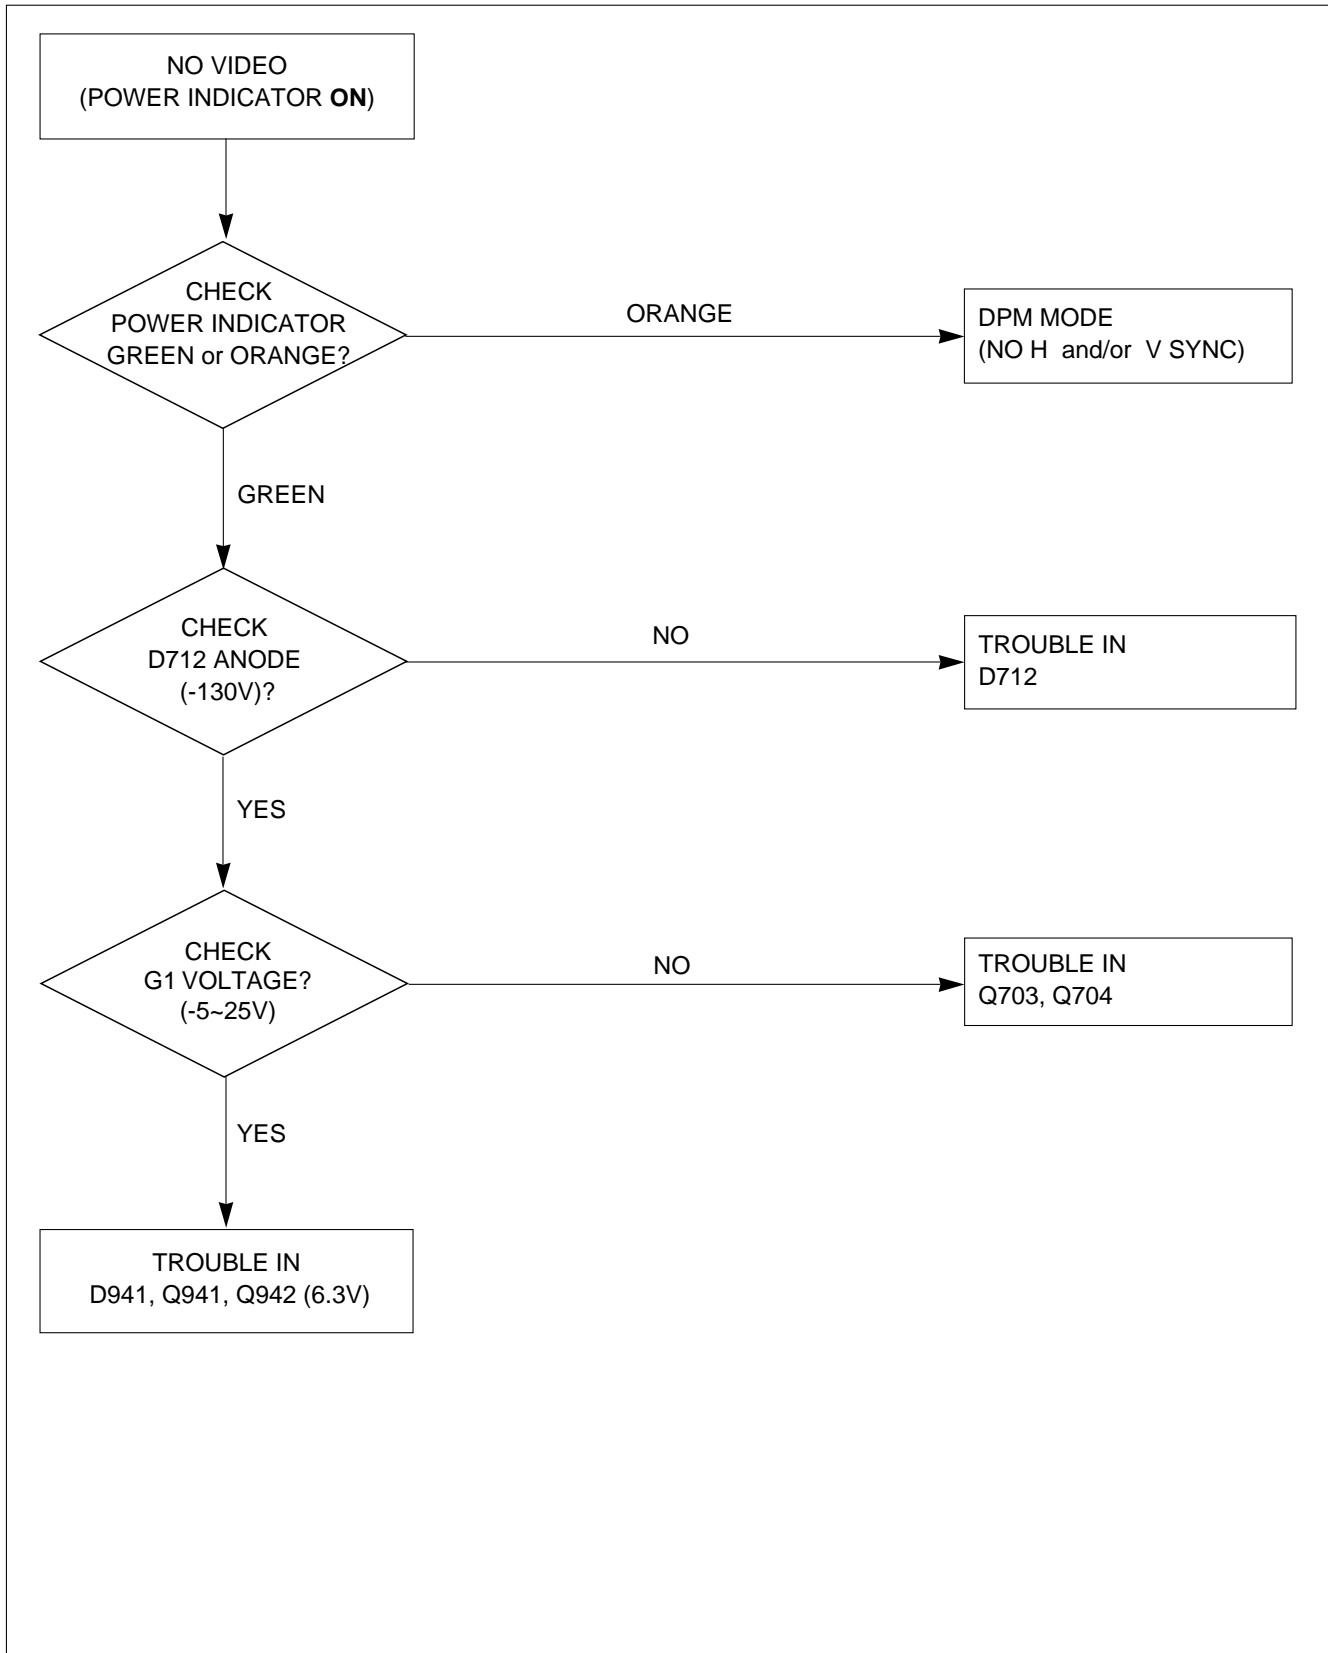


4. TROUBLE IN H-LINEARITY

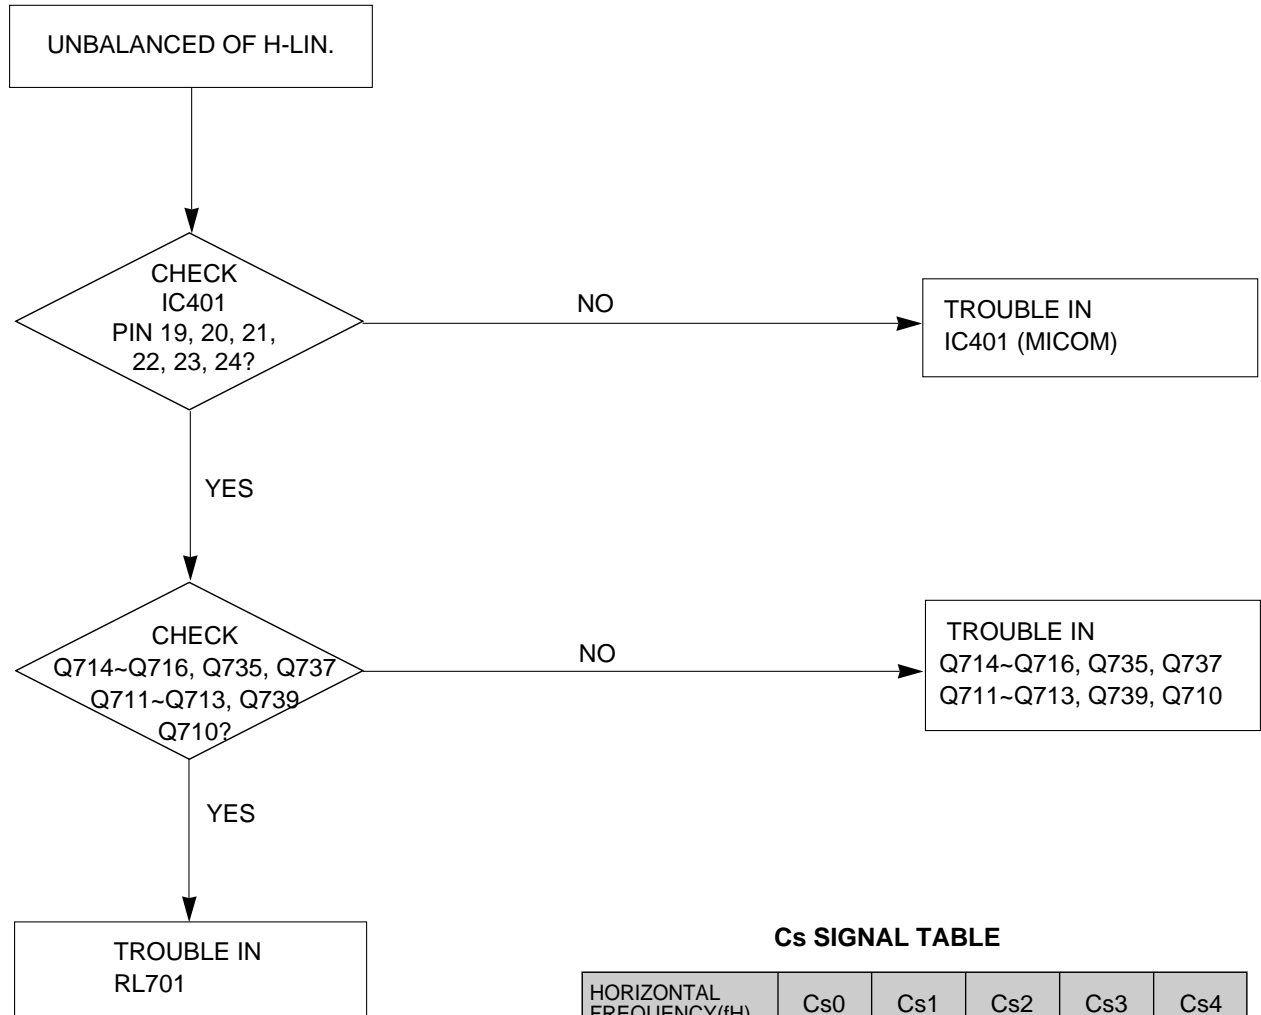


Cs SIGNAL TABLE

HORIZONTAL FREQUENCY(fh)	Cs0	Cs1	Cs2	Cs3	Cs4
66K ~ 39K	H	H	H	H	H
63K ~ 66K	H	H	L	H	H
57K ~ 63K	H	L	H	H	H
49K ~ 57K	H	L	L	H	H
46K ~ 49K	L	H	H	H	H
43K ~ 46K	L	L	H	H	H
36K ~ 43K	L	H	H	L	H
33K ~ 36K	L	H	H	L	L
30K ~ 33K	L	L	L	L	L


5. NO VERTICAL DEFLECTION

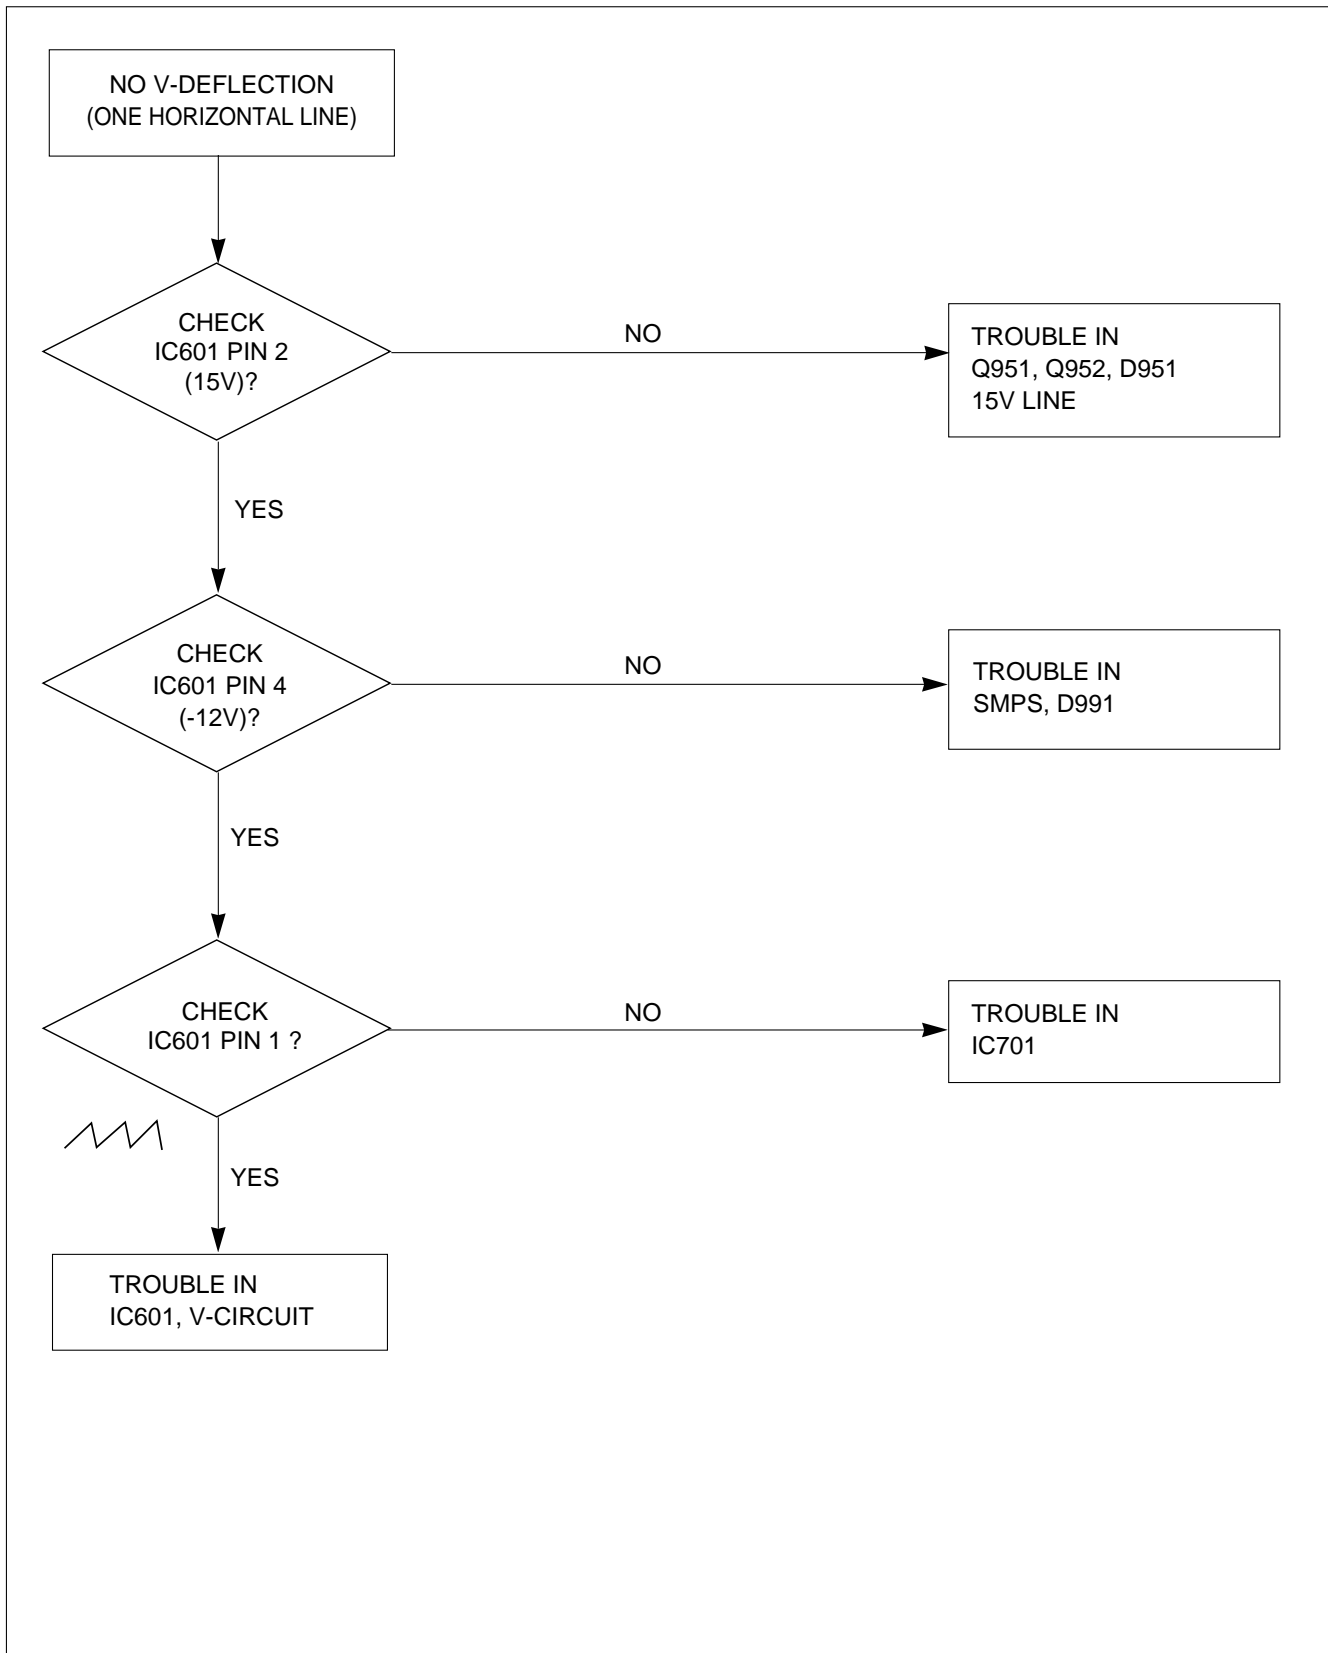

6. TROUBLE IN OSD

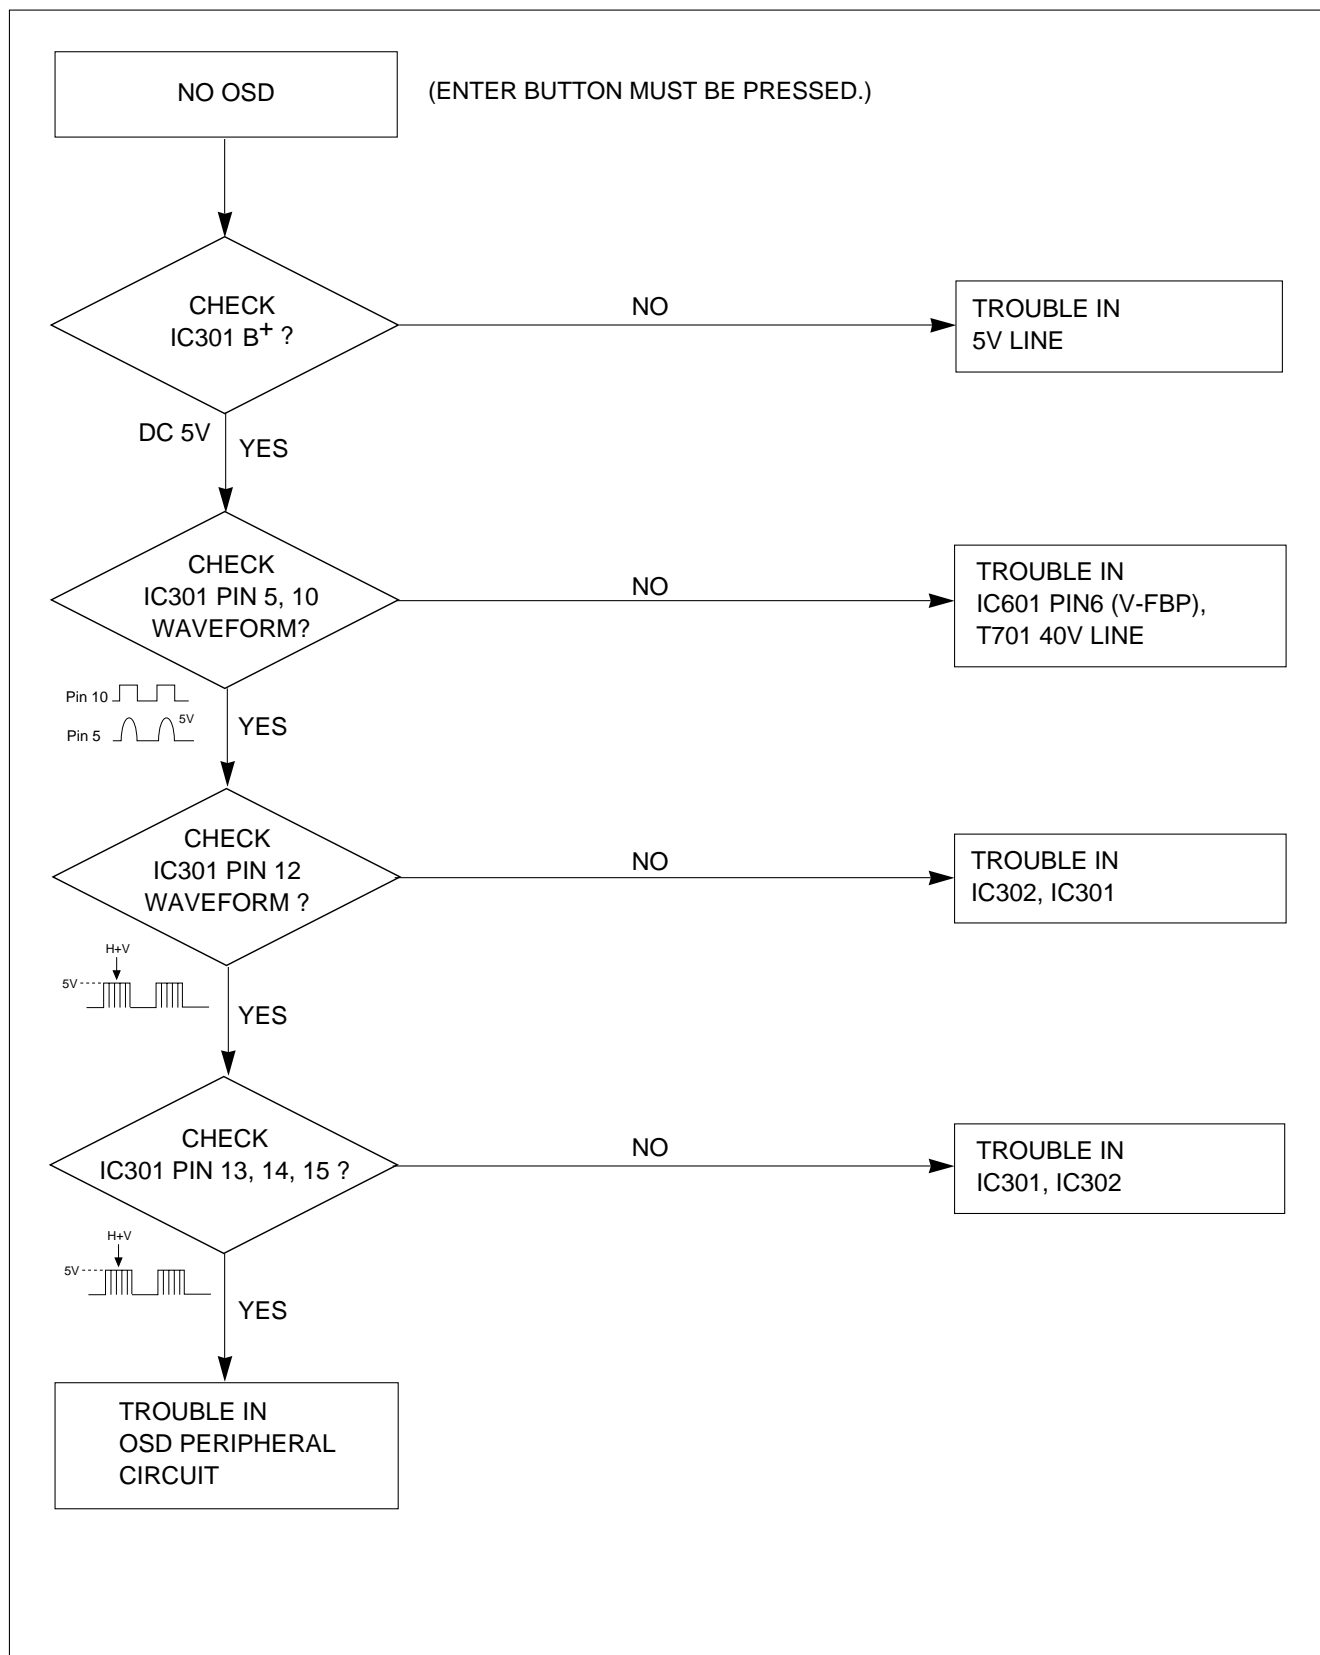


7. TROUBLE IN DPM

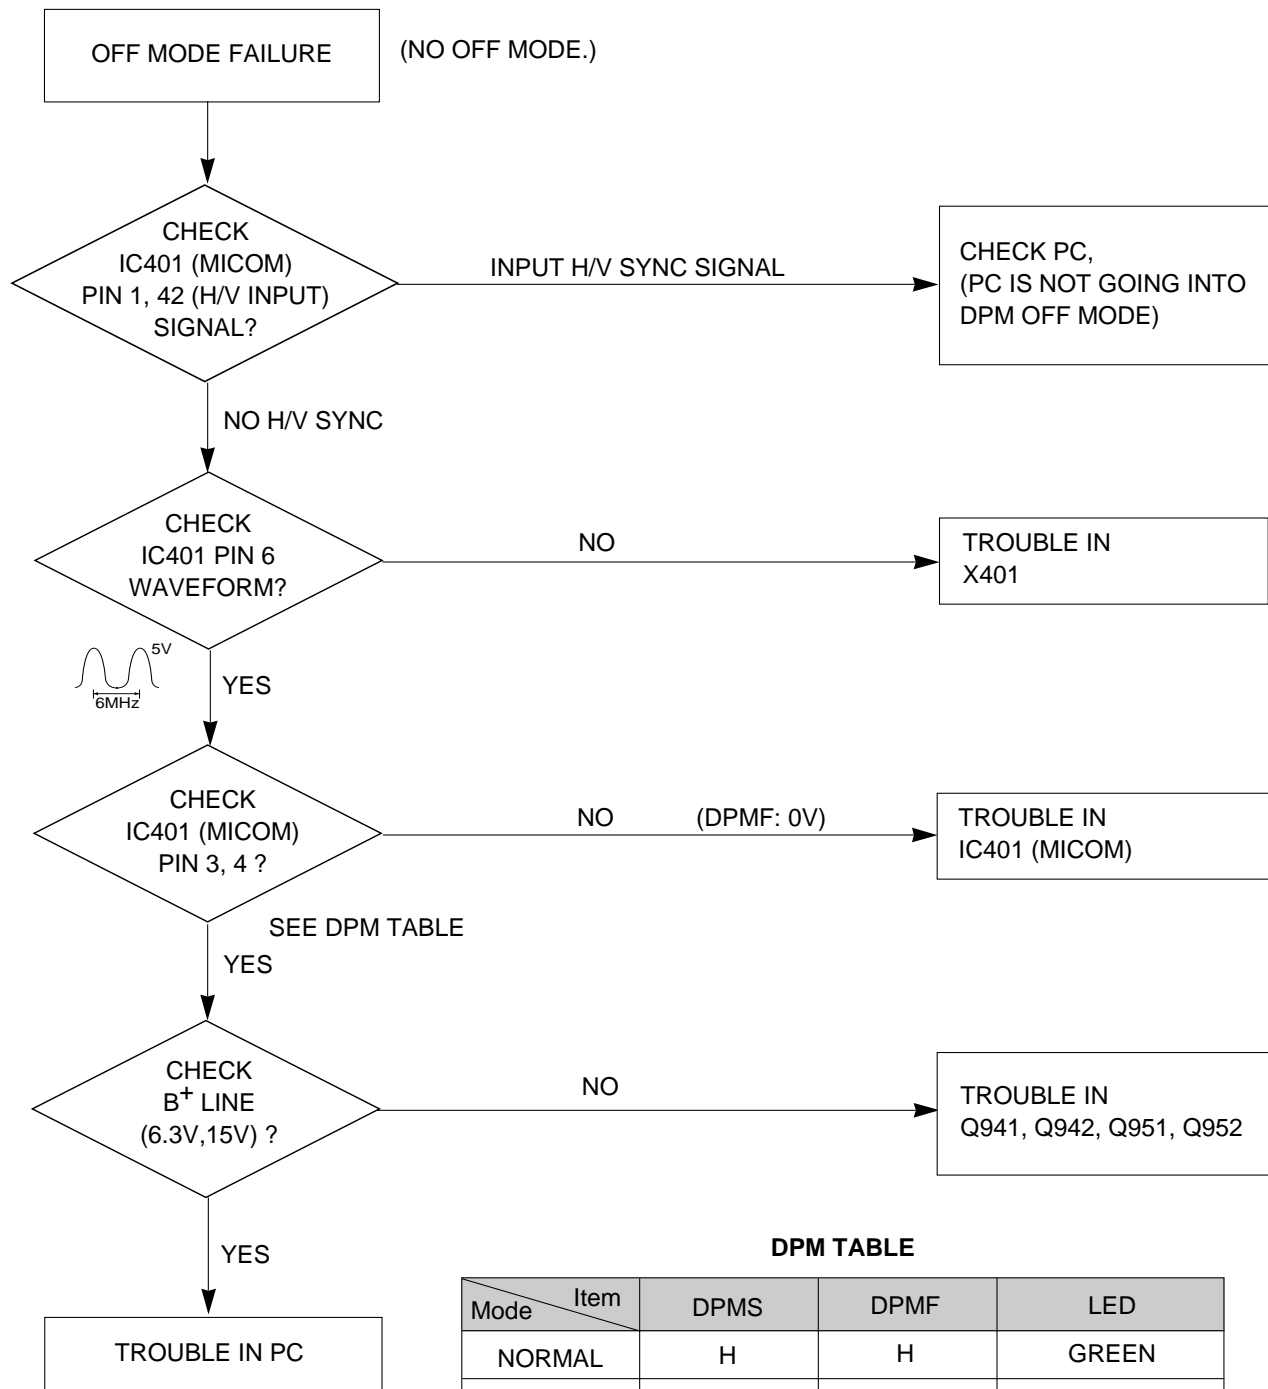

DPM TABLE

Mode \ Item	DPMS	DPMF	LED
NORMAL	H	H	GREEN
STAND-BY	L	H	AMBER
SUSPEND	L	H	AMBER
OFF	L	L	AMBER

8. NO DEGAUSSING

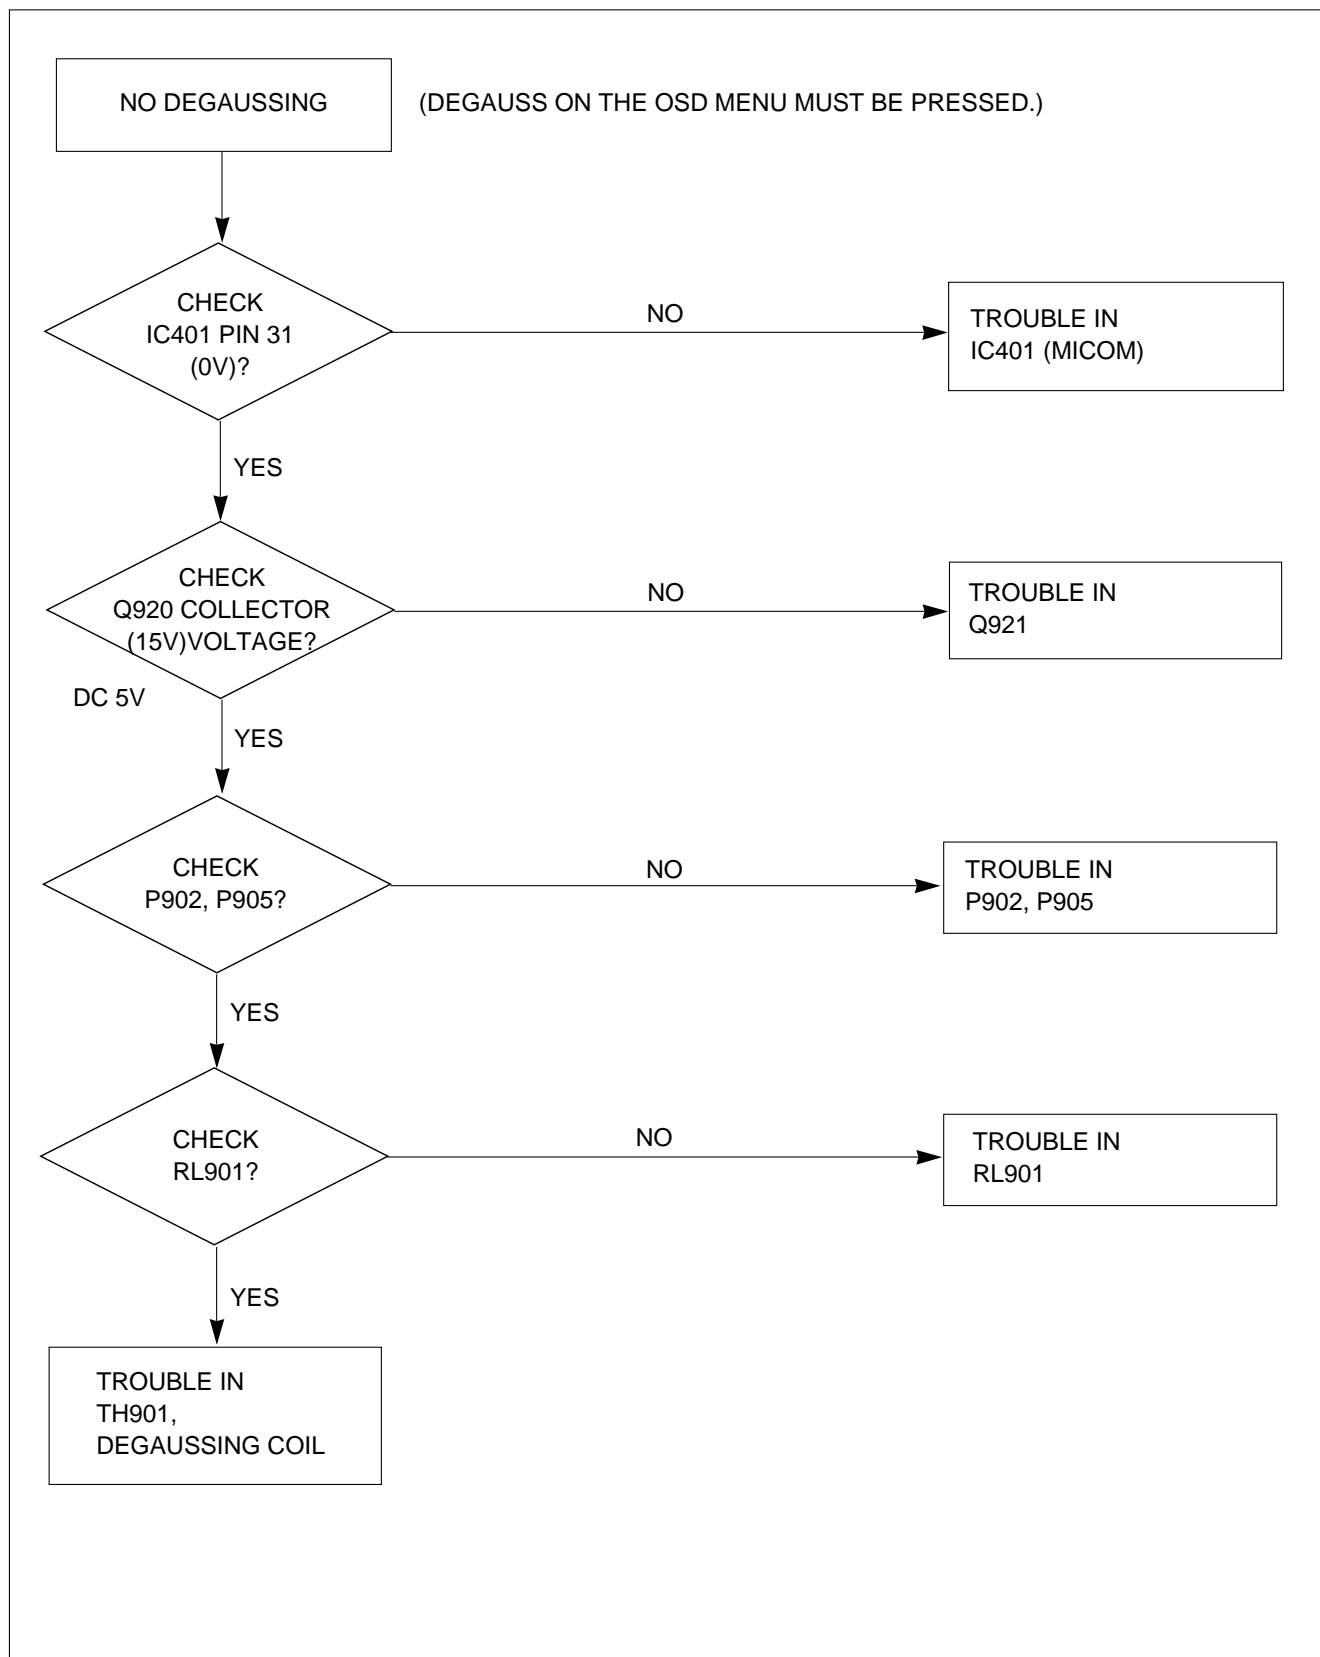

9. NO TILT (NO ROTATION)

