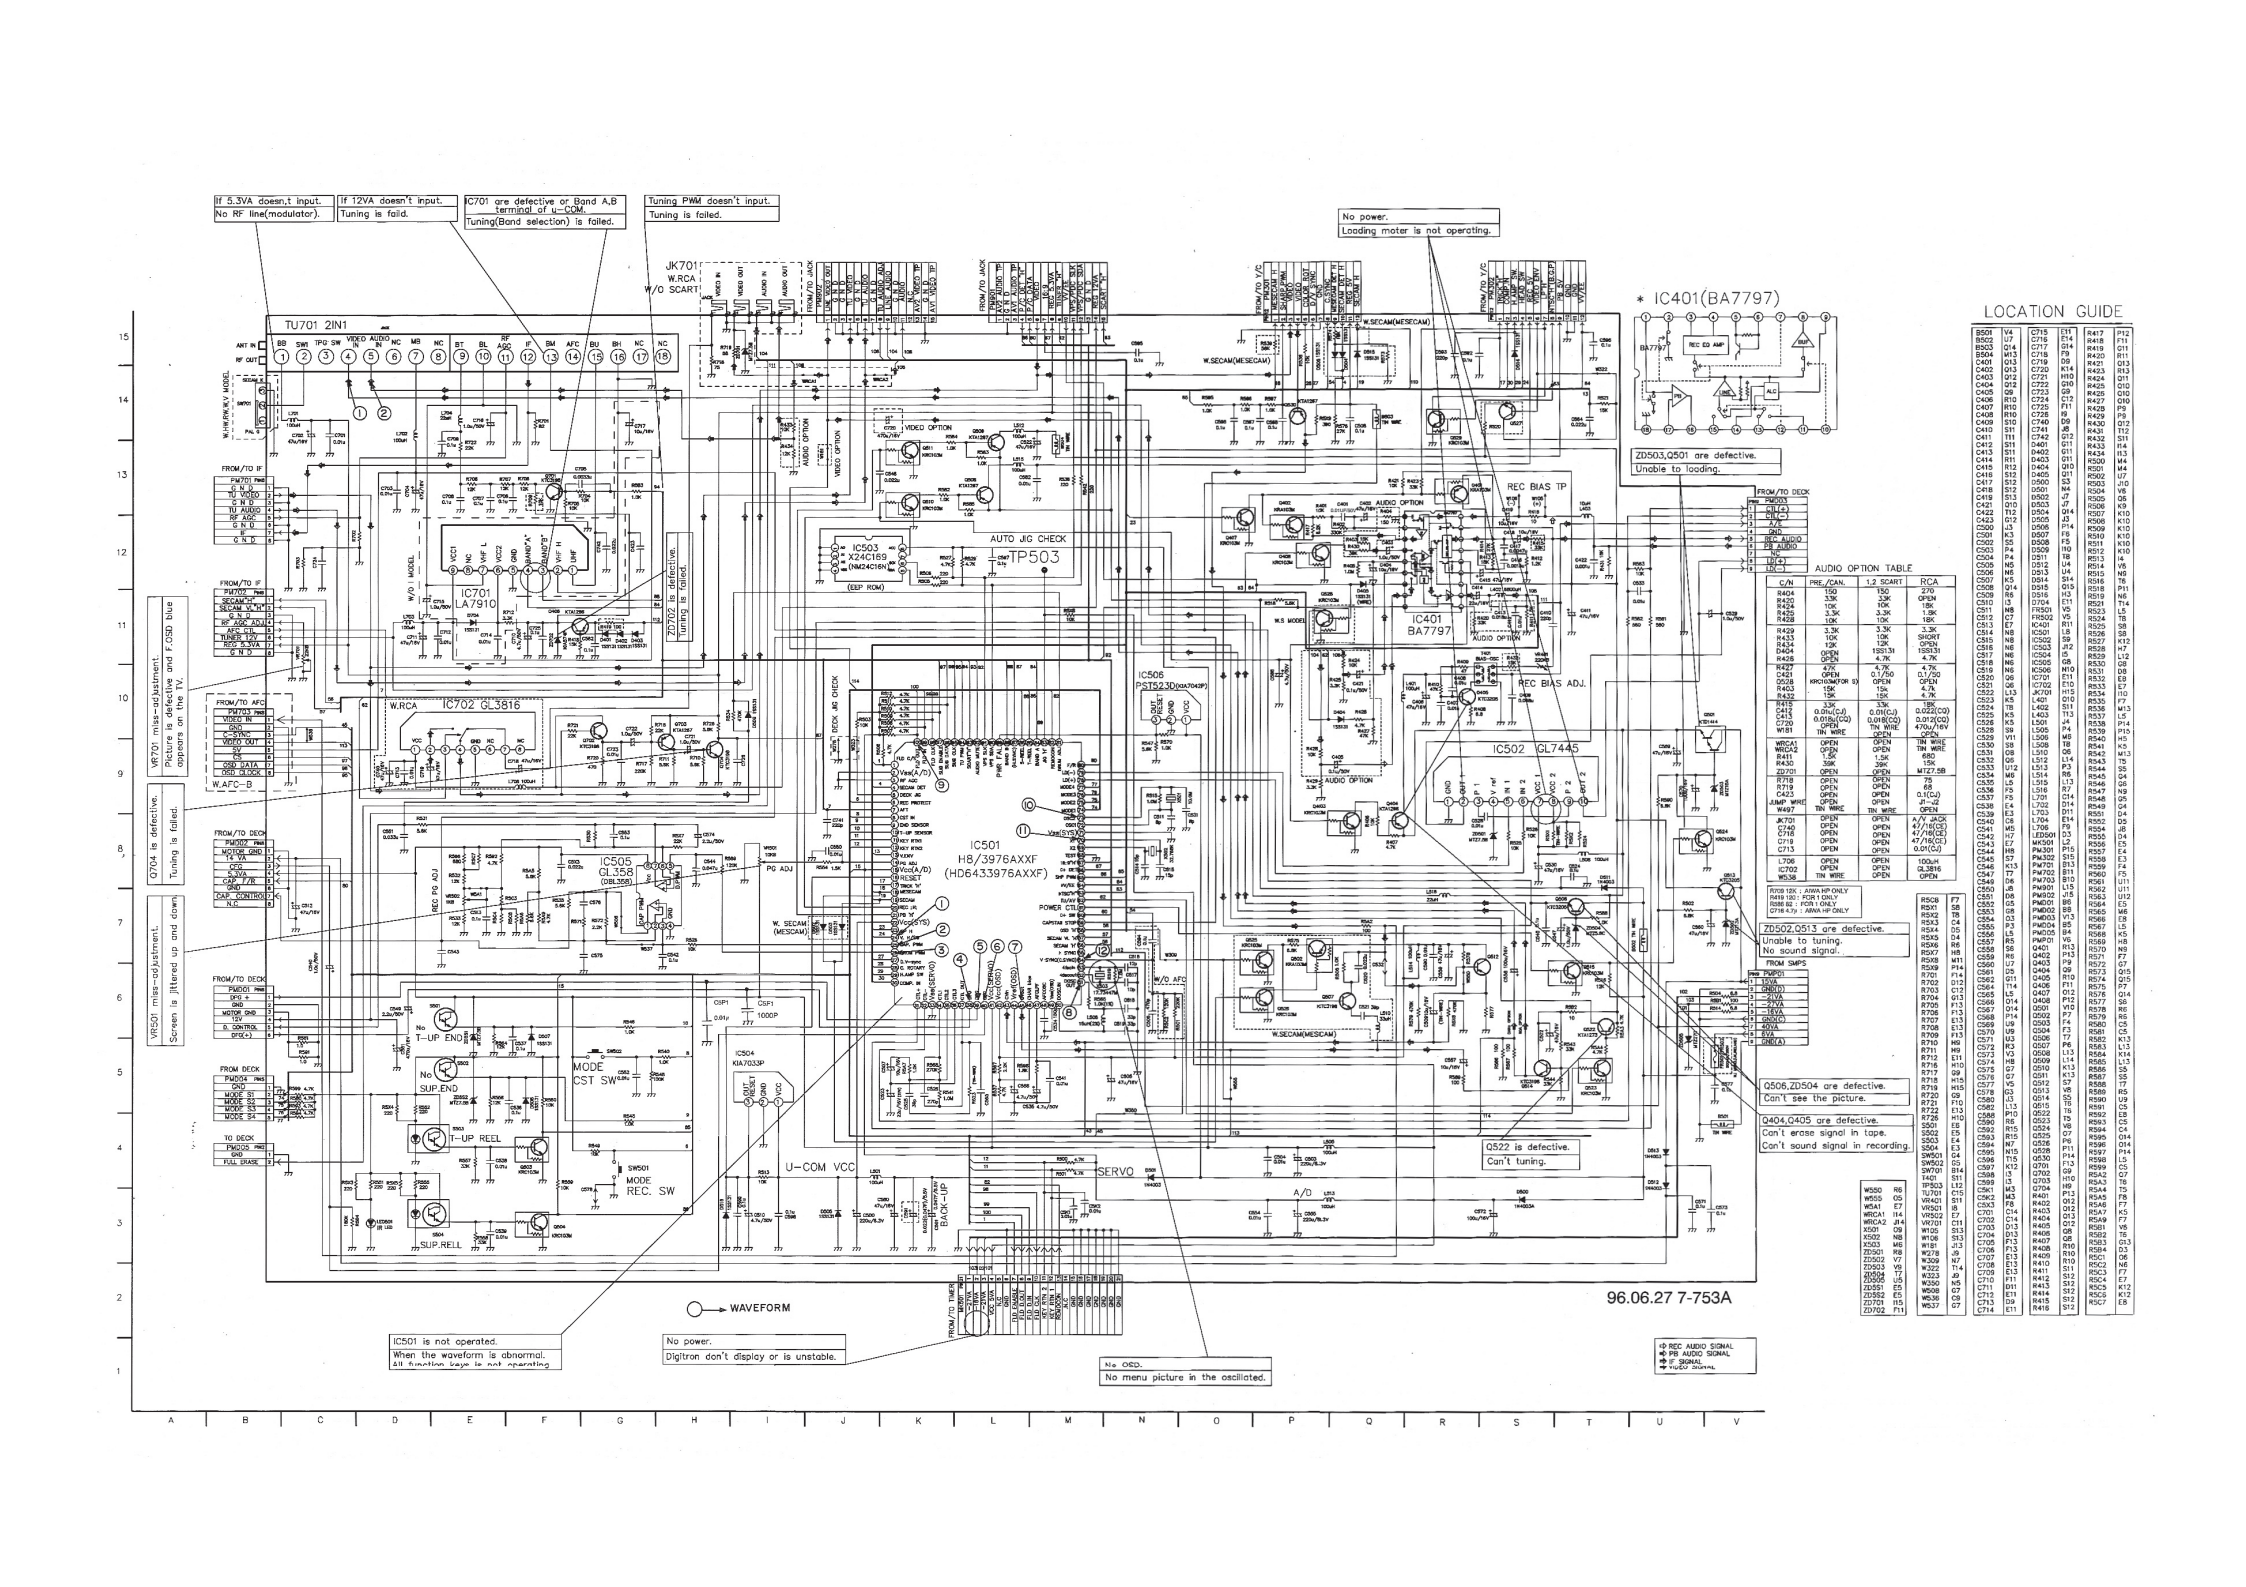
If 5.3VA doesn,t input.
No RF line(modulator).
If 12VA doesn't input.
Tuning is faild.
IC701 are defective or Band A,B terminal of u-COM.
Tuning(Band selection) is failed.
Tuning PWM doesn't input.
Tuning is failed.
No power.
Loading moter is not operating.
* IC401(BA7797)
LOCATION GUIDE
TU701 2IN1
JK701
W.RCA
W/O SCART
IC701
LA7910
IC702 GL3816
IC501
H8/3976AXXF
(HD6433976AXXF)
IC502 GL7445
IC503
X24C16S
(NM24C16N)
(EEP ROM)
IC504
KIA7033P
IC505
GL358
(DBL358)
IC506
PST523D(0A7042P)
IC401
BA7797
TP503
AUTO JIG CHECK
REC BIAS TP
REC BIAS ADJ.
AUDIO OPTION
VIDEO OPTION
W.SECAM(MESECAM)
W.RCA
W/O MODEL
W.S MODEL
W/O AFC
W.AFC-B
W.DECK JIG CHECK
REC PG ADJ
PG ADJ
MODE
CST SW
MODE
REC. SW
SUP.END
T-UP END
T-UP REEL
SUP.REEL
U-COM VCC
SERVO
A/D
BACK-UP
WAVEFORM
96.06.27 7-753A
AUDIO OPTION TABLE
VR701 miss-adjustment
Picture is defective and F.OSD blue appears on the TV.
Q704 is defective.
Tuning is failed.
VR501 miss-adjustment.
Screen is jittered up and down.
Z0707 is defective.
Tuning is failed.
ZD503,Q501 are defective.
Unable to loading.
ZD502,Q513 are defective.
Unable to tuning.
No sound signal.
Q506,ZD504 are defective.
Can't see the picture.
Q404,Q405 are defective.
Can't erase signal in tape.
Can't sound signal in recording.
Q522 is defective.
Can't tuning.
IC501 is not operated.
When the waveform is abnormal.
All function keys is not operating.
No power.
Digitron don't display or is unstable.
No OSD.
No menu picture in the oscillated.
REC AUDIO SIGNAL
PB AUDIO SIGNAL
IF SIGNAL
VIDEO SIGNAL