K L M N O P Q R S

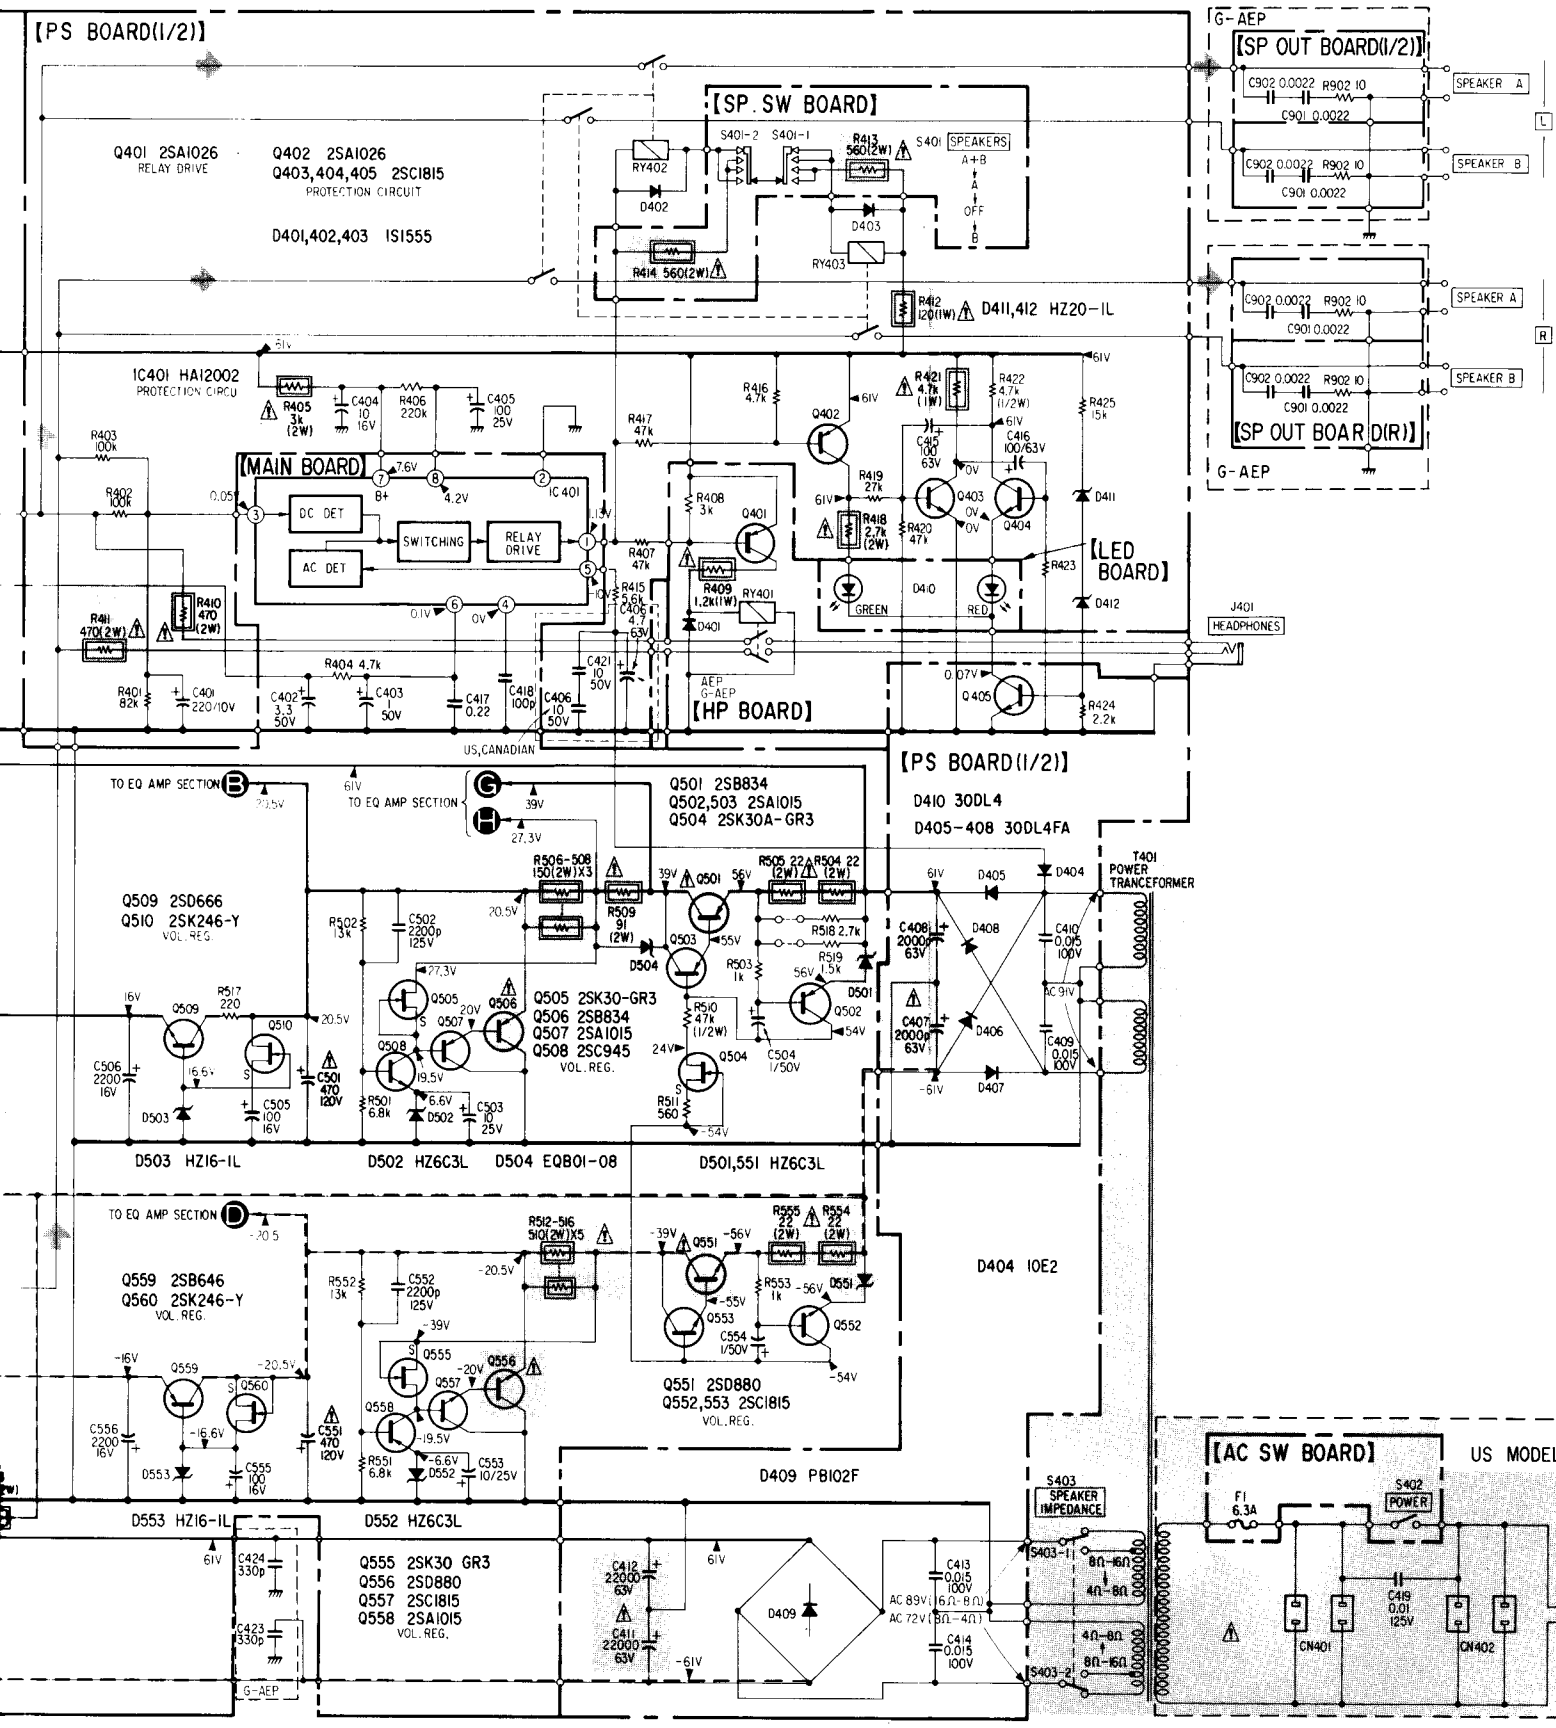
[PS BOARD(I/2)]
[SP. SW BOARD]
[SP OUT BOARD(I/2)]
[SP OUT BOARD(R)]
G-AEP
[MAIN BOARD]
[HP BOARD]
[LED BOARD]
[PS BOARD(I/2)]
[AC SW BOARD]
US MODEL
Q401 2SA1026
RELAY DRIVE
Q402 2SA1026
Q403,404,405 2SC1815
PROTECTION CIRCUIT
D401,402,403 1S1555
IC401 HA12002
PROTECTION CIRCU
DC DET
AC DET
SWITCHING
RELAY DRIVE
SPEAKERS
SPEAKER A
SPEAKER B
HEADPHONES
GREEN
RED
US,CANADIAN
TO EQ AMP SECTION
Q501 2SB834
Q502,503 2SA1015
Q504 2SK30A-GR3
D410 30DL4
D405-408 30DL4FA
T401
POWER
TRANCEFORMER
Q509 2SD666
Q510 2SK246-Y
VOL.REG.
Q505 2SK30-GR3
Q506 2SB834
Q507 2SA1015
Q508 2SC945
VOL.REG.
D503 HZ16-IL
D502 HZ6C3L
D504 EQB01-08
D501,551 HZ6C3L
D404 10E2
Q559 2SB646
Q560 2SK246-Y
VOL.REG.
Q551 2SD880
Q552,553 2SC1815
VOL.REG.
D409 PB102F
D553 HZ16-IL
D552 HZ6C3L
Q555 2SK30 GR3
Q556 2SD880
Q557 2SC1815
Q558 2SA1015
VOL.REG.
S403
SPEAKER
IMPEDANCE
S402
POWER
F1
6.3A
AC IN
CN401
CN402

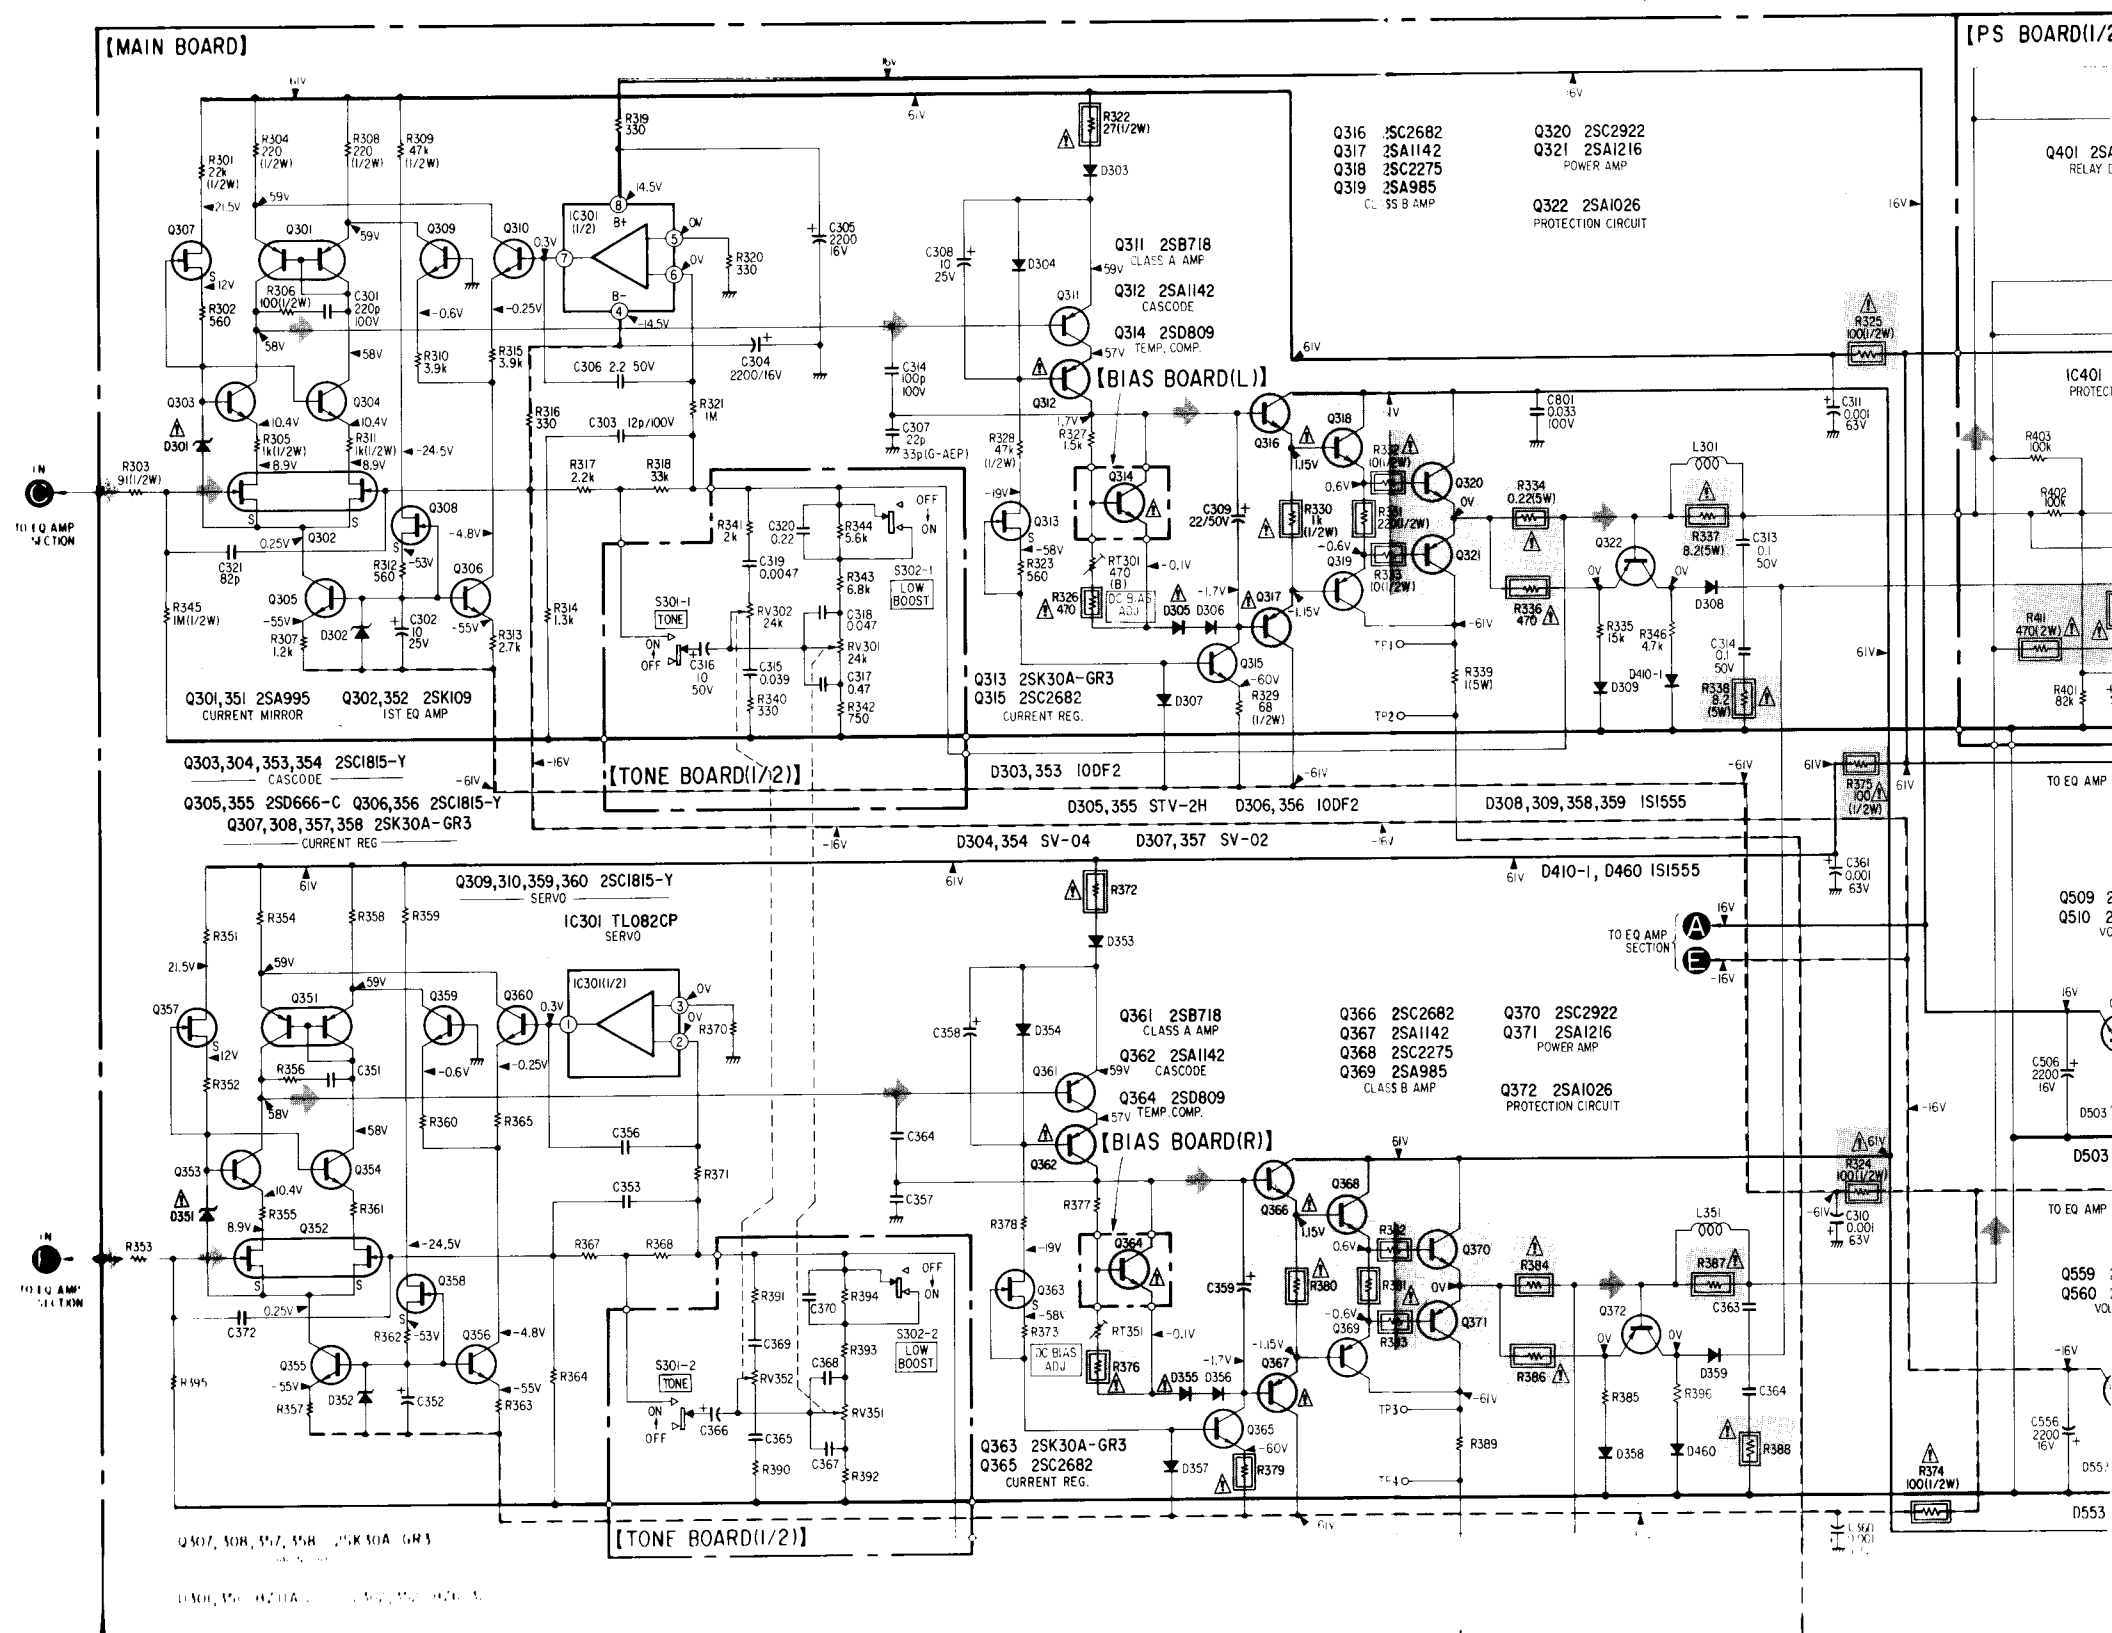

[MAIN BOARD]
[PS BOARD(1/2
Q316 2SC2682
Q317 2SA1142
Q318 2SC2275
Q319 2SA985
CLASS B AMP
Q320 2SC2922
Q321 2SA1216
POWER AMP
Q322 2SA1026
PROTECTION CIRCUIT
Q311 2SB718
CLASS A AMP
Q312 2SA1142
CASCODE
Q314 2SD809
TEMP. COMP.
[BIAS BOARD(L)]
Q313 2SK30A-GR3
Q315 2SC2682
CURRENT REG.
Q301,351 2SA995
CURRENT MIRROR
Q302,352 2SK109
1ST EQ AMP
Q303,304,353,354 2SC1815-Y
CASCODE
Q305,355 2SD666-C Q306,356 2SC1815-Y
Q307,308,357,358 2SK30A-GR3
CURRENT REG
[TONE BOARD(1/2)]
D303,353 10DF2
D305,355 STV-2H D306,356 10DF2
D308,309,358,359 1S1555
D304,354 SV-04 D307,357 SV-02
D410-1, D460 1S1555
Q309,310,359,360 2SC1815-Y
SERVO
IC301 TL082CP
SERVO
Q361 2SB718
CLASS A AMP
Q362 2SA1142
CASCODE
Q364 2SD809
TEMP. COMP.
[BIAS BOARD(R)]
Q366 2SC2682
Q367 2SA1142
Q368 2SC2275
Q369 2SA985
CLASS B AMP
Q370 2SC2922
Q371 2SA1216
POWER AMP
Q372 2SA1026
PROTECTION CIRCUIT
Q363 2SK30A-GR3
Q365 2SC2682
CURRENT REG.
[TONE BOARD(1/2)]
TO EQ AMP SECTION
IN