

# HCD-RG333/RG441

## SERVICE MANUAL

Ver 1.0 2004. 04



(Photo: HCD-RG333)

*AEP Model*

*UK Model*

*HCD-RG333*

*E Model*

*HCD-RG441*

- HCD-RG333/RG441 is the tuner, deck, CD and amplifier section in MHC-RG333/RG441.

CD Section	Model Name Using Similar Mechanism	NEW
	CD Mechanism Type	CDM74-F1BD81
	Optical Pick-up Name	KSM-215DCP/C2NP
Tape Deck Section	Model Name Using Similar Mechanism	NEW
	Tape Transport Mechanism Type	CWM43FF-25

### SPECIFICATIONS

#### Amplifier section

**European and Russian models:**  
**HCD-RG333:**

DIN power output (rated): 100 + 100 watts  
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):  
125 + 125 watts (6 ohms at  
1 kHz, 10% THD)

Music power output (reference):  
250 + 250 watts (6 ohms at  
1 kHz, 10% THD)

**Other models:**  
**HCD-RG441:**

The following measured at AC 120, 127, 220, 240 V,  
50/60 Hz

DIN power output (rated): 120 + 120 watts  
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):  
150 + 150 watts (6 ohms at  
1 kHz, 10% THD)

#### Inputs

GAME INPUT AUDIO L/R (phono jacks):  
voltage 250 mV,  
impedance 47 kilohms

GAME INPUT VIDEO (phono jack):  
1 V<sub>p-p</sub>, 75 ohms

#### Outputs

PHONES (stereo mini jack):  
accepts headphones of  
8 ohms or more

VIDEO OUT (phono jack): max. output level  
1 V<sub>p-p</sub>, unbalanced, Sync  
negative, load impedance  
75 ohms

SPEAKER:  
accepts impedance of 6 to  
16 ohms

– Continued on next page –

## MINI HI-FI COMPONENT SYSTEM

9-877-772-01  
2004D04-1  
© 2004. 04

**Sony Corporation**  
Home Audio Company  
Published by Sony Engineering Corporation

# SONY®

# HCD-RG333/RG441

## CD player section

System	Compact disc and digital audio system
Laser	Semiconductor laser ( $\lambda=770 - 810$ nm) Emission duration: continuous
Frequency response	2 Hz – 20 kHz ( $\pm 0.5$ dB)
Signal-to-noise ratio	More than 90 dB
Dynamic range	More than 90 dB

## Tape deck section

Recording system	4-track 2-channel, stereo
Frequency response	50 – 13,000 Hz ( $\pm 3$ dB), using Sony TYPE I cassettes

## Tuner section

FM stereo, FM/AM superheterodyne tuner

### FM tuner section

Tuning range	87.5 – 108.0 MHz (50 kHz step)
Antenna	FM lead antenna
Antenna terminals	75 ohms unbalanced
Intermediate frequency	10.7 MHz

### AM tuner section

Tuning range	
European models:	531 – 1,602 kHz (with the tuning interval set at 9 kHz)
Other models:	530 – 1,710 kHz (with the tuning interval set at 10 kHz) 531 – 1,602 kHz (with the tuning interval set at 9 kHz)
Antenna	AM loop antenna
Antenna terminals	External antenna terminal
Intermediate frequency	450 kHz

## General

Power requirements	
European models:	230 V AC, 50/60 Hz
Argentine model:	220 V AC, 50/60 Hz
Mexican model:	127 V AC, 60 Hz
Other models:	120 V, 220 V or 230 – 240 V AC, 50/60 Hz Adjustable with voltage selector

## Power consumption

European models:	
HCD-RG333:	180 watts 0.25 watts (at the Power Saving Mode)
Other models:	
HCD-RG441:	155 watts

Dimensions (w/h/d) incl. projecting parts and controls  
Amplifier/Tuner/Tape/CD section:

Approx. 280 × 327 × 425 mm

## Mass

European models:	
HCD-RG333:	Approx. 10.0 kg
Other models:	
HCD-RG441:	Approx. 10.0 kg

*Design and specifications are subject to change without notice.*

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:


Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

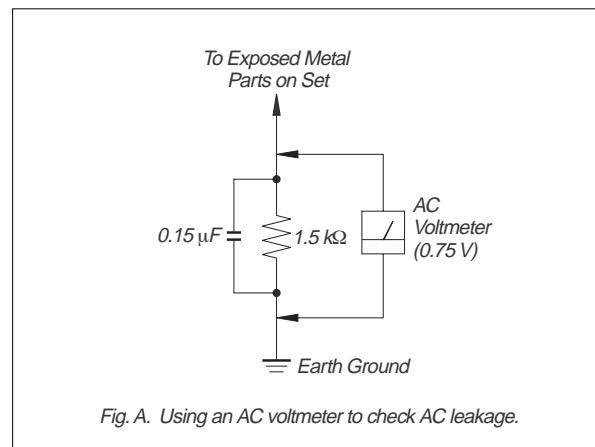







### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

## The release method of a CD disc tray LOCK function

There is a disc lock function for the disc theft prevention for a demonstration at a shop front in this machine.

Procedue:

1. Press the  button to turn the set on.
2. Press two buttons of  and  simultaneously for five seconds.
3. The message "LOCKED" is displayed and the tray is locked. (Even if exiting from this mode, the tray is still locked.)
4. Press two buttons of  and  simultaneously for five seconds again.
5. The message "UNLOCKED" is displayed and the tray is unlocked.
6. To exit from this mode, press the  button to turn the set off.

## Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

### : LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.  
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.  
Soldering irons using a temperature regulator should be set to about 350°C.  
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity  
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder  
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

## NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.


During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

## NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

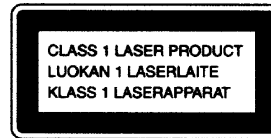

This appliance is classified as a CLASS 1 LASER product. This label is located on the rear exterior.

## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

## Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.


## TABLE OF CONTENTS

<b>1. SERVICING NOTE</b>	
1-1. Service Position-1 (AMP Board) .....	6
1-2. Service Position-2 (BD81A Board) .....	6
<b>2. GENERAL</b>	
Main Unit .....	7
Remote Control .....	8
<b>3. DISASSEMBLY</b>	
3-1. Case (Top) .....	10
3-2. CD Door .....	10
3-3. Front Panel Section .....	11
3-4. CD Mechanism Deck .....	11
3-5. Tape Mechanism Deck, Game Jack Board .....	12
3-6. Panel Board .....	12
3-7. Back Panel Section, Sub Trans Board .....	13
3-8. Trans Board .....	13
3-9. Main Board .....	14
3-10. Amp Board .....	14
3-11. BD81A Board .....	15
3-12. Connect Board .....	15
3-13. Driver Board, SW Board .....	16
3-14. Optical Pick-up .....	16
3-15. Sensor Board .....	17
3-16. Motor (TB) Board .....	17
3-17. Motor (LD) Board .....	18
<b>4. TEST MODE</b> .....	19
<b>5. DIAGRAMS</b>	
5-1. IC Pin Descriptions .....	22
5-2. Block Diagram –CD Section– .....	27
5-3. Block Diagram –Main Section– .....	28
5-4. Block Diagram –Panel/Power Section– .....	29
5-5. Circuit Boards Location .....	30
5-6. Note for Printed Wiring Boards and Schematic Diagrams .....	31
5-7. Waveforms .....	31
5-8. Printed Wiring Board –CD Mechanism Section (1/2)– .....	32
5-9. Schematic Diagram –CD Mechanism Section (1/2)– .....	33
5-10. Printed Wiring Boards –CD Mechanism Section (2/2)– .....	34
5-11. Schematic Diagram –CD Mechanism Section (2/2)– .....	35
5-12. Schematic Diagram –Main Section (1/2)– .....	36
5-13. Schematic Diagram –Main Section (2/2)– .....	37
5-14. Printed Wiring Board –Main Section– .....	38
5-15. Printed Wiring Boards –Panel Section– .....	39
5-16. Schematic Diagram –Panel Section (1/2)– .....	40
5-17. Schematic Diagram –Panel Section (2/2)– .....	41
5-18. Printed Wiring Boards –Jack Section– .....	42
5-19. Schematic Diagram –Jack Section– .....	43
5-20. Printed Wiring Board –Power Amp Section (RG333)– .....	44
5-21. Printed Wiring Boards –Transformer Section (RG333)– .....	45
5-22. Schematic Diagram –Power Section (RG333)– .....	46
5-23. Printed Wiring Board –Power Amp Section (RG441)– .....	47
5-24. Printed Wiring Boards –Transformer Section (RG441)– .....	48
5-25. Schematic Diagram –Power Section (RG441)– .....	49
5-26. IC Block Diagrams .....	50
<b>6. EXPLODED VIEWS</b>	
6-1. Main Section .....	52
6-2. Front Panel Section (1) .....	53
6-3. Front Panel Section (2) .....	54
6-4. Front Panel Section (3) .....	55
6-5. Main Board Section .....	56
6-6. CD Mechanism Section (1) .....	57
6-7. CD Mechanism Section (2) .....	58
<b>7. ELECTRICAL PARTS LIST</b> .....	59

## SECTION 1 SERVICING NOTE


### 1-1. SERVICE POSITION-1 (AMP BOARD)

*To inspect the AMP board, turn both of the front panel and the CD mechanism deck so that the left side of the product faces down.*

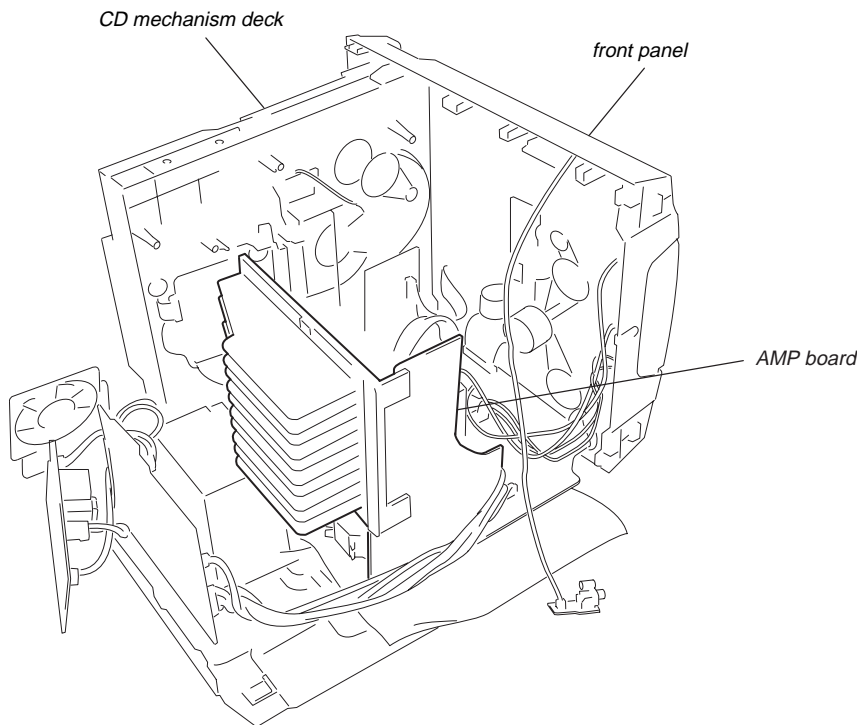

### 1-2. SERVICE POSITION-2 (BD81A BOARD)

*Remove the CD mechanism deck and place it on top of the pedestal as shown. Inspect the BD81A board in this set up.*

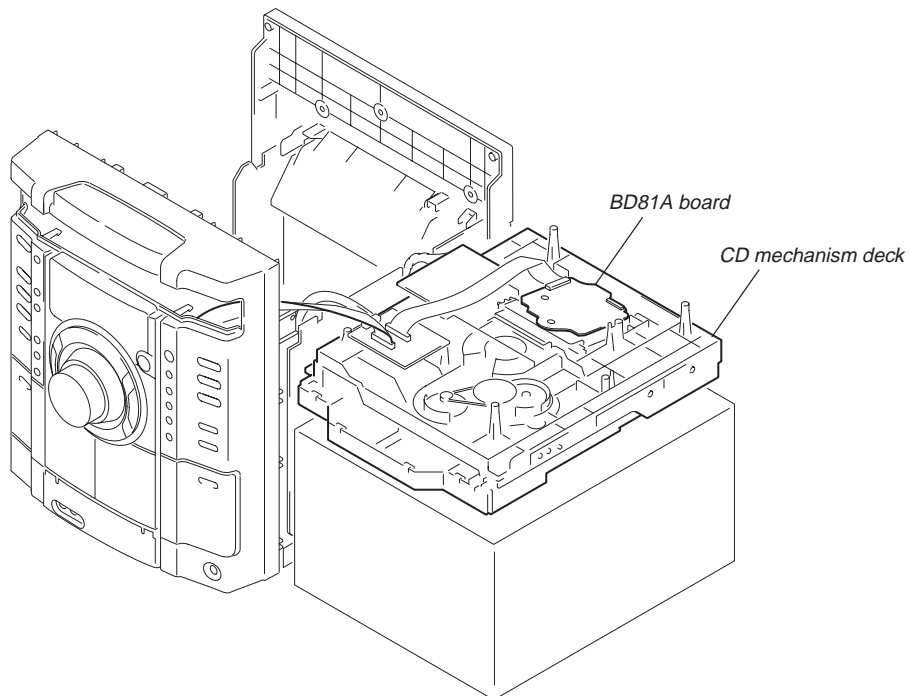


# SECTION 2 GENERAL

This section is extracted from instruction manual.

## List of button locations and reference pages

### How to use this page

Use this page to find the location of buttons and other parts of the system that are mentioned in the text.

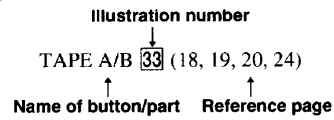

### Main unit

#### ALPHABETICAL ORDER

##### A - O


- ALBUM +<sup>1)</sup> **16** (12, 14, 19)
- ALBUM -<sup>1)</sup> **25** (12, 14, 19)
- CD **33** (9, 11, 14, 19, 20)
- CD SYNC **27** (19)
- Deck A **28** (18)
- Deck B **17** (18, 19, 20, 24)
- DISC 1 - 3 **10** (12, 14, 35)
- DISC SKIP/EX-CHANGE **12** (11, 12, 14, 19)
- Disc tray **9** (11)
- DISPLAY **2** (17, 27, 28)
- Display window **5**
- EFFECT ON/OFF **8** (22)
- ENTER **11** (14, 15, 22)
- EQ BAND **7** (22)
- GAME **32** (20, 23, 30)
- GAME INPUT AUDIO L/R jacks **23** (20, 29)
- GAME INPUT VIDEO jack **24** (29)
- GAME MIXING **26** (23)
- GROOVE **8** (21)
- ILLUMINATION<sup>2)</sup> **3** (28)
- MIC jack<sup>3)</sup> **22** (24)
- MIC LEVEL<sup>3)</sup> **21** (24)
- Operation Dial (- EQ +/- << >> |) **6** (12, 14, 19, 22)

##### P - Z

- P FILE **13** (22)
- PHONES jack **19**
- PLAY MODE **29** (12, 14, 18, 19, 20, 35)
- Power illuminator<sup>2)</sup> **18** (28)
- PRESET EQ **13** (22)
- REC PAUSE/START **27** (19, 20, 23, 24)
- Remote sensor **4**
- SURROUND **8** (23)
- TAPE A/B **33** (18, 19, 20, 24)
- TUNER/BAND **34** (15, 16, 20)
- TUNING MODE **29** (15, 16, 35)
- TUNING + **16** (15, 16)
- TUNING - **25** (15, 16)
- VIDEO/MD<sup>3)</sup> **31** (20, 30)
- VOLUME control **20** (21)
- WIRELESS<sup>4)</sup> **31** (32)

#### BUTTON DESCRIPTIONS

- I/⏻ (power) **1** (8, 16, 27, 30, 33, 35)
- ⏸ (pause) **25** (12, 19)
- ⏏ (eject) **14** (11)
- PUSH ⏏ (deck B) (eject) **15** (18)
- (stop) **25** (12, 19, 24, 35)
- ▶▶ (fast forward) **16** (12, 19)
- ▷ or ◁◁<sup>3)</sup> (play) **16** (12, 18, 19)
- ◀◀ (rewind) **25** (12, 19)
- ▲ PUSH (deck A) (eject) **30** (18)
- <sup>1)</sup> MHC-GX750/GX450/RG555/RG551S/RG444S/RG441/RG333/RX550 only
- <sup>2)</sup> MHC-GX750/GX450/RG555/RG551S/RG444S/RG441/RG333/RX550 only
- <sup>3)</sup> MHC-RG555 only
- <sup>4)</sup> MHC-GX750 only

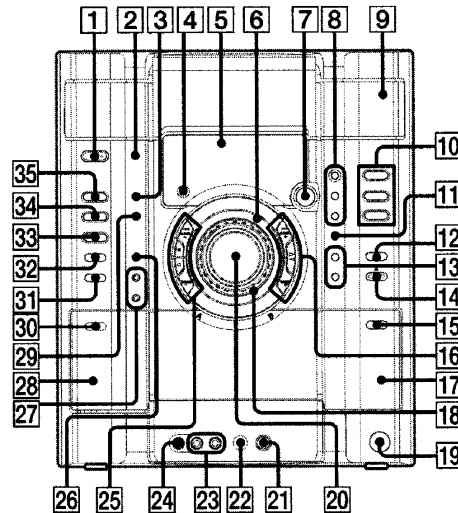

**Remote control**

**ALPHABETICAL ORDER**

**A - E**

- ALBUM -\* **13** (12, 14)
- ALBUM +\* **11** (12, 14)
- CD **18** (11, 14)
- CLEAR **15** (14)
- CLOCK/TIMER SELECT **2**  
(26, 27)
- CLOCK/TIMER SET **3** (10, 25,  
26)
- DISC SKIP **10** (12, 14)
- DISPLAY **21** (17, 27, 28)
- ENTER **9** (10, 14, 15, 25, 26)
- EQ **14** (22)


**F - Z**

- FM MODE **4** (17)
- FUNCTION **6** (11, 14, 15, 16)
- PLAY MODE **20** (12, 14, 18)
- REPEAT **4** (13)
- SLEEP **22** (25)
- TAPE **17**
- TUNER BAND **5** (15, 16)
- TUNER MEMORY **19** (15)
- TUNING MODE **20** (15, 16)
- VOLUME +/- **12** (21, 25)

**BUTTON DESCRIPTIONS**

- I/⏻ (power) **1** (8, 26)
- ⏮/⏭ (rewind/fast forward)  
**7** (12, 19)
- /+ (tuning) **16** (15)
- ⏪/⏩ (go back/go forward)  
**16** (10, 12, 19)
- ▶ (play) **8** (12, 18)
- ⏸ (pause) **8** (12, 19)
- (stop) **8** (12, 19)


\* MHC-GX750/GX450/RG555/  
RG551S/RG444S/RG441/  
RG333/RG222/RG221/RX550  
only

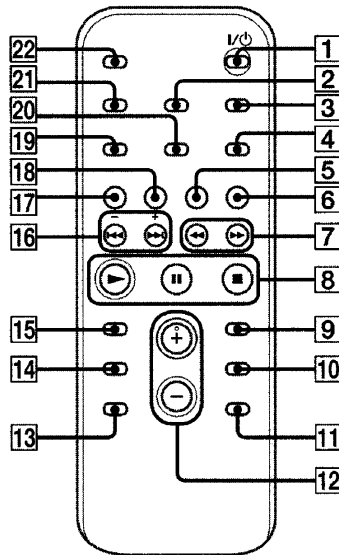



## SECTION 3 DISASSEMBLY


**Note :** Disassemble the unit in the order as shown below.

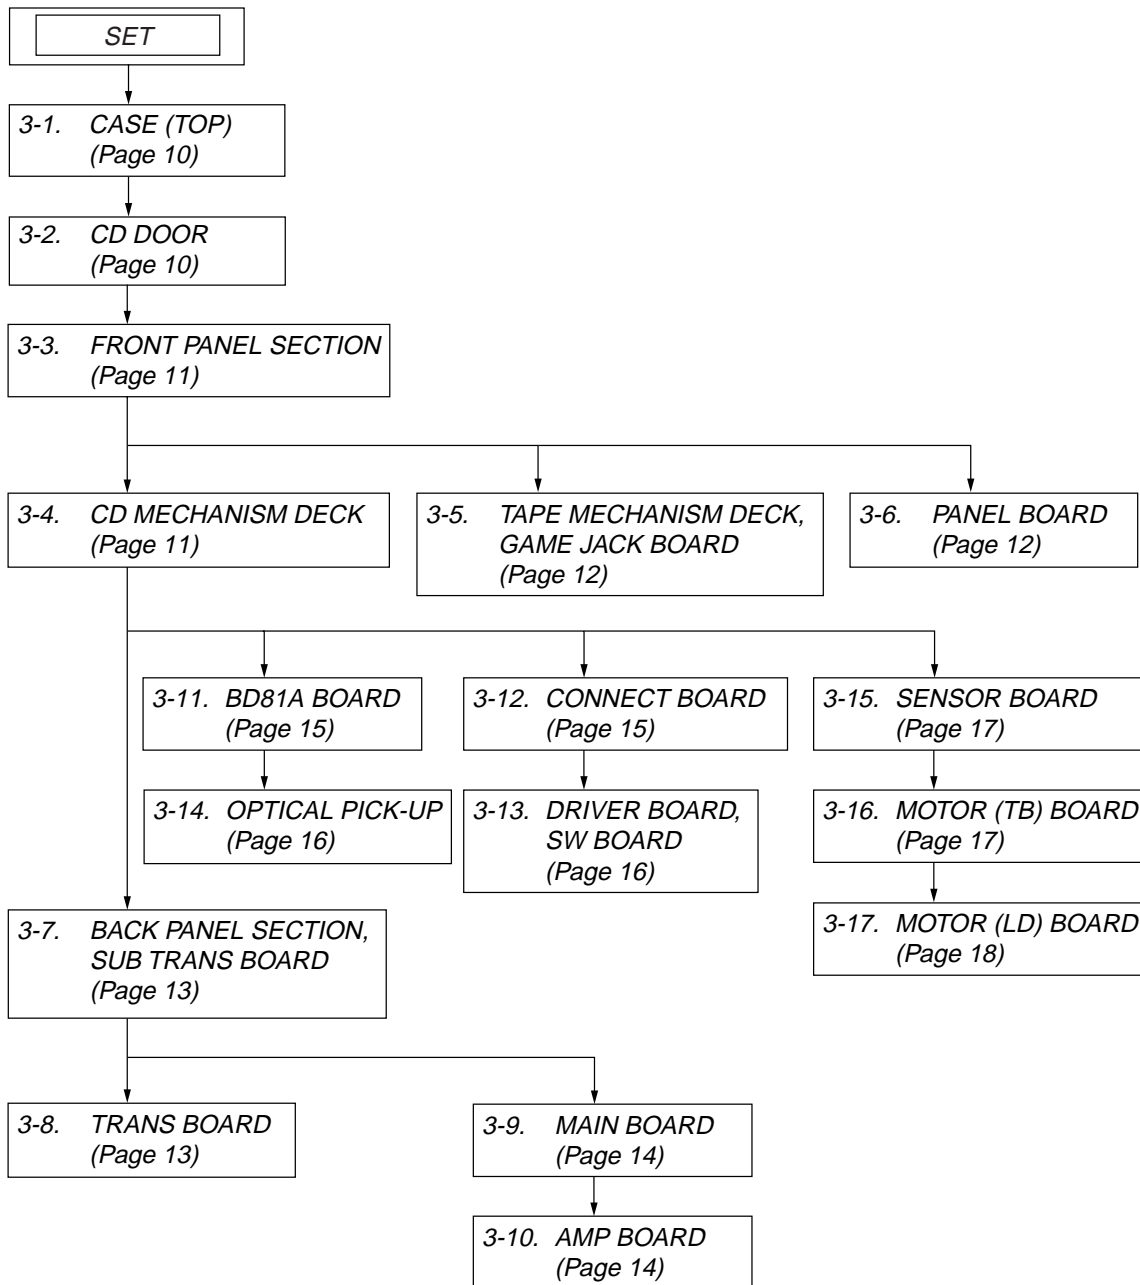


# HCD-RG333/RG441

Note : Follow the disassembly procedure in the numerical order given.


## 3-1. CASE (TOP)

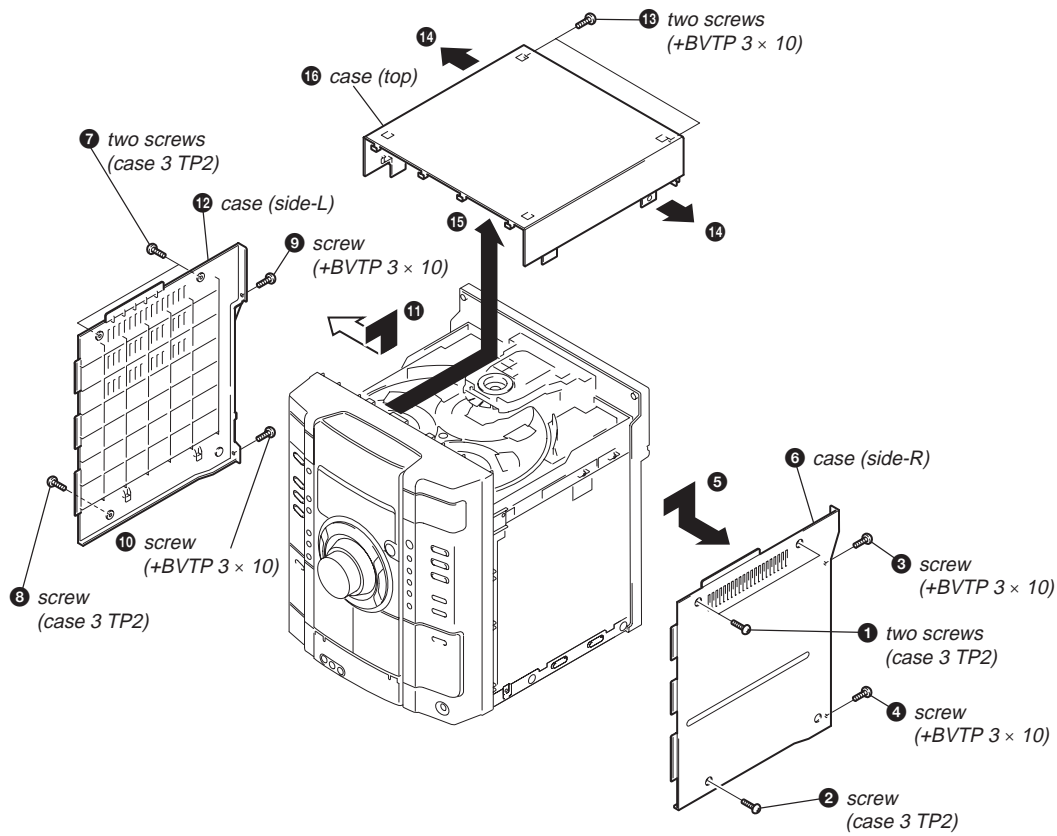


## 3-2. CD DOOR

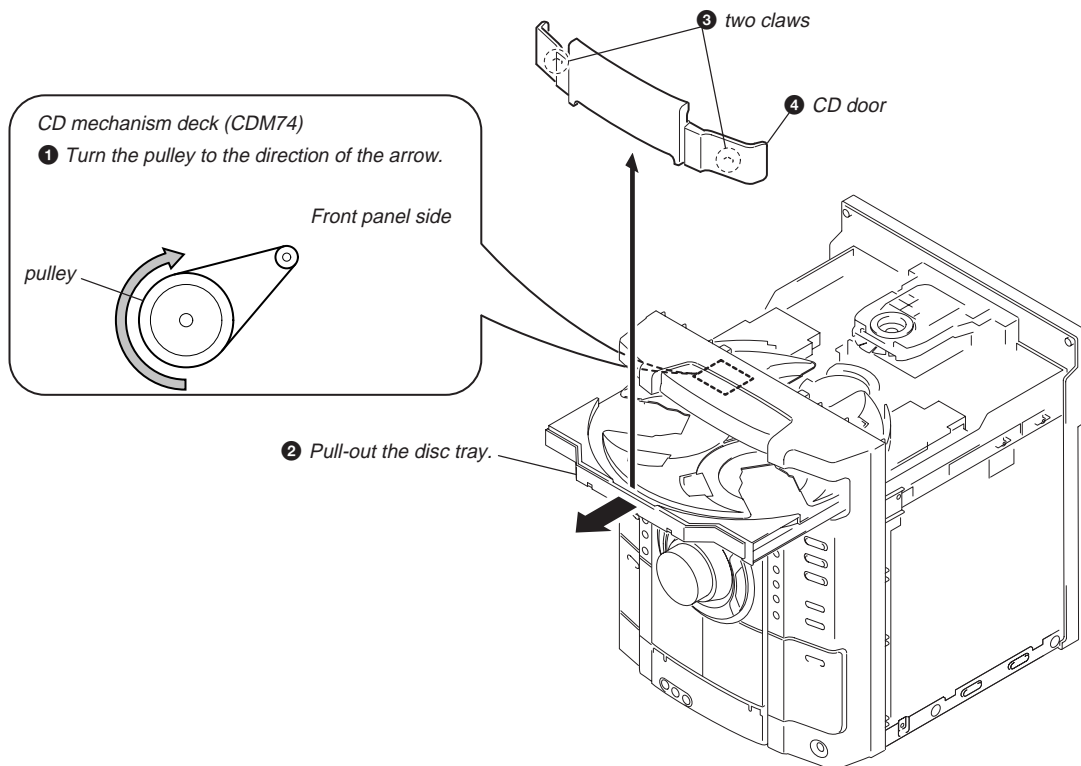


3-3. FRONT PANEL SECTION

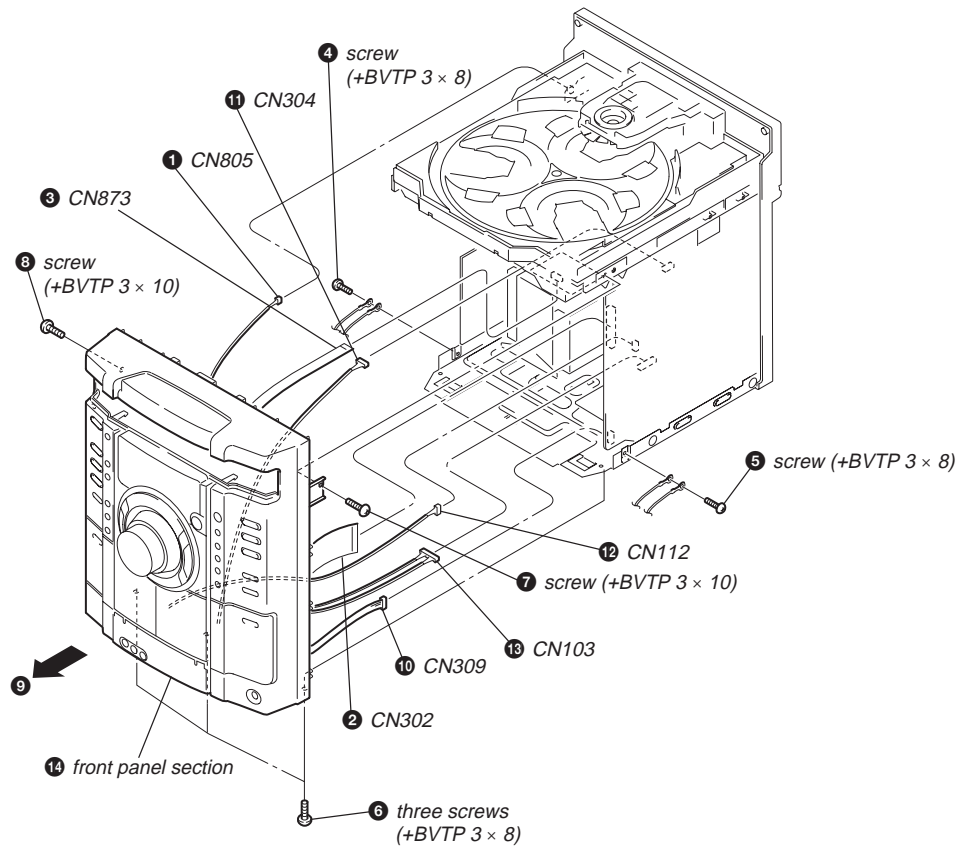


3-4. CD MECHANISM DECK

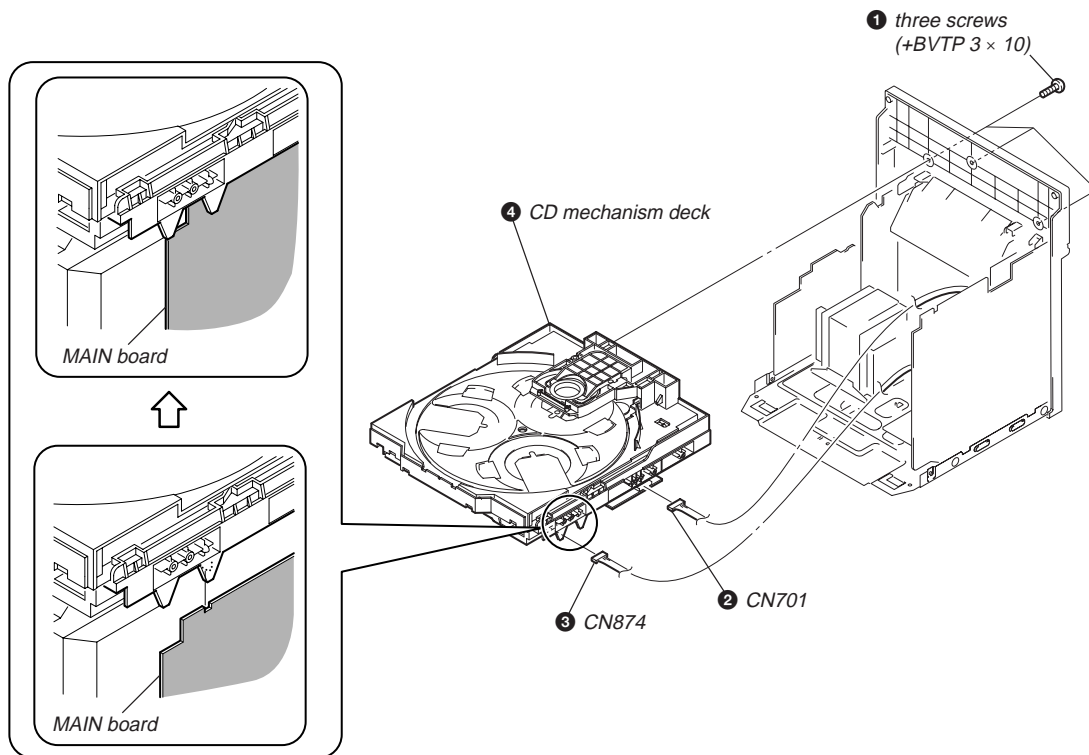


3-5. TAPE MECHANISM DECK, GAME JACK BOARD

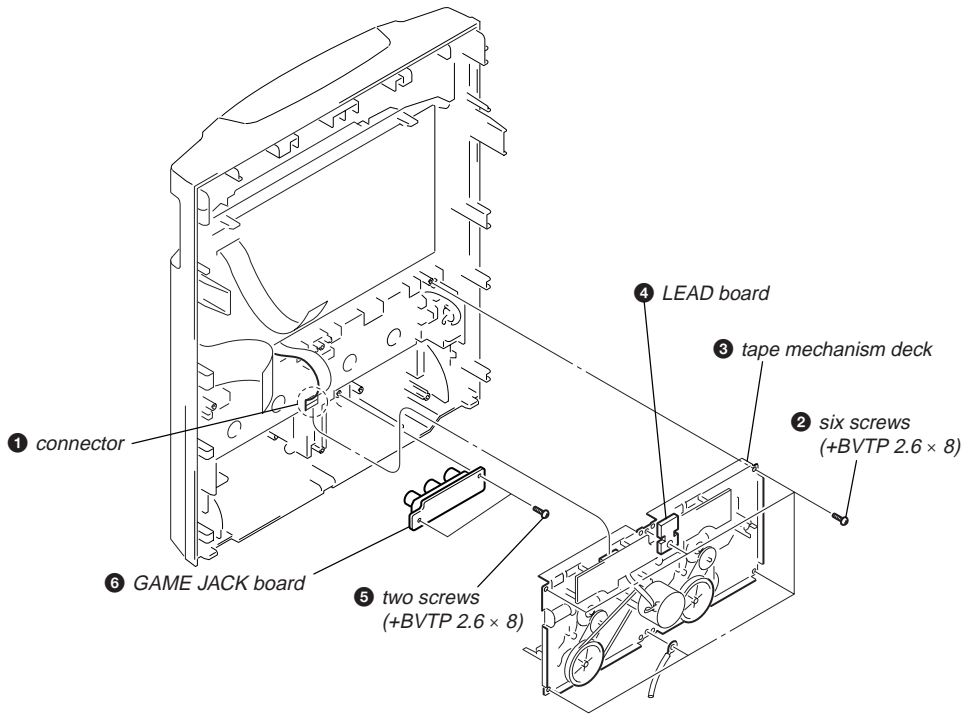


3-6. PANEL BOARD

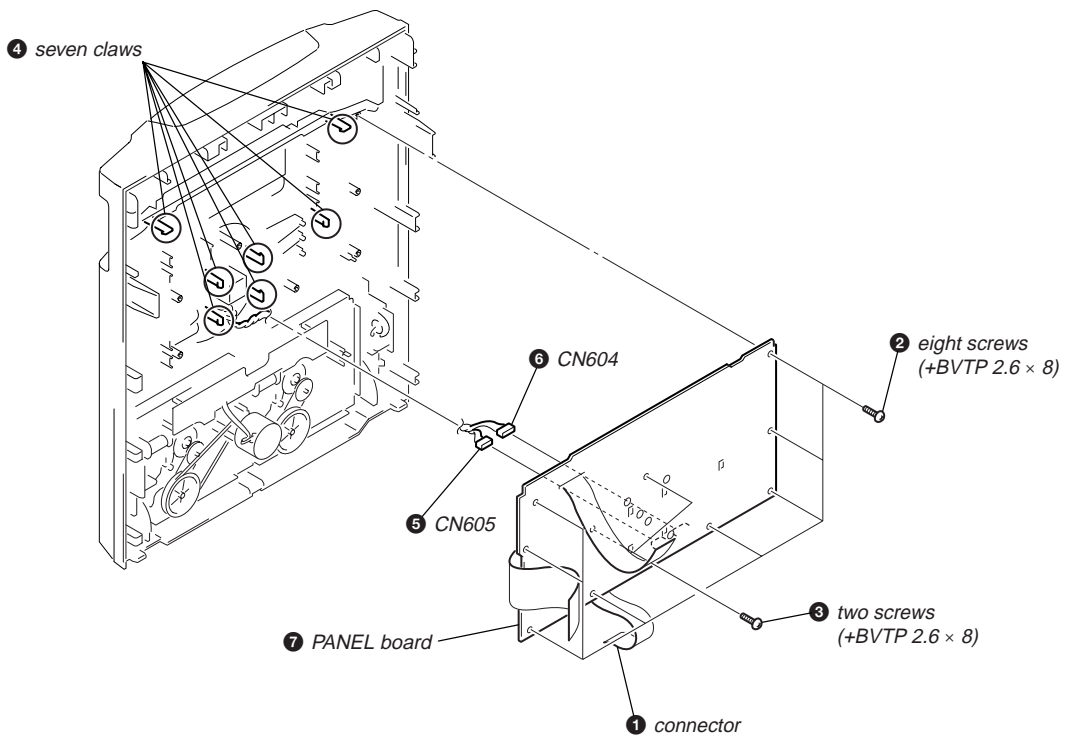


3-7. BACK PANEL SECTION, SUB TRANS BOARD

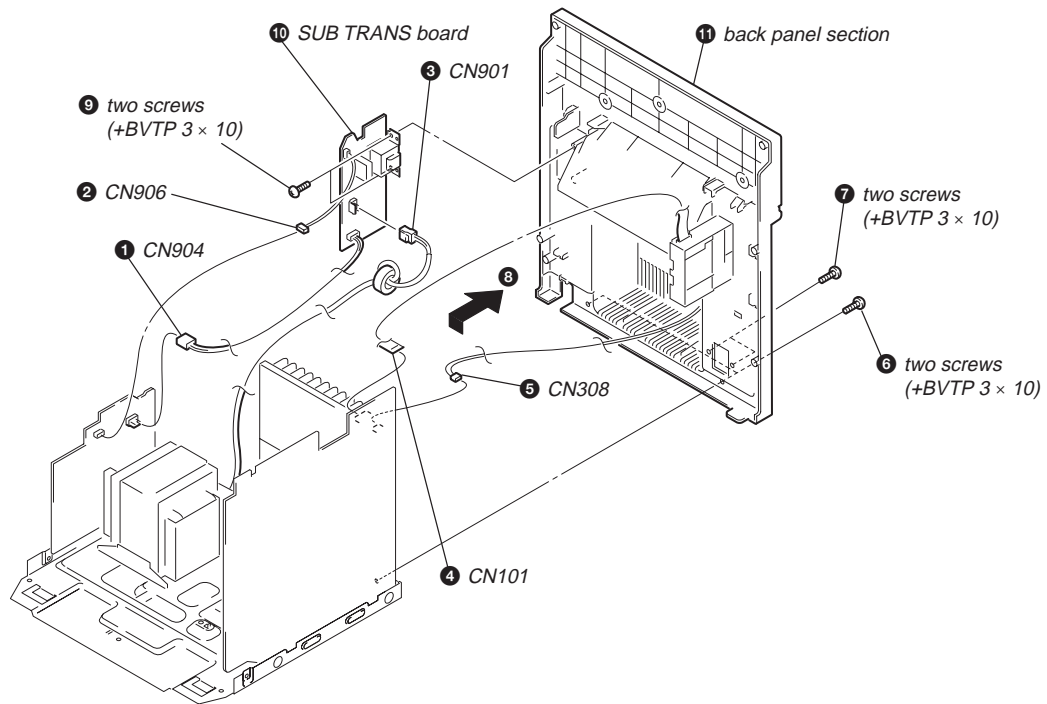


3-8. TRANS BOARD

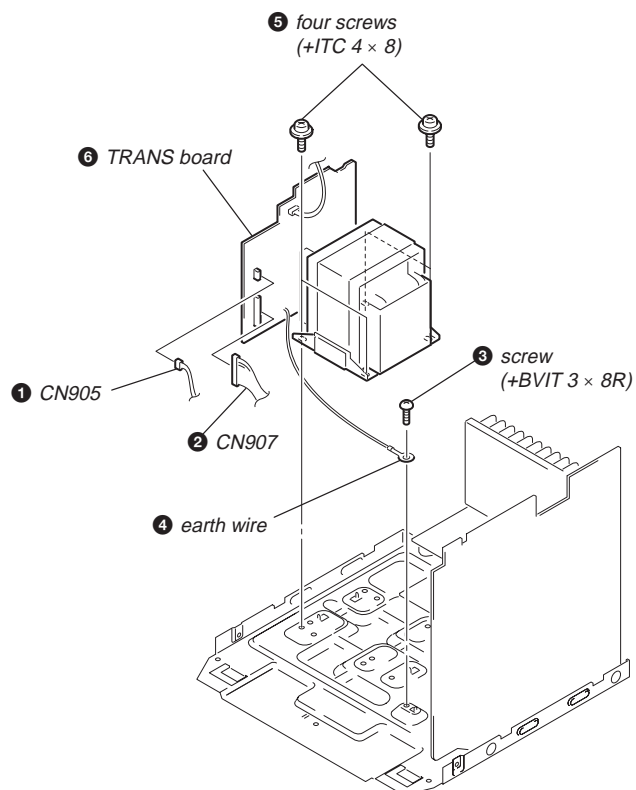


## 3-9. MAIN BOARD

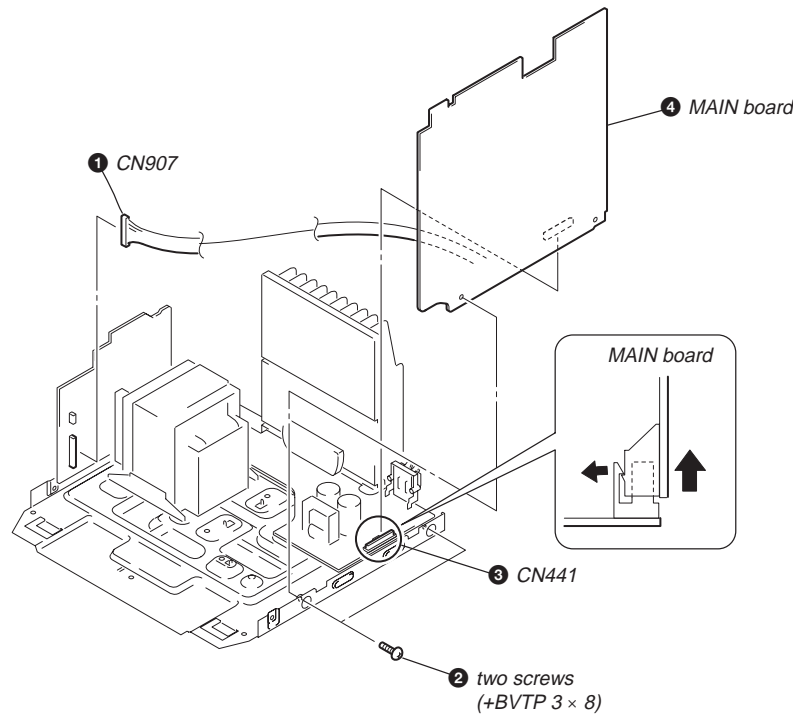


## 3-10. AMP BOARD

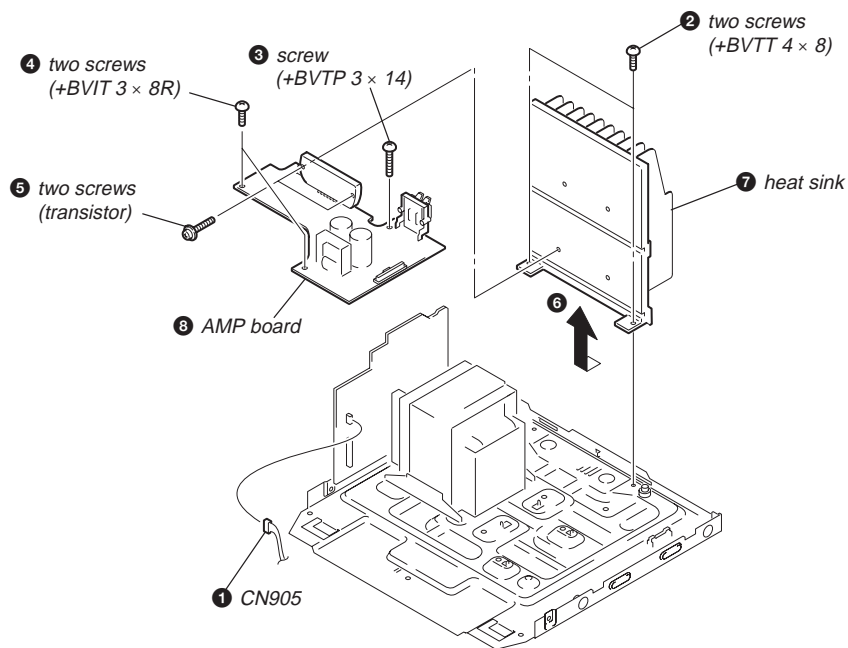


3-11. BD81A BOARD

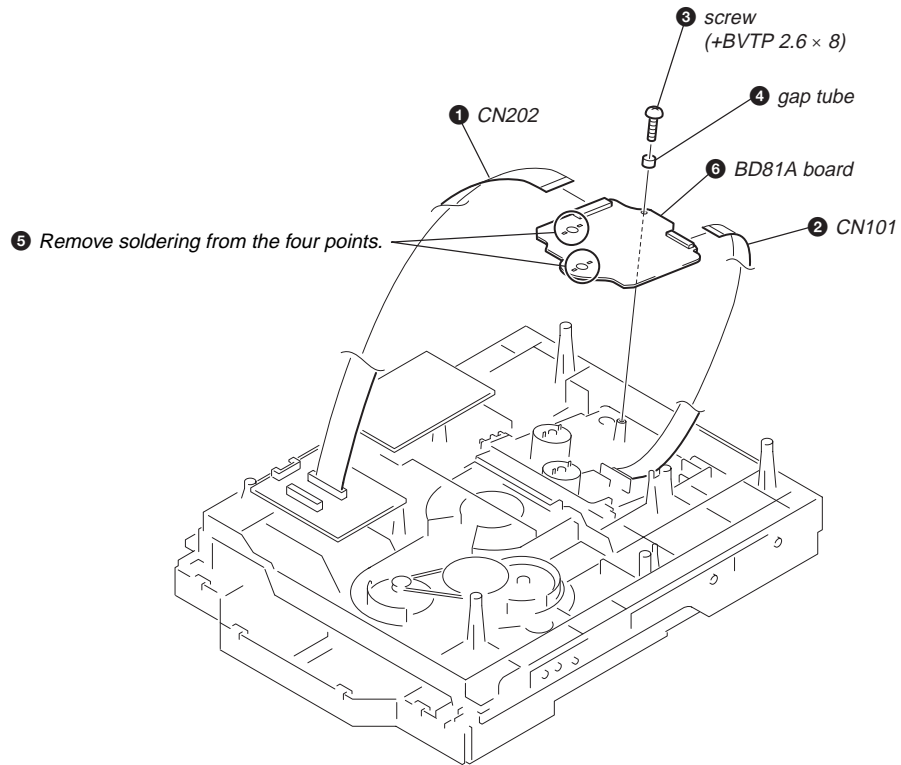


3-12. CONNECT BOARD

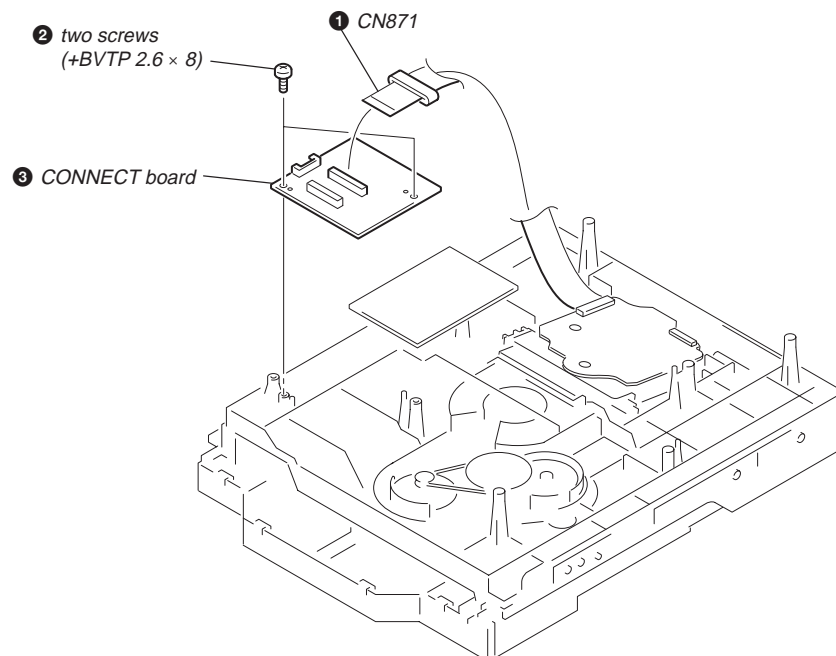

3-13. DRIVER BOARD, SW BOARD

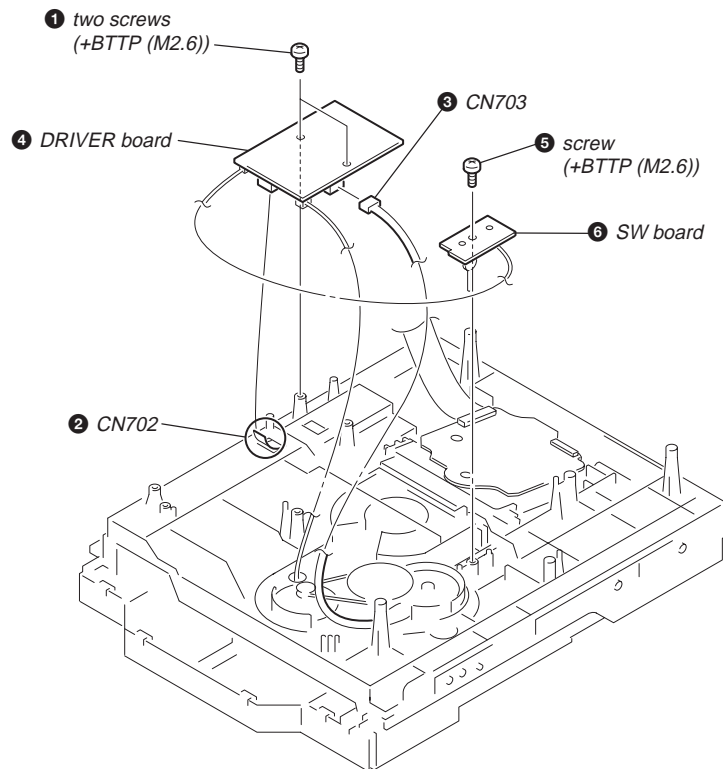


3-14. OPTICAL PICK-UP

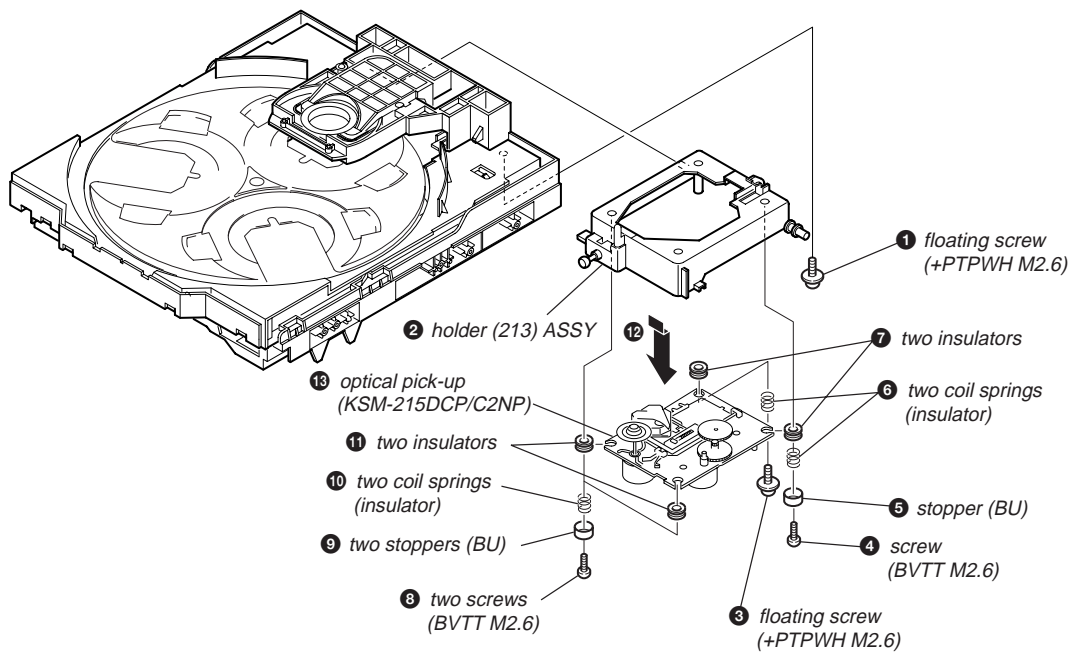





3-15. SENSOR BOARD

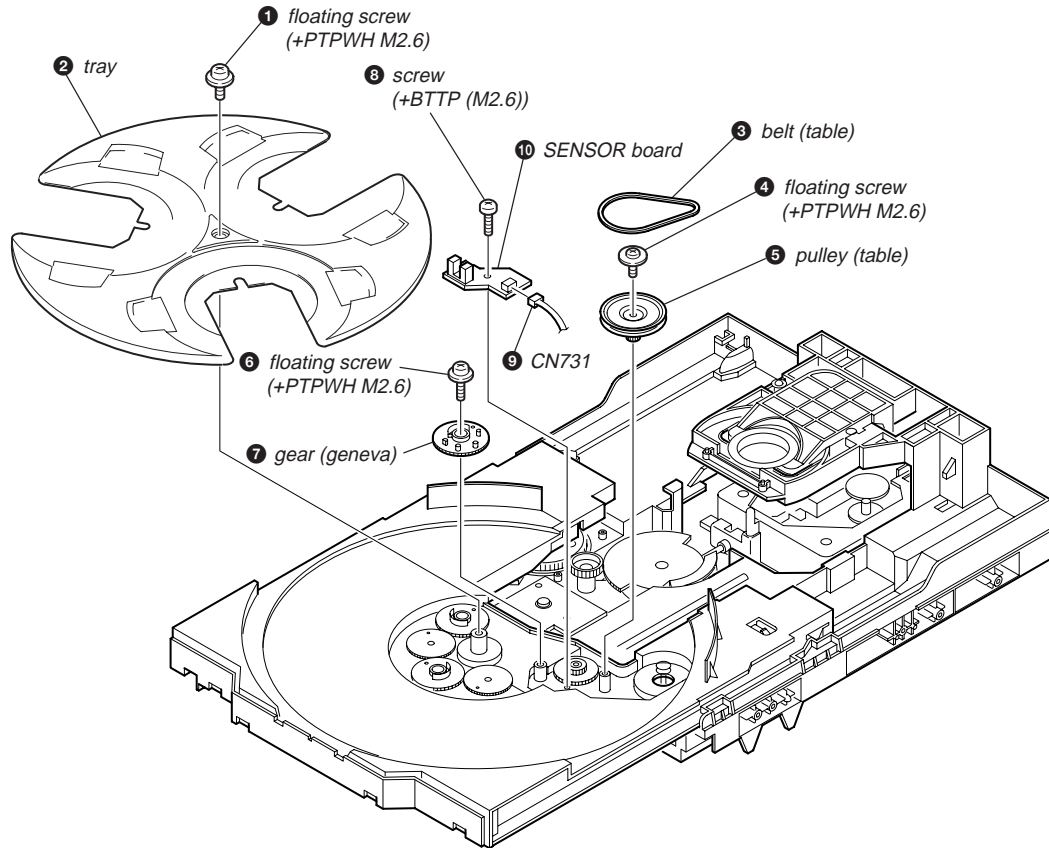

3-16. MOTOR (TB) BOARD

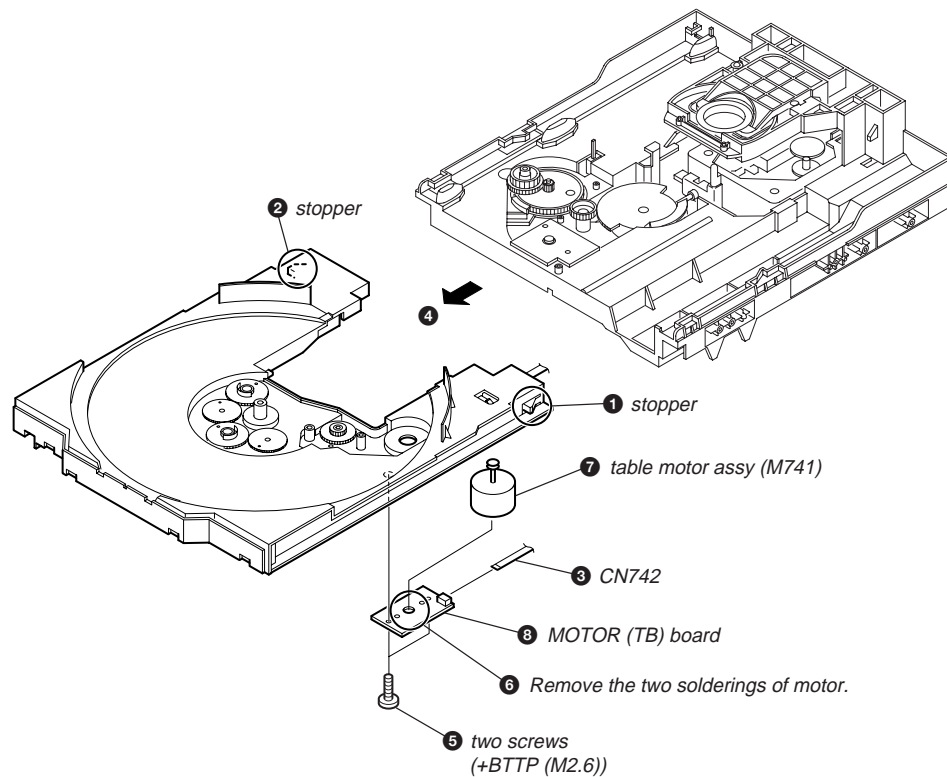

3-17. MOTOR (LD) BOARD

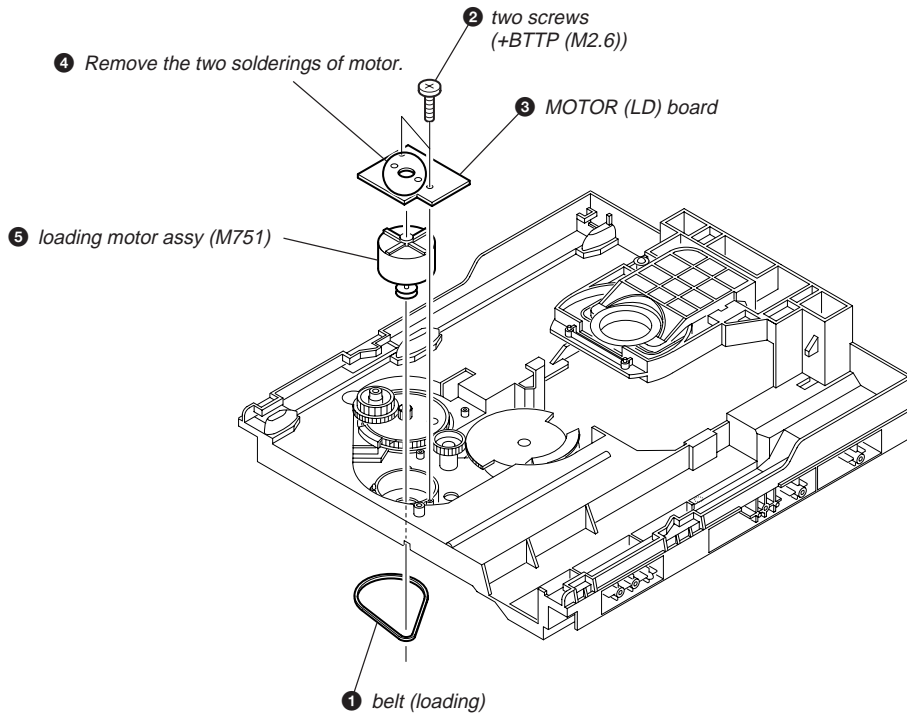


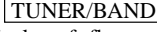



## SECTION 4 TEST MODE

### [Change-over of AM Tuner Step between 9 kHz and 10 kHz]

- A step of AM channels can be changed over between 9 kHz and 10 kHz.




#### Procedure:

1. Press  button to turn the set ON.
2. Select the function "TUNER", and press  button to select the BAND "AM".
3. Press  button to turn the set OFF.
4. Press  and  buttons simultaneously, and the display of fluorescent indicator tube changes to "AM 9 k STEP" or "AM 10 k STEP", and thus the channel step is changed over.

### [Cold Reset]

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

#### Procedure:

1. Press three buttons , , and  simultaneously.
2. The fluorescent indicator tube displays "COLD RESET" and the set is reset.




### [Aging Mode]

This mode can be used for operation check of CD section and tape deck section.

- If an error occurred:  
The aging operation stops and is displayed status.
- If no error occurs:  
The aging operation continues repeatedly.

#### 1. Operating method of Aging Mode

Turn on the main power and select "CD" of the function.

- 1) Set three discs in tray. Select ALL DISCS, and REPEAT OFF.
- 2) Load the tapes recording use into both decks.
- 3) Press three buttons , , and  simultaneously.
- 4) Aging operations of CD and tape are started at the same time.
- 5) To exit the aging mode, perform [Cold Reset].

#### 2. Aging mode in CD section

##### 1) Operation during aging mode

- In the aging mode, the program is executed in the following sequence.
  - (1) The disc tray opens and closes.
  - (2) The disc tray turns to select a disc 3.
  - (3) The pick-up accesses to the first track, and plays 3 seconds.
  - (4) The pick-up accesses to the last track, and plays 3 seconds.
  - (5) The disc tray opens and closes.
  - (6) The disc tray turns to select a disc 1.
  - (7) The same operation starts like step (3).
  - (8) After a disc 1 aging operation, a disc 2 is selected.
  - (9) When an aging operation of a disc 3 is completed, the display "AGING \*\*\*\*" value increases.
  - (10) If no error occurs, the aging operation continues repeatedly.

#### 2) Error display

Disc error	
Display	Error
E00D01022	Focus error (No disc)
E00D02022	Sub Q error (Focus is good)
E00D02023	TOC reading error
E00D02014	Access error (Unable within regular time)

Mechanism error	
Display	Error
E00M__E_0	Error during opening tray
E00M__C_2	EX-CHANGE disc error
E00M__D_0	Error during closing tray
E00M__F_3	EX-OPEN error
E00M__D_5	EX-CLOSE error
E00M__C_2	Chuck-up error
E00M__C_3	Unchucking error

#### 3. Aging mode in Tape Deck section

##### 1) Operation during aging mode

- In the aging mode, the program is executed in the following sequence.

Step	Operation	Display
1	Rewind the TAPE A	TAPE AAG-1
2	Rewind the TAPE B	TAPE BAG-2
3	Play the TAPE A (1 minute)	TAPE AAG-2
4	Stop the TAPE A (1 second)	TAPE AAG-3
5	Play the TAPE A (3 minutes)	TAPE AAG-4
6	Rewind(AMS) the TAPE A	TAPE AAG-5
7	F.F.(AMS) the TAPE A	TAPE AAG-6
8	Play the TAPE B (1 minute)	TAPE BAG-2
9	Stop the TAPE B (1 second)	TAPE BAG-3
10	Record the TAPE B (3 minutes)	TAPE BAG-4
11	Rewind(AMS) the TAPE B	TAPE BAG-5
12	F.F.(AMS) the TAPE B	TAPE BAG-6

#### 2) Error display

- If error occurred, the display remains like "TAPE BAG-2".

#### 4. Exiting from the aging mode

- Be sure to perform Cold Reset to exit from the aging mode.

## [PANEL Test Mode]

- All fluorescent segments and LEDs are tested.
- Keyboard check.

### Procedure:

1. Press **[I/O]** button to turn the set ON.
2. To enter the test mode, press the three buttons **[■]**, **[PLAY MODE/TUNING MODE]** and **[ENTER]** simultaneously.
3. All segments and LEDs (without STANDBY LED) are turned on.
4. Press **[■]** and **[ENTER]** buttons simultaneously, and the key check mode is activated.
5. The message "KEY 0 0 0" is displayed. Each time a button is pressed, the key code number is displayed.
6. Press **[■]** and **[ENTER]** buttons simultaneously, and the key count mode is activated.
7. The message "KEYCNT 0" is displayed. Each time a button is pressed, "KEYCNT 0" value increased. However, once a button is pressed, it is no longer taken into account.
8. Press **[■]** and **[ENTER]** buttons simultaneously, and the head phone detect mode is activated.
9. The message "H\_P OFF" is displayed when a headphone jack is not inserted. "H\_P ON" is displayed when a headphone jack is inserted.
10. Press **[■]** and **[ENTER]** buttons simultaneously, and the volume control detect mode is activated.
11. The message "VOLUME FLAT" is displayed. "VOLUME UP" is displayed if rotating **[MASTER VOLUME]** knob clockwise, or "VOLUME DOWN" is displayed if rotating counterclockwise.
12. To exit from the GC test mode after the head phone detect mode, press **[■]** and **[ENTER]** buttons simultaneously.

## [Version and Destination Display Mode]

- The version or destination is displayed.

### Procedure:

1. Press **[I/O]** button to turn the set ON.
2. To enter the test mode, press the three buttons **[■]**, **[PLAY MODE/TUNING MODE]** and **[DISC 2]** simultaneously.
3. The destination is displayed.
4. Press **[DISPLAY]** buttons simultaneously.
5. The version is displayed.
6. To exit from this mode, press **[I/O]** button to turn the set OFF.

## [CD Service Mode]

- This mode can run the CD sled motor freely. Use this mode, for instance, when cleaning the pick-up.

### Procedure:

1. Press **[I/O]** button to turn the set ON.
2. Select the function "CD".
3. To enter the test mode, press three buttons **[■]**, **[PLAY MODE/TUNING MODE]**, and **[▲]** simultaneously.
4. The CD service mode is selected.
5. With the CD in stop status, press **[▶▶]** button to move the pick-up to outside track, or press **[◀◀]** button to inside track.
6. To exit from this mode, perform as follows:
  - 1) Move the pick-up to the most inside track.
  - 2) Press **[I/O]** button to turn the set OFF.

- Note:**
- Always move the pick-up to most inside track when exiting from this mode. Otherwise, a disc will not be unloaded.
  - Do not run the sled motor excessively, otherwise the gear can be chipped.

## [MC Test Mode]

- This mode is used to test the function of the equalizer.

### Procedure:

1. Press **[I/O]** button to turn the set ON.
2. To enter the test mode, press the three buttons **[■]**, **[PLAY MODE/TUNING MODE]** and **[DISC 3]** simultaneously.
3. Press the **[EQ +]** button. The function of the equalizer is set to "MIN".
4. Press the **[EQ -]** button. The function of the equalizer is set to "MAX".
5. Press the **[PRESET EQ]** button. The function of the equalizer is set to "EQ FLAT".
6. **[MASTER VOLUME]** up and down. "VOLUME MIN" "VOLUME MAX" is displayed.
7. Press the **[GROOVE]** button. The message "VACS OFF" or "VACS ON" is displayed.
8. To exit from this mode, press **[I/O]** button to turn the set OFF.

## [CD Ship Mode (LOCK)]

- This mode moves the pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

### Procedure:

1. Press **[I/O]** button to turn the set ON.
2. Select the function "CD".
3. Press **[I/O]** button to turn the set OFF.
4. Press **[CD]** button and **[I/O]** button simultaneously.
5. The "STANDBY" display blinks instantaneously, and the CD ship mode is set.

## [CD Ship (LOCK) & COLD RESET MODE]

### Procedure:

1. Press **[I/O]** button to turn the set ON.
2. Select the function "CD".
3. Press **[I/O]** button to turn the set OFF.
4. Press three buttons **[■]**, **[CD]** and **[DISPLAY]** simultaneously.
5. The "STANDBY" display blinks instantaneously and CD ship mode is set.
6. To fluorescent indicator tube displays "COLD RESET" and the set is reset.

## [Disc Tray Lock]

### Procedure:

1. Press the **[I/O]** button to turn the set ON.
2. Press two buttons of **[■]** and **[▲]** simultaneously for five seconds.
3. The message "LOCKED" is displayed and the tray is locked. (Even if exiting from this mode, the tray is still locked.)
4. Press two buttons of **[■]** and **[▲]** simultaneously for five seconds again.
5. The message "UNLOCKED" is displayed and the tray is unlocked.
6. To exit from this mode, press the **[I/O]** button to turn the set OFF.

**[CD Repeat 5 Times Limit Release Mode]****Procedure:**

1. Press **[I/O]** button to turn the set ON.
2. Select the function "CD".
3. Press three buttons **[■]**, **[CD]** and **[ENTER]** simultaneously.
4. The message "LIMIT OFF" is displayed.
5. Press **[I/O]** button the set OFF.

**[AMP TEST MODE]****Procedure:**

1. Press **[I/O]** button to turn the set ON.
2. To enter the test mode, press three buttons **[■]**, **[PLAY MODE/TUNING MODE]** and **[ENTER]** simultaneously.
3. Press the **[DISPLAY]** button.  
The message "V0 0 0" " 000" is displayed.
4. Press the **[GROOVE]** button.  
The message "DBFB ON" "DBFB OFF" is displayed.
5. Press the **[SURROUND]** button.  
The message "SURROUND ON" "SURROUND OFF" is displayed.
6. Press the **[EQ BAND]** button.  
The message "LOW" "MID" "HIGH" is displayed.
7. Press **[I/O]** button to turn the set OFF.

## SECTION 5 DIAGRAMS

### 5-1. IC PIN DESCRIPTIONS

#### • IC101 CXD3059AR (RF AMP) (BD81A BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	MIRR	I/O	Mirror signal input/output Not used in this set. (Open)
2	DFCT	I/O	Defect signal input/output Not used in this set. (Open)
3	FOK	I/O	Focus OK signal input/output Not used in this set. (Open)
4	VSS	—	Internal digital ground pin
5	LOCK	I/O	GFS is sampled at 460Hz; when GFS is high , this pin outputs a high signal If GFS is low eight consecutive Not used in this set. (Open)
6	MDP	O	Spindle motor servo control signal output
7	SSTP	I	Disc innermost detection signal input
8	IOVSS1	—	I/O digital ground pin
9	SFDR	O	Sled drive signal output
10	SRDR	O	Sled drive signal output
11	TFDR	O	Tracking drive signal output
12	TRDR	O	Tracking drive signal output
13	FFDR	O	Focus drive signal output
14	FRDR	O	Focus drive signal output
15	IOVDD1	—	I/O digital power supply pin (+3.3 V)
16	AVDD0	—	Analog power supply pin (+3.3 V)
17	AVSS0	—	Analog ground pin
18	NC	—	Not used. (Open)
19	E	I	E signal input
20	F	I	F signal input
21	TEI	I	Tracking error signal input
22	TEO	O	Tracking error signal output
23	FEI	I	Focus error signal input
24	FEO	O	Focus error signal output
25	VC	O	Center voltage output
26	A	I	A signal input
27	B	I	B signal input
28	C	I	C signal input
29	D	I	D signal input
30	NC	—	Not used. (Open)
31	AVDD4	—	Analog power supply pin (+3.3 V)
32	RFDCO	O	RFDC signal output Not used in this set. (Open)
33	PDSSENS	I	Reference voltage pin for PD Connect to ground in this set.
34	AC_SUM	O	RFAC summing amplifier signal output
35	EQ_IN	I	Equalizer circuit signal input
36	LD	O	APC amplifier signal output
37	PD	I	APC amplifier signal input
38	NC	—	Not used. (Open)
39	RFC	I	Equalizer cut-off frequency adjustment pin
40	AVSS4	—	Analog ground pin
41	RFACO	O	RFAC signal output
42	RFACI	I	RFAC signal input or EFM signal input
43	AVDD3	—	Analog power supply pin (+3.3 V)
44	BIAS	I	Asymmetry circuit constant current signal input
45	ASYI	I	Asymmetry comparator voltage signal input
46	ASYO	O	EFM full-swing signal output (Low=VSS, High=VDD)
47	VPCO	O	Wide-band EFM PLL charge pump signal output Not used in this set. (Open)
48	VCTL	I	Wide-band EFM PLL VCO2 control voltage signal input
49	AVSS3	—	Analog ground pin
50	CLTV	I	Multiplier VCO1 control voltage signal input

Pin No.	Pin Name	I/O	Pin Description
51	FILO	O	Master PLL (slave=digital PLL) filter signal output
52	FILI	I	Master PLL filter signal input
53	PCO	O	Master PLL charge pump signal output
54	AVDD5	—	Analog power supply pin (+3.3 V)
55	DDVROUT	O	DC/DC converter signal output
56	DDVRSEN	I	DC/DC converter output voltage monitor pin
57	AVSS5	—	Analog ground pin
58	DDCR	I	DC/DC converter reset pin
59	NC	—	Not used. (Open)
60	BCKI	I	D/A interface bit clock signal input
61	PCMDI	I	D/A interface serial data signal input (2's COMP, MSB first)
62	LRCKI	I	D/A interface LR clock signal input
63	LRCK	O	D/A interface LR clock signal output f=Fs
64	VSS	—	Internal digital ground pin
65	PCMD	O	D/A interface serial data signal output (2's COMP, MSB first)
66	BCK	O	D/A interface bit clock signal output
67	VDD	—	Internal digital power supply pin (+3.3 V)
68	EMPH	O	High when the playback disc has emphasis, low it has not
69	EMPHI	I	High when de-emphasis is ON, low when input OFF
70	IOVDD2	—	I/O digital power supply pin (+3.3 V)
71	DOUT	O	Digital signal output
72	TEST	I	Test pin Normally ground
73	TES1	I	Test pin Normally ground
74	IOVSS2	—	I/O digital ground pin
75	NC	—	Not used. (Open)
76	XVSS	—	Master clock ground pin
77	XTAO	O	Crystal oscillation circuit signal output (16.9 MHz)
78	XTAI	I	Crystal oscillation circuit signal input (16.9 MHz)
79	XVDD	—	Master clock power supply pin (+3.3 V)
80	AVDD1	—	Analog power supply pin (+3.3 V)
81	AOUT1	O	Lch analog signal output
82	VREFL	O	Lch reference voltage signal output
83	AVSS1	—	Analog ground pin
84	AVSS2	—	Analog ground pin
85	VREFR	O	Rch reference voltage signal output
86	AOUT2	O	Rch analog signal output
87	AVDD2	—	Analog power supply pin (+3.3 V)
88	NC	—	Not used. (Open)
89	IOVDD0	—	I/O digital power supply pin (+3.3 V)
90	RMUT	O	Rch "0" detection flag Not used in this set. (Open)
91	LMUT	O	Lch "0" detection flag Not used in this set. (Open)
92	NC	—	Not used. (Open)
93	XTSL	I	Crystal selection input Not used in this set. (Connect to ground.)
94	IOVSS0	—	I/O digital ground pin
95	XTACN	I	Oscillation circuit control signal input Self-oscillation when high, oscillation stop when low
96	SQSO	O	Subcode Q 80-bit and PCM peak and level data signal output CD TEXT data signal output Not used in this set. (Open)
97	SQCK	I	SQSO readout clock signal input
98	SBSO	O	Subcode P to W serial signal output Not used in this set. (Open)
99	EXCK	I	SBSO readout clock signal input Not used in this set. (Open)
100	XRST	I	System reset signal input "L": Reset
101	SYSM	I	Mute signal input "H": Mute Connect to ground in this set.

Pin No.	Pin Name	I/O	Pin Description
102	DATA	I	Serial data signal input
103	VSS	—	Internal digital ground pin
104	XLAT	I	Latch signal input The serial data is latched at the falling edge
105	CLOCK	I	Serial data transfer clock signal input
106	VDD	—	Internal digital power supply pin (+3.3 V)
107	SENS	O	SENS signal output
108	SCLK	I	SENS serial data readout clock signal input
109	ATSK	I/O	Anti-shock signal input/output Not used in this set. (Open)
110	WFCK	O	WFCK signal output Not used in this set. (Open)
111	XUGF	O	XUGF signal output Not used in this set. (Open)
112	XPCK	O	XPCK signal output Not used in this set. (Open)
113	GFS	O	GFS signal output Not used in this set. (Open)
114	C2PO	O	C2PO signal output Not used in this set. (Open)
115	SCOR	O	High output when the subcode sync, S0 or S1, is detected
116	VDD	—	Internal digital power supply pin (+3.3 V)
117	C4M	O	4.2336MHz signal output Not used in this set. (Open)
118	WDCK	O	Word clock signal output $f=2F_s$ Not used in this set. (Open)
119	COUT	I/O	Track number count signal input/output Not used in this set. (Open)
120	NC	—	Not used. (Open)




## • IC601 LC876996A-53H2-E (SYSTEM CONTROLLER) (PANEL BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	O-MP3 CS	O	CS signal output to CD digital processor
2	O-MP3 LP MOTER	O	LP signal output to CD digital processor and motor signal output
3	I-MP3 ACK SOL-B	I	ACK signal input from CD digital processor and motor signal input
4	O-MP3 REQ SOL-A	O	REQ signal output to CD digital processor and motor signal output
5	I-SCOR	I	CD scor signal input
6	O-MP3 RESET	O	RESET signal output to CD digital processor
7	I-BU1924 DATA	I	RG333: RDS data signal input RG441: Not used in this set. (Connect to ground.)
8	I-BU1924 CLK	I	RG333: RDS clock signal input RG441: Not used in this set. (Connect to ground.)
9	I-VOLUME-IN1	I	Volume signal input from the encoder
10	I-VOLUME-IN2	I	Volume signal input from the encoder
11	RESET	I	Reset signal input
12	I-XT1	I	Connection for input a crystal resonator (32.768 kHz)
13	I-XT2	O	Connection for input a crystal resonator (32.768 kHz)
14	VSS1	—	Ground pin
15	CF1	I	Connection for input a ceramic resonator (10 MHz)
16	CF2	O	Connection for input a ceramic resonator (10 MHz)
17	VDD1	—	Power supply pin (+1.5 V)
18	I-PROTECT	I	Power amplifier circuit protection signal input
19	WFR/HP/MIC-IN	I	SubWoofers or Headphone detection signal input
20	I-CD ENCODER	I	Signal input from the CD encoder
21	I-CD OPEN/CLOSE	I	CD tray open switch signal input
22	I-TAPE A START	I	TAPE A switches signal input
23	I-TAPE B START	I	TAPE B switches signal input
24	I-STREAM/VACS	I	Stream/Vacs signal input
25	I-KEY 3	I	Function key input 3
26	I-KEY 2	I	Function key input 2
27	I-KEY 1	I	Function key input 1
28	I-SIRDS-IN	I	Data signal input from the remote control receiver
29	I-AC CUT	I	Power down signal input
30 to 42	G13 to G1	O	FL tube grid signal output
43 to 45	S1 to S3	O	FL tube segment signal output
46	VDD3	—	Power supply pin (+3.3 V)
47 to 49	S4 to S6	O	FL tube segment signal output
50	S7/METER-SW1	O	FL tube segment signal output
51	-VPP	—	Power supply (-) pin (-26 V)
52	S8/METER-SW2	O	FL tube segment signal output
53	S9/METER-SW3	O	FL tube segment signal output
54 to 63	S10/SW1 to S19/SW10	O	FL tube segment signal output
64, 65	S20, S21	O	FL tube segment signal output
66	I-SPEC/MODEL/METER	I	METER switch signal input
67	I-TUNED-IN	I	Tuning frequency signal input
68	I-STEREO-IN	I	Stereo tuning signal input
69	I-AMS-IN	I	AMS signal input
70	I-REEL-A-IN	I	A deck photo sensor signal input
71	I-REEL-B-IN	I	B deck photo sensor signal input
72	VDD4	—	Power supply pin (+3.3 V)
73	I-CD NUM SENSOR	I	Table address sensor switch signal input
74	O-POWER-RELAY	O	POWER RELAY control signal output
75	O-SYSTEM-MUTE	O	System muting signal output
76	O-POWER-LED	O	POWER LED control signal output
77	STREAM-LED6/SOL B	O	Illumination LED control signal output
78	STREAM-LED5/SOL A	O	Illumination LED control signal output


Pin No.	Pin Name	I/O	Pin Description
79	STREAM-LED4/MOTOR	O	Illumination LED control signal output
80	STREAM-LED3/MP3-STB	O	Illumination LED control signal output
81	STREAM-LED2	O	Illumination LED control signal output
82	STREAM-LED1	O	Illumination LED control signal output
83	I-LC72121 DI	I	Data signal input from tuner
84	O-LC72121 CE	O	Chip select signal output to tuner
85	O-LC72121/BU2099FV DO	O	Data signal input from tuner and SP driver
86	O-LC72121/BU2099FV CLK	O	Clock signal output to tuner and SP driver
87	O-BU2099FV LCH	O	LCH signal output to SP driver
88	O-BD3401 CLK	O	Clock signal output to sound processor
89	VSS2	—	Ground pin
90	VDD2	—	Power supply pin (+3.5 V)
91	O-BD3401 DATA	O	Data signal output to sound processor
92	O-XTCN	O	CD XTCN signal output
93	O-XRES (RESET)	O	CD reset signal output
94	O-XLT (CD-LAT)	O	CD latch signal output
95	O-CD-DATA	O	CD data signal output
96	I-SENS	I	CD SENS signal input
97	O-CD-CLK	O	CD clock signal output
98	O-MP3-DO	O	MP3 data signal output to CD digital processor
99	I-MP3-DI	I	MP3 data signal input from CD digital processor
100	O-MP3-CLK	O	MP3 clock signal output to CD digital processor




5-3. BLOCK DIAGRAM — MAIN SECTION —

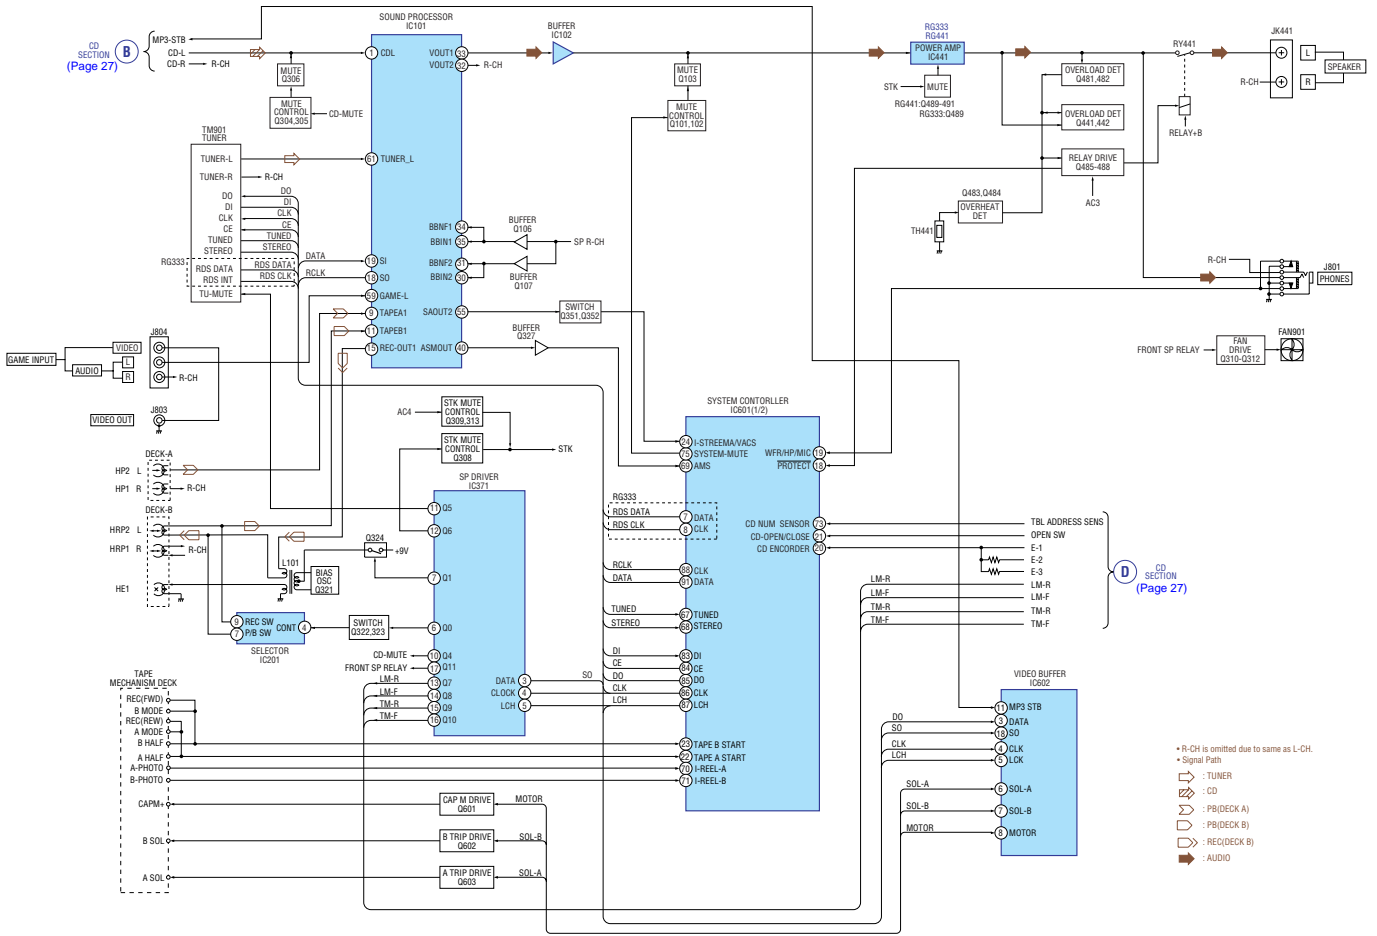

5-4. BLOCK DIAGRAM — PANEL/POWER SECTION —

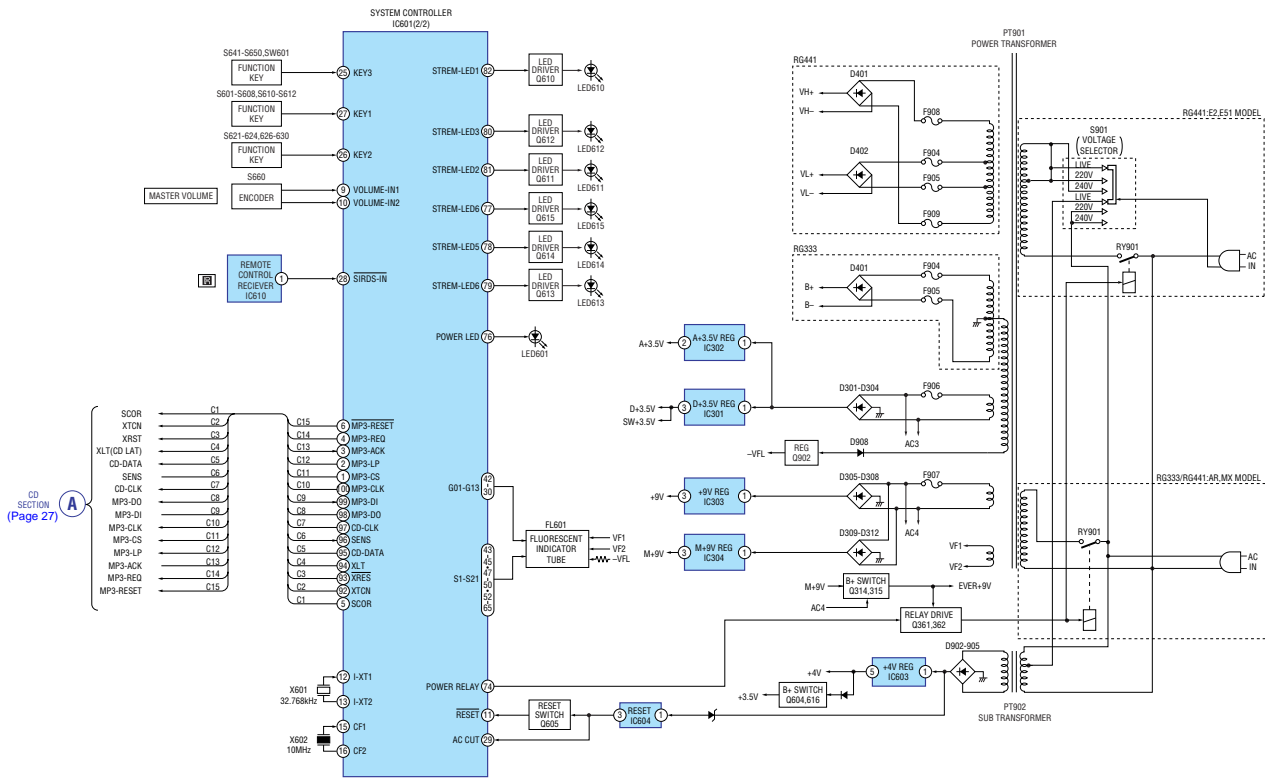

5-5. CIRCUIT BOARDS LOCATION

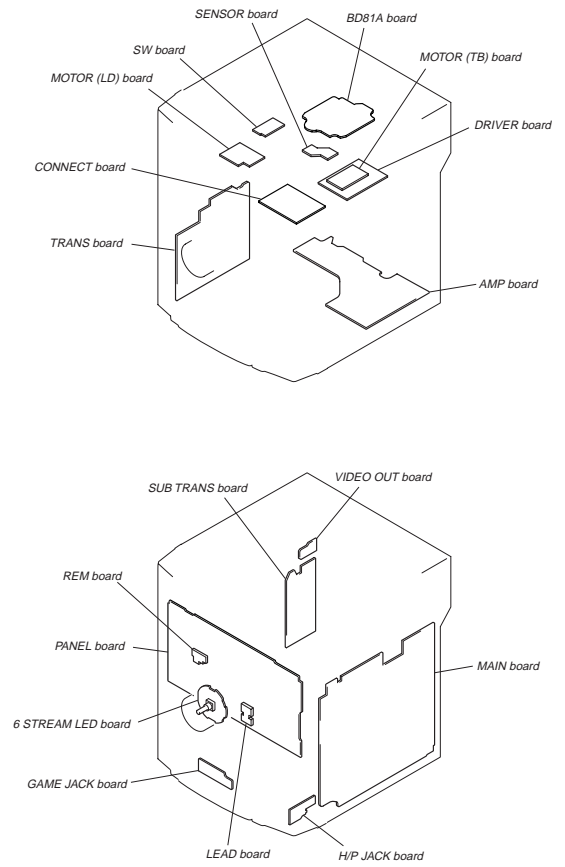

5-6. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS




Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Pattern from the side which enables seeing. (The other layer's patterns are not indicated.)

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.  
 (Conductor Side)  
 Parts face side: Parts on the parts face side seen from the parts face are indicated.  
 (Component Side)

- Indication of transistor.



UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

LF : LEAD FREE MARK

- Unleaded solder has the following characteristics.
  - Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
  - Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
  - Soldering irons using a temperature regulator should be set to about 350 °C.
  - Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
  - Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
  - It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

Note on Schematic Diagram:


- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}\text{W}$  or less unless otherwise specified.
- $\square$  : nonflammable resistor.
- $\square$  : panel designation.

Note: The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

- — : B+ Line.
- - - - : B- Line.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- ( ) : CD PLAY
- \* : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  - $\square$  : TUNER (FM/AM)
  - $\square$  : CD PLAY
  - $\square$  : TAPE PLAY (DECK-A)
  - $\square$  : TAPE PLAY (DECK-B)
  - $\square$  : REC
  - $\square$  : AUDIO
- Abbreviation
  - MX : Mexican model
  - AR : Argentine model
  - E2 : 120 V AC area in E model
  - E51 : Chilean and Peruvian model


5-7. WAVEFORMS

- PANEL Board -

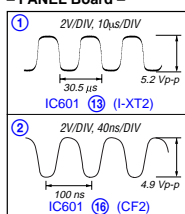

HCD-RG333/RG441

5-8. PRINTED WIRING BOARD — CD MECHANISM SECTION (1/2) — • Refer to page 30 for Circuit Boards Location.  : Uses unleaded solder.

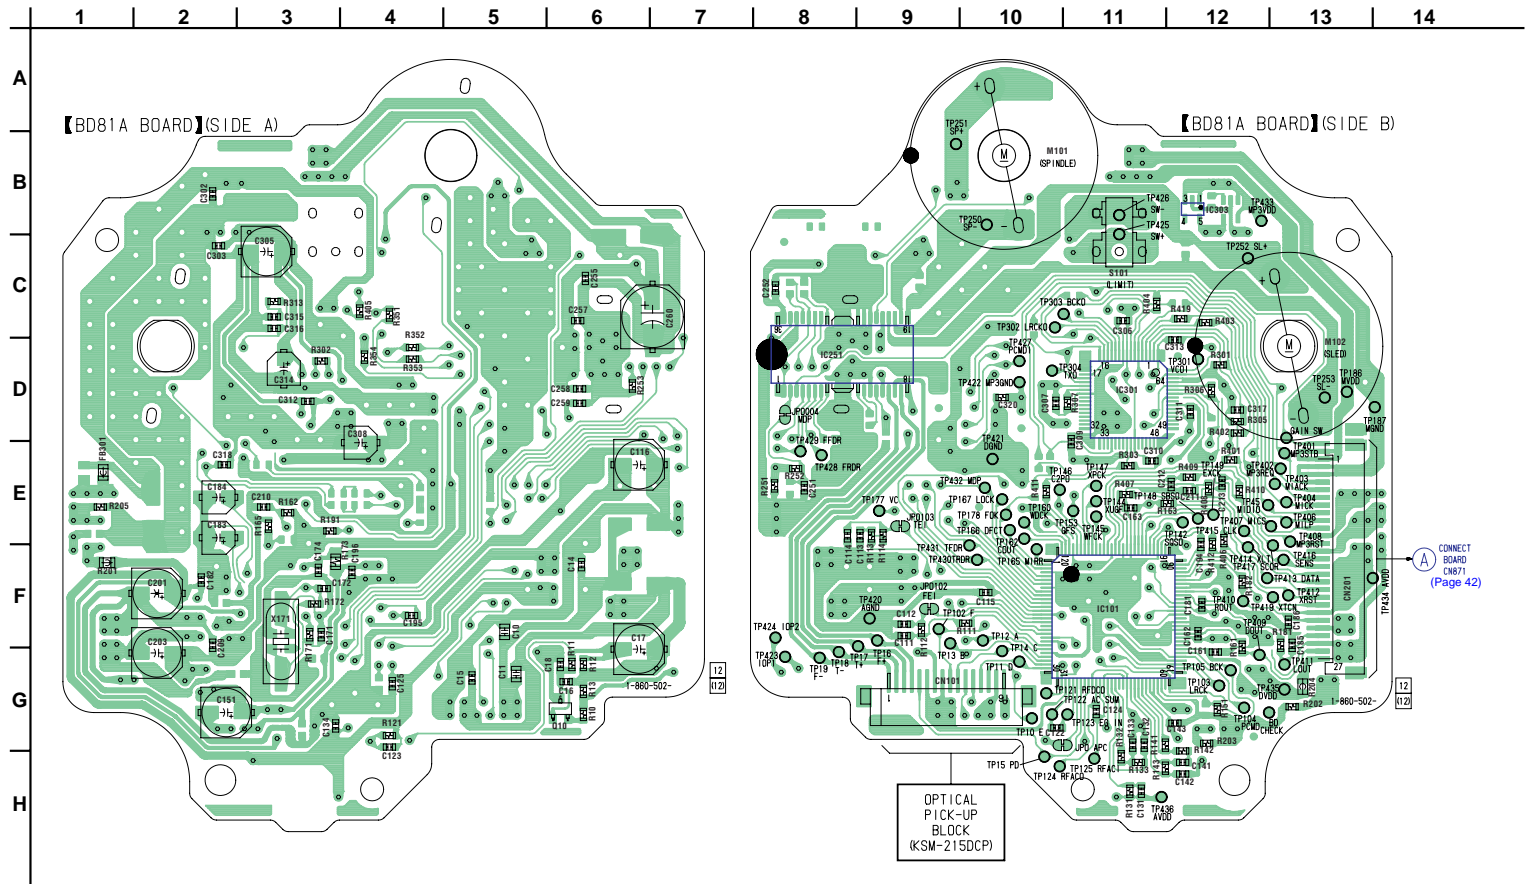


• Semiconductor Location


Ref. No.	Location
IC101	F-11
IC251	D-8
IC301	D-11
IC303	B-12
Q10	G-6



5-9. SCHEMATIC DIAGRAM — CD MECHANISM SECTION (1/2) — • Refer to page 50 for IC Block Diagrams.

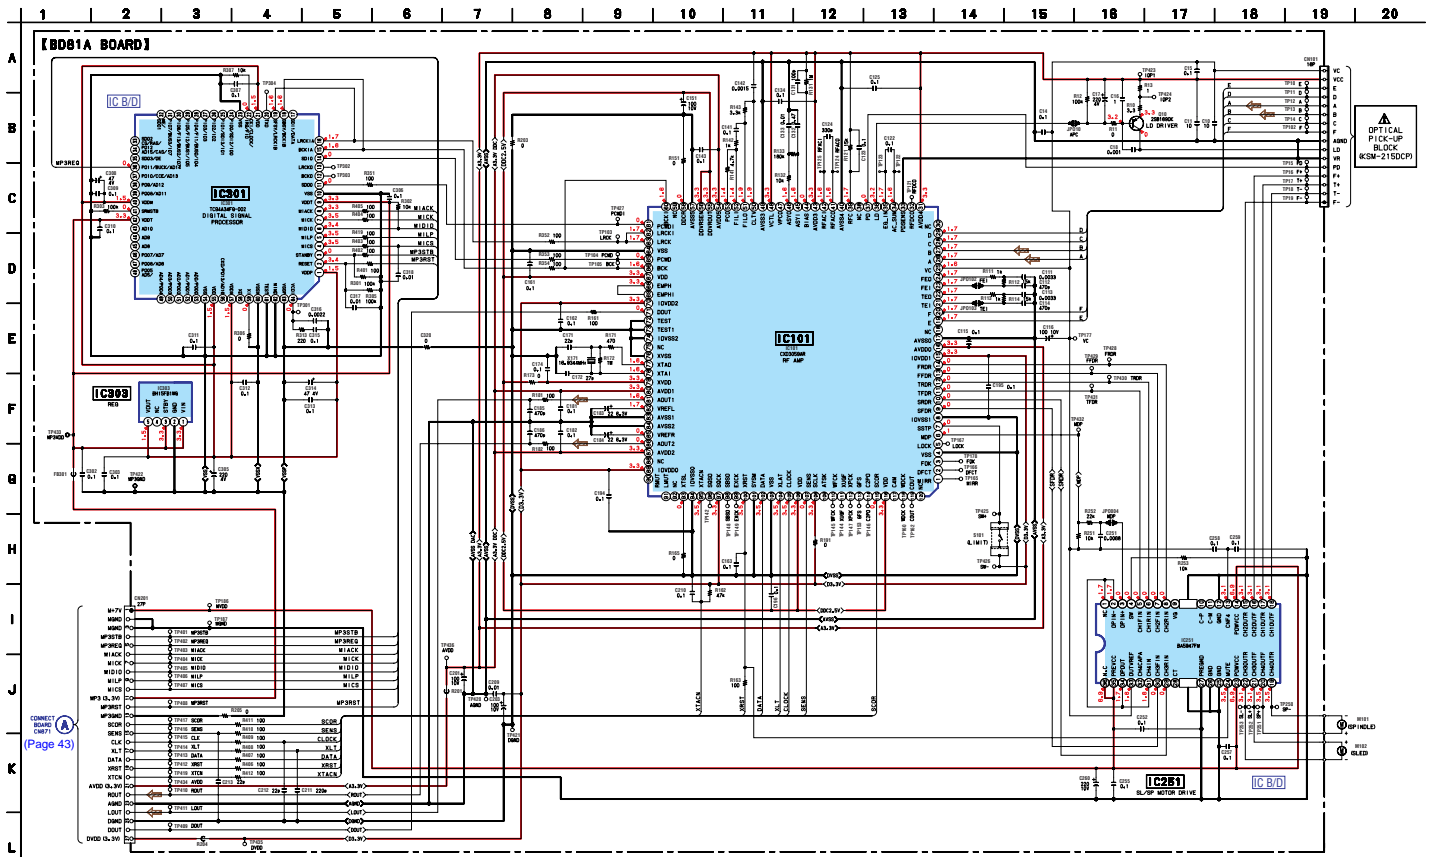


5-10. PRINTED WIRING BOARDS — CD MECHANISM SECTION (2/2) — • Refer to page 30 for Circuit Boards Location. **LF** : Uses unleaded solder.

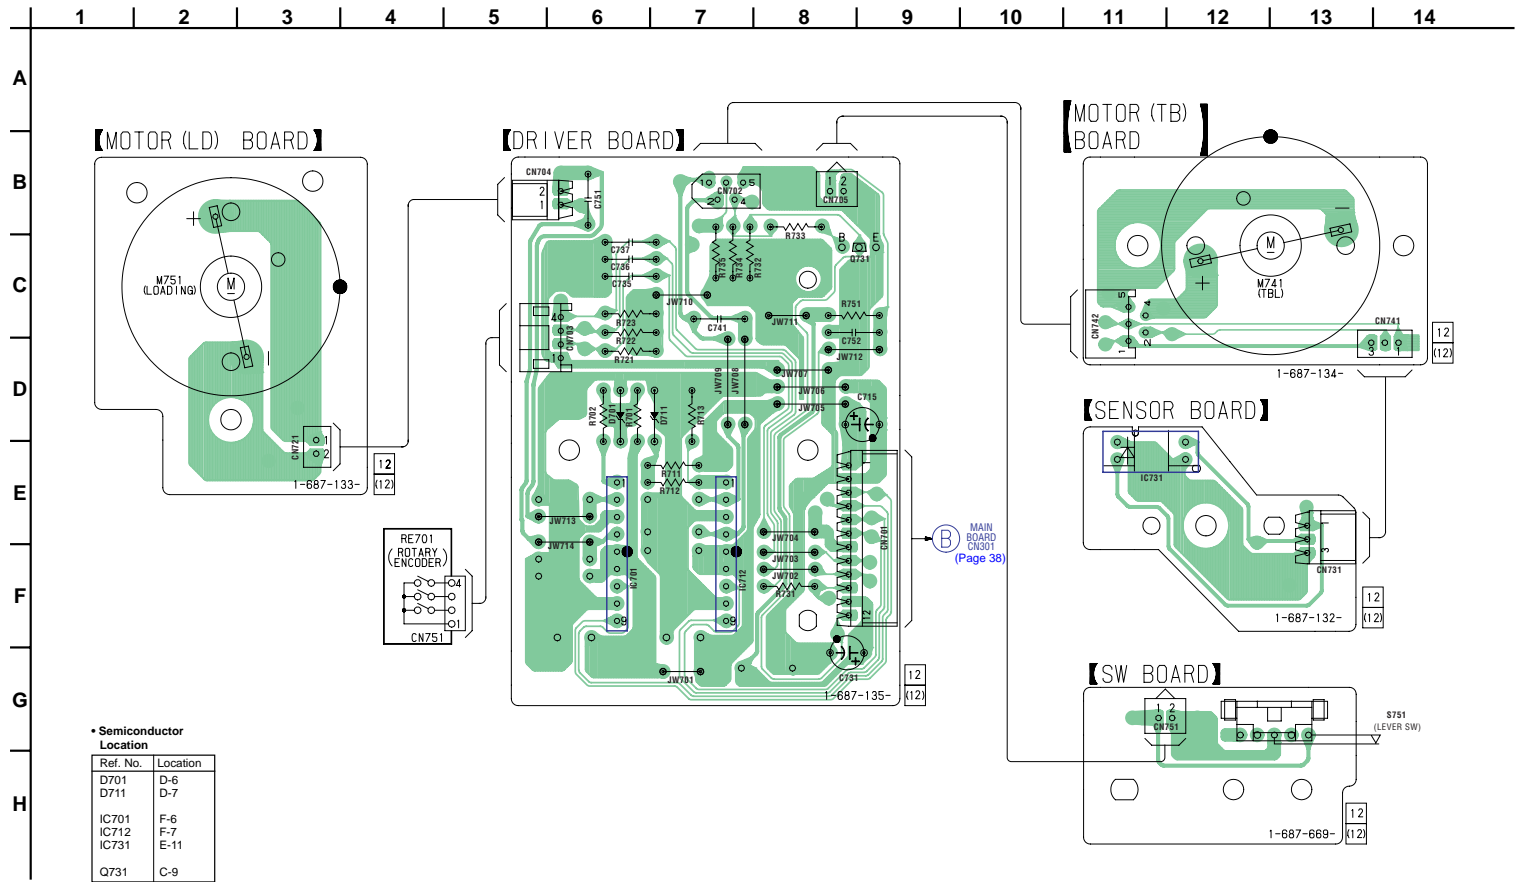

• Semiconductor Location


Ref. No.	Location
D701	D-6
D711	D-7
IC701	F-6
IC712	F-7
IC731	E-11
Q731	C-9

5-11. SCHEMATIC DIAGRAM — CD MECHANISM SECTION (2/2) — • Refer to page 50 for IC Block Diagrams.

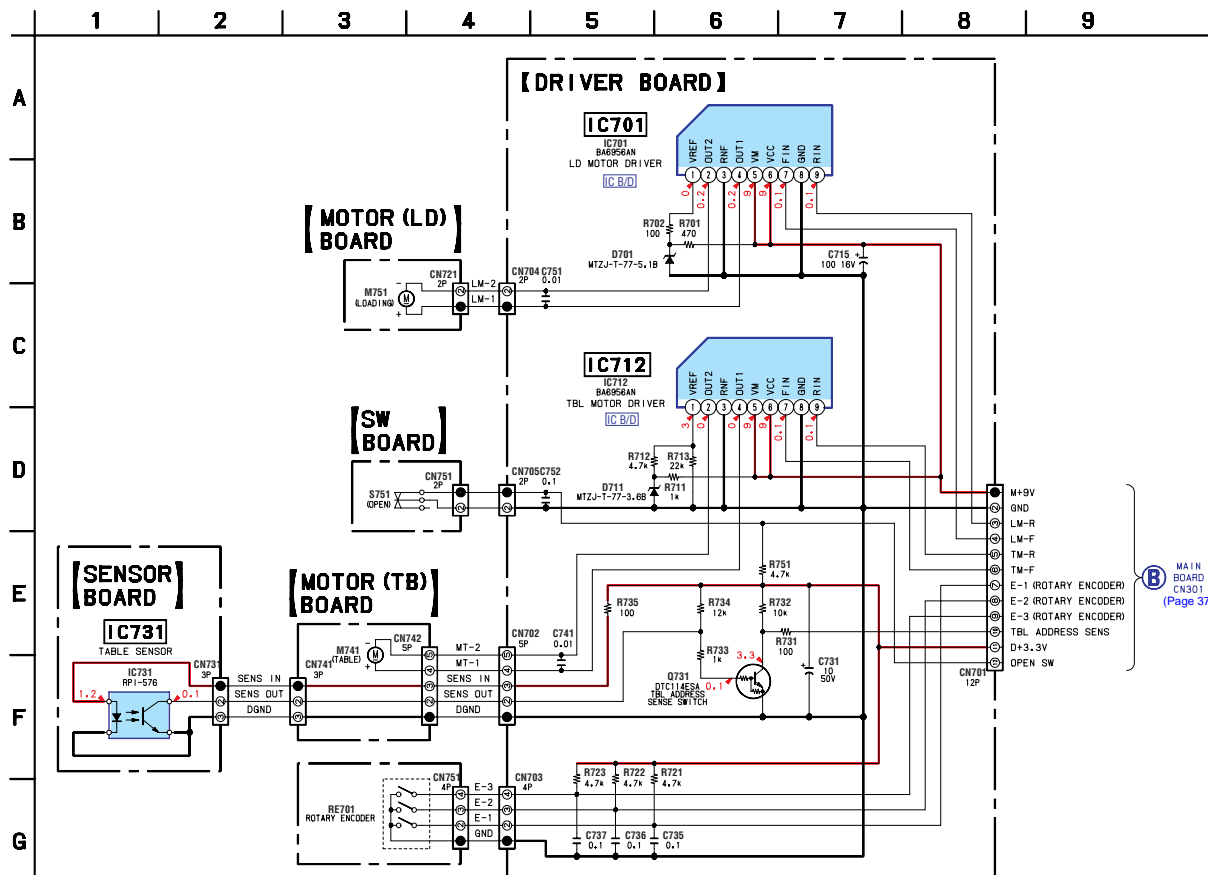


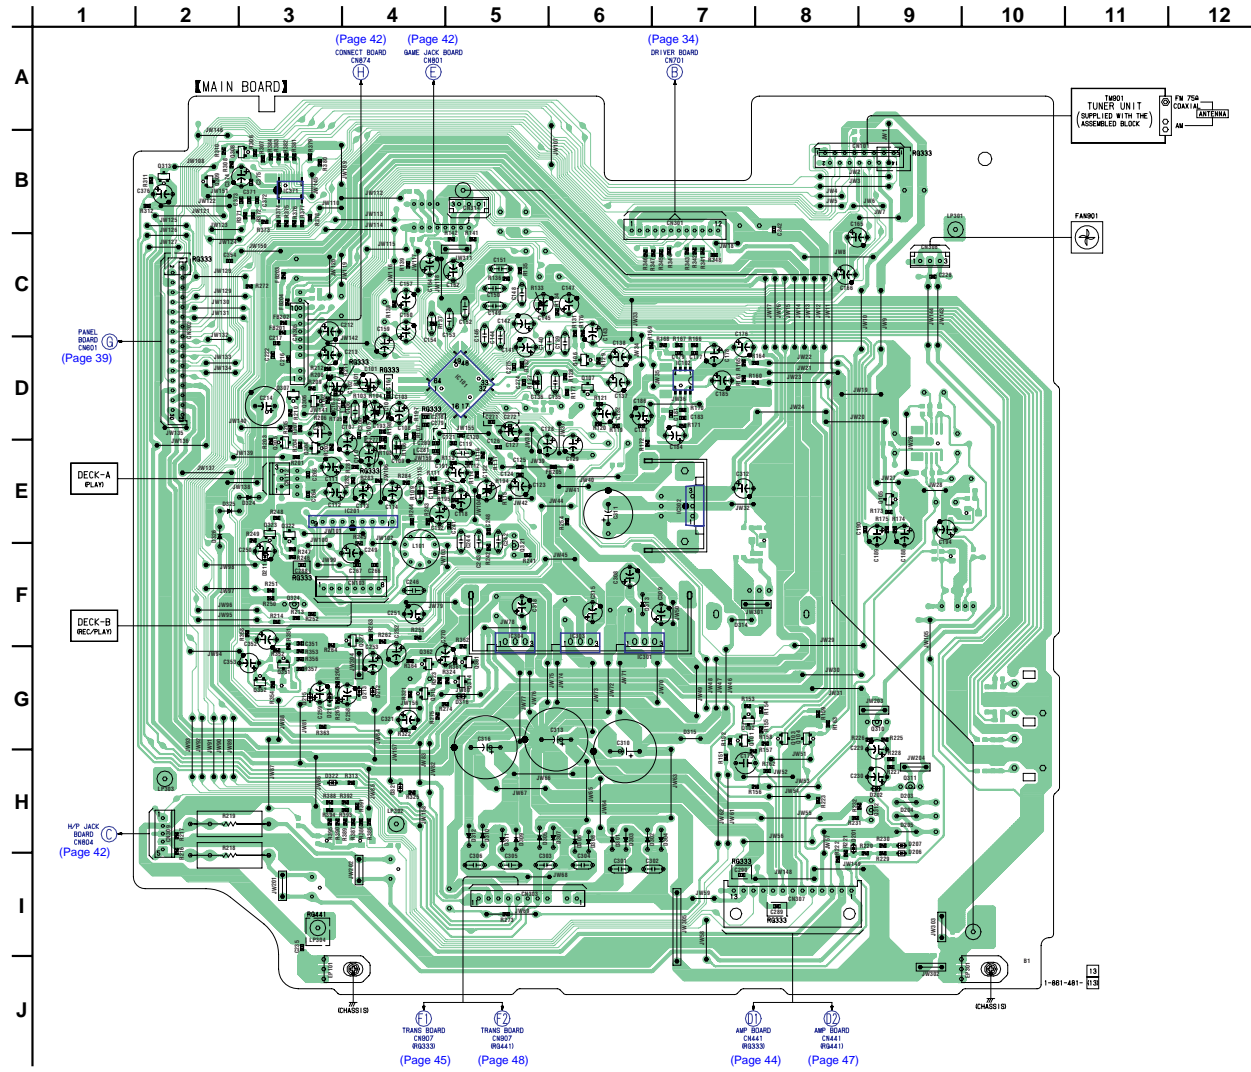


5-13. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 51 for IC Block Diagrams.

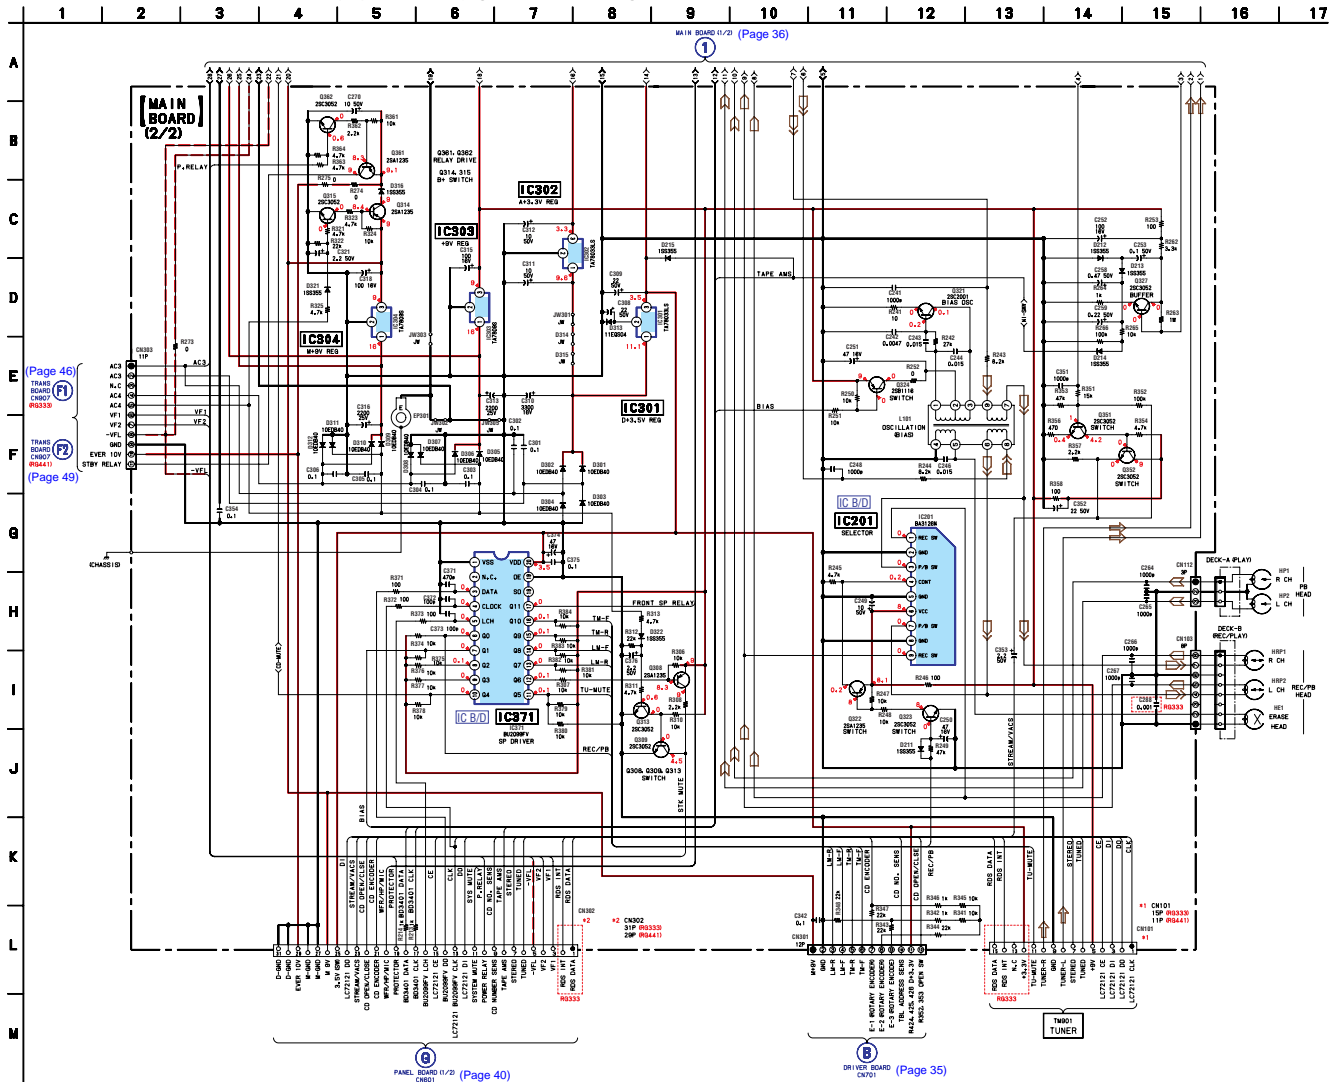

HCD-RG333/RG441


5-14. PRINTED WIRING BOARD — MAIN SECTION — • Refer to page 30 for Circuit Boards Location.  : Uses unleaded solder.



• Semiconductor Location

Ref. No.	Location
D201	H-8
D202	H-9
D206	H-9
D207	H-9
D211	F-3
D212	G-4
D213	G-4
D214	G-3
D215	G-3
D301	H-6
D302	H-6
D303	H-6
D304	H-7
D305	H-5
D306	H-6
D307	H-6
D308	H-6
D309	H-5
D310	H-5
D311	H-5
D312	H-5
D313	F-6
D316	G-5
D321	H-4
D322	H-3
D324	E-3
D325	E-2
D326	E-2
IC101	D-5
IC102	D-7
IC201	E-4
IC301	F-6
IC302	E-7
IC303	F-6
IC304	F-5
IC371	B-3
Q101	G-7
Q102	G-7
Q103	G-8
Q104	G-8
Q105	E-9
Q106	D-6
Q107	D-6
Q304	E-3
Q305	E-3
Q306	D-3
Q307	D-3
Q308	B-3
Q309	B-2
Q310	G-9
Q311	H-9
Q312	H-9
Q313	B-2
Q314	G-5
Q315	G-4
Q321	F-5
Q322	E-3
Q323	E-3
Q324	F-3
Q327	F-4
Q351	G-3
Q352	G-3
Q361	G-5
Q362	G-4

5-15. PRINTED WIRING BOARDS — PANEL SECTION — • Refer to page 30 for Circuit Boards Location. **LF** : Uses unleaded solder.

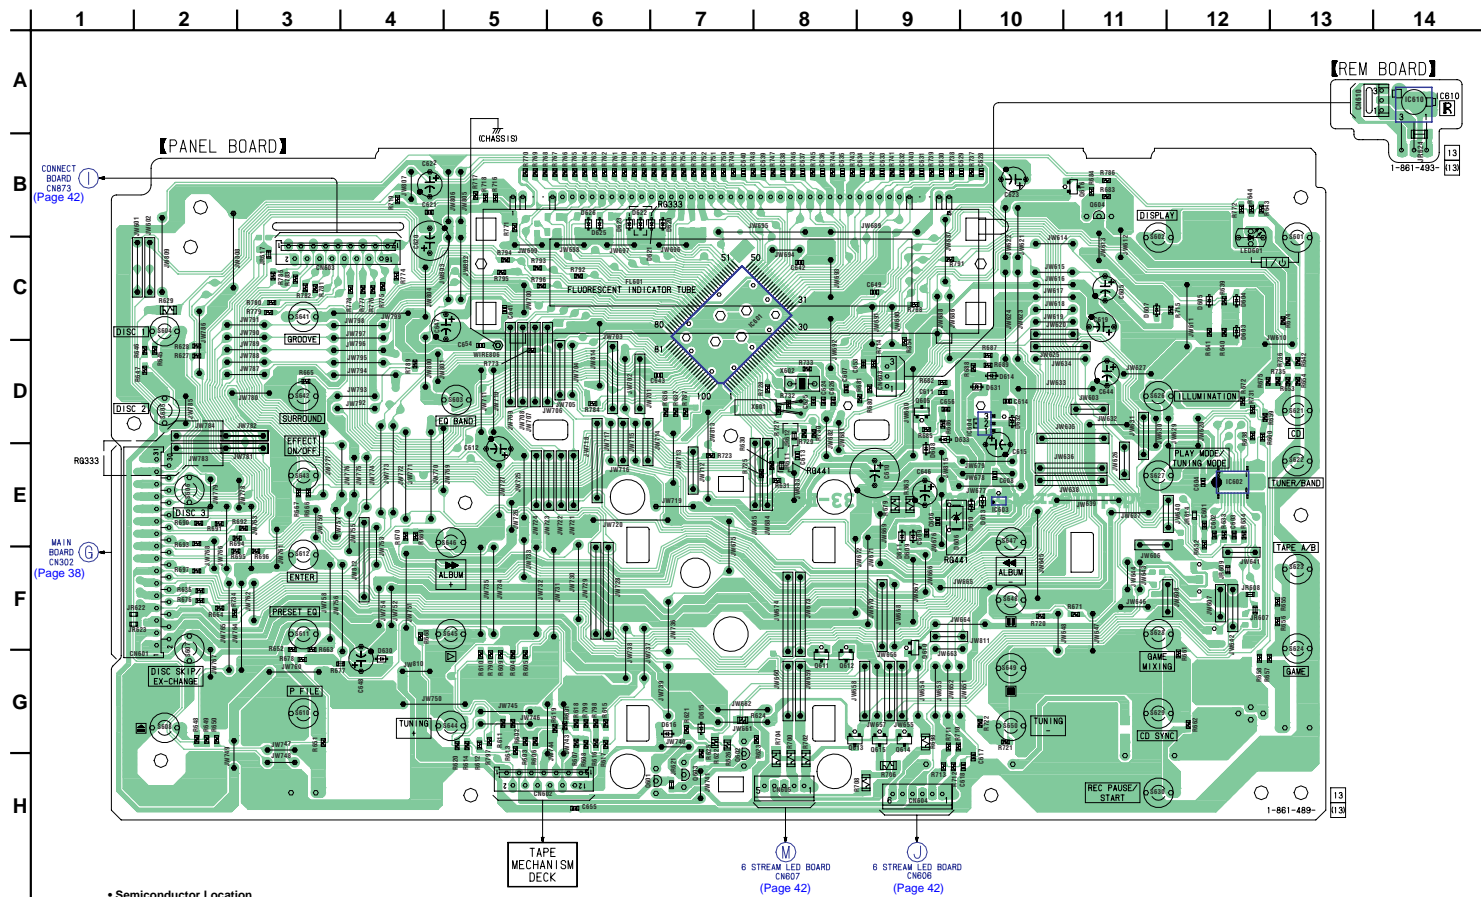


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D603	C-12	D613	E-10	D626	B-6	IC604	D-10	Q605	D-9
D604	C-12	D614	D-10	D630	G-4	IC610	A-14	Q610	F-9
D605	C-12	D615	G-7	D631	D-10			Q611	G-8
D606	E-9	D616	G-7	D632	D-10	LED601	C-12	Q612	G-8
D607	C-11	D620	B-7	D633	D-9			Q613	G-8
D608	E-9	D621	B-6			Q601	H-7	Q614	G-9
D609	E-9	D622	B-6	IC601	C-7	Q602	H-7	Q615	G-9
D610	E-10	D623	B-6	IC602	E-12	Q603	H-7	Q616	B-11
D611	E-9	D625	B-6	IC603	E-10	Q604	B-11		






5-17. SCHEMATIC DIAGRAM — PANEL SECTION (2/2) — • Refer to page 31 for Waveforms.

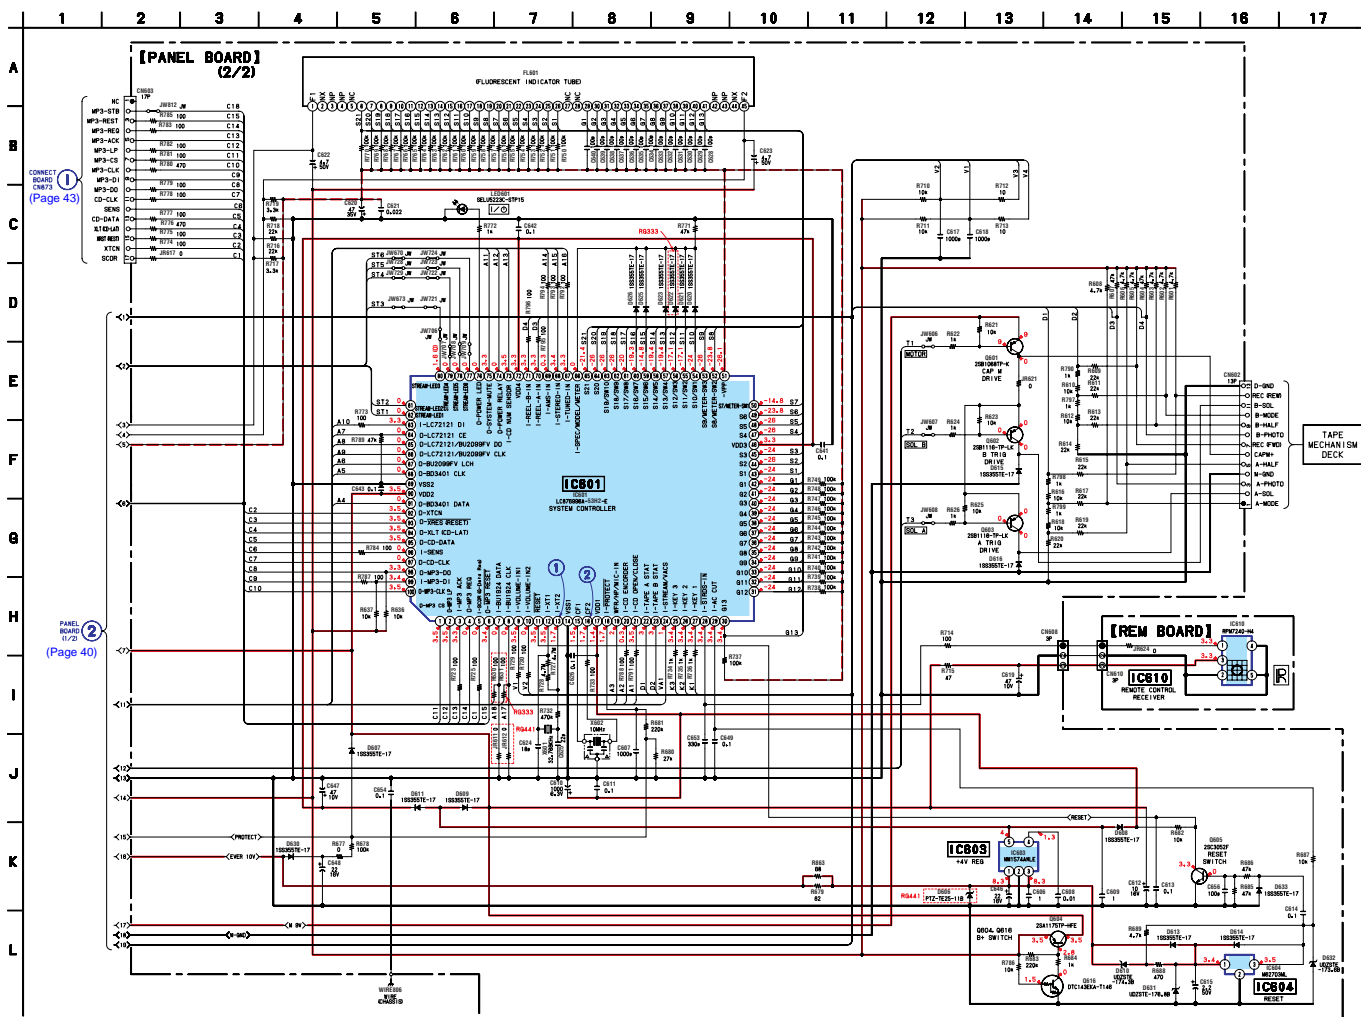

HCD-RG333/RG441


5-18. PRINTED WIRING BOARDS — JACK SECTION — • Refer to page 30 for Circuit Boards Location. **F** : Uses unleaded solder.

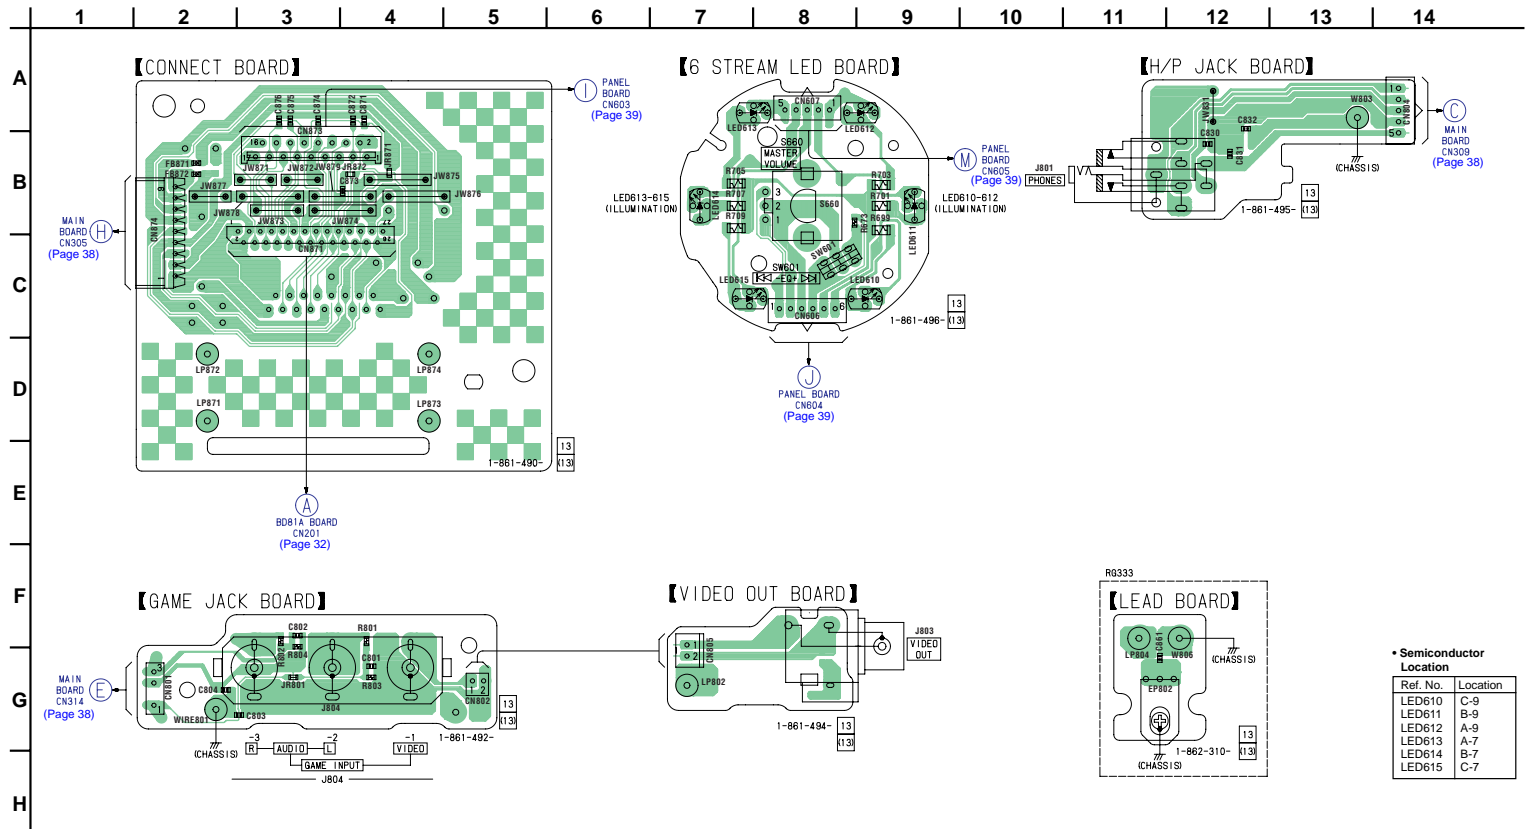

• Semiconductor Location


Ref. No.	Location
LED610	C-9
LED611	B-9
LED612	A-9
LED613	A-7
LED614	B-7
LED615	C-7

5-19. SCHEMATIC DIAGRAM — JACK SECTION —

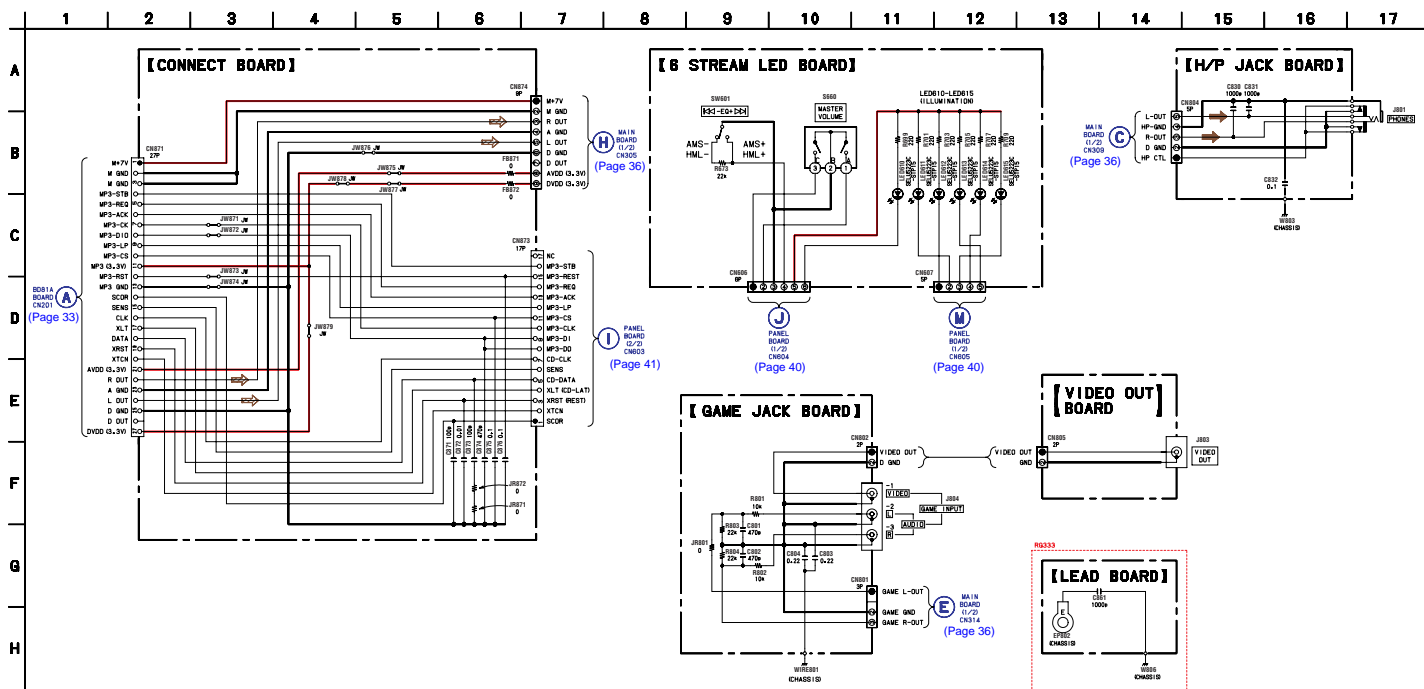

HCD-RG333/RG441


5-20. PRINTED WIRING BOARD — POWER AMP SECTION (RG333) — • Refer to page 30 for Circuit Boards Location.  : Uses unleaded solder.

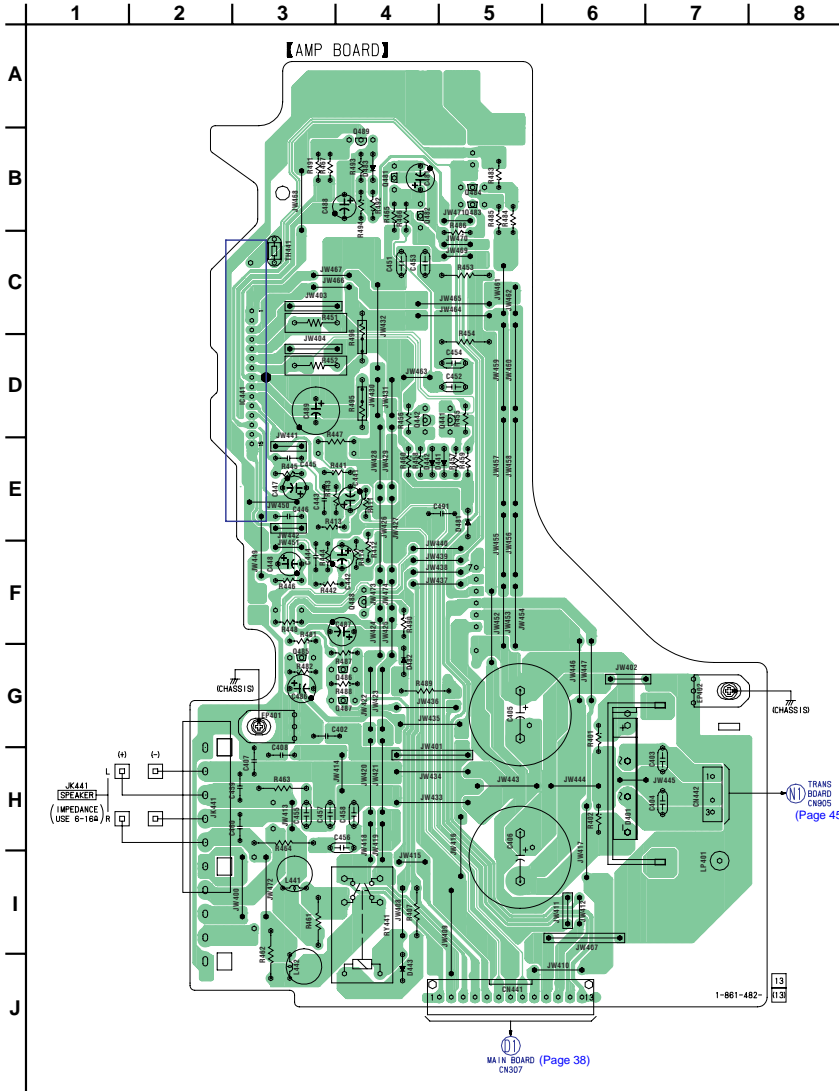

• Semiconductor Location

Ref. No.	Location
D401	H-6
D441	E-5
D442	E-4
D443	J-4
D481	E-5
D482	G-4
D483	B-4
IC441	D-3
Q441	D-5
Q442	D-4
Q481	B-4
Q482	B-4
Q483	B-5
Q484	B-5
Q485	G-3
Q486	G-4
Q487	G-4
Q488	F-4
Q489	B-4


5-21. PRINTED WIRING BOARDS — TRANSFORMER SECTION (RG333) — • Refer to page 30 for Circuit Boards Location.  : Uses unleaded solder.

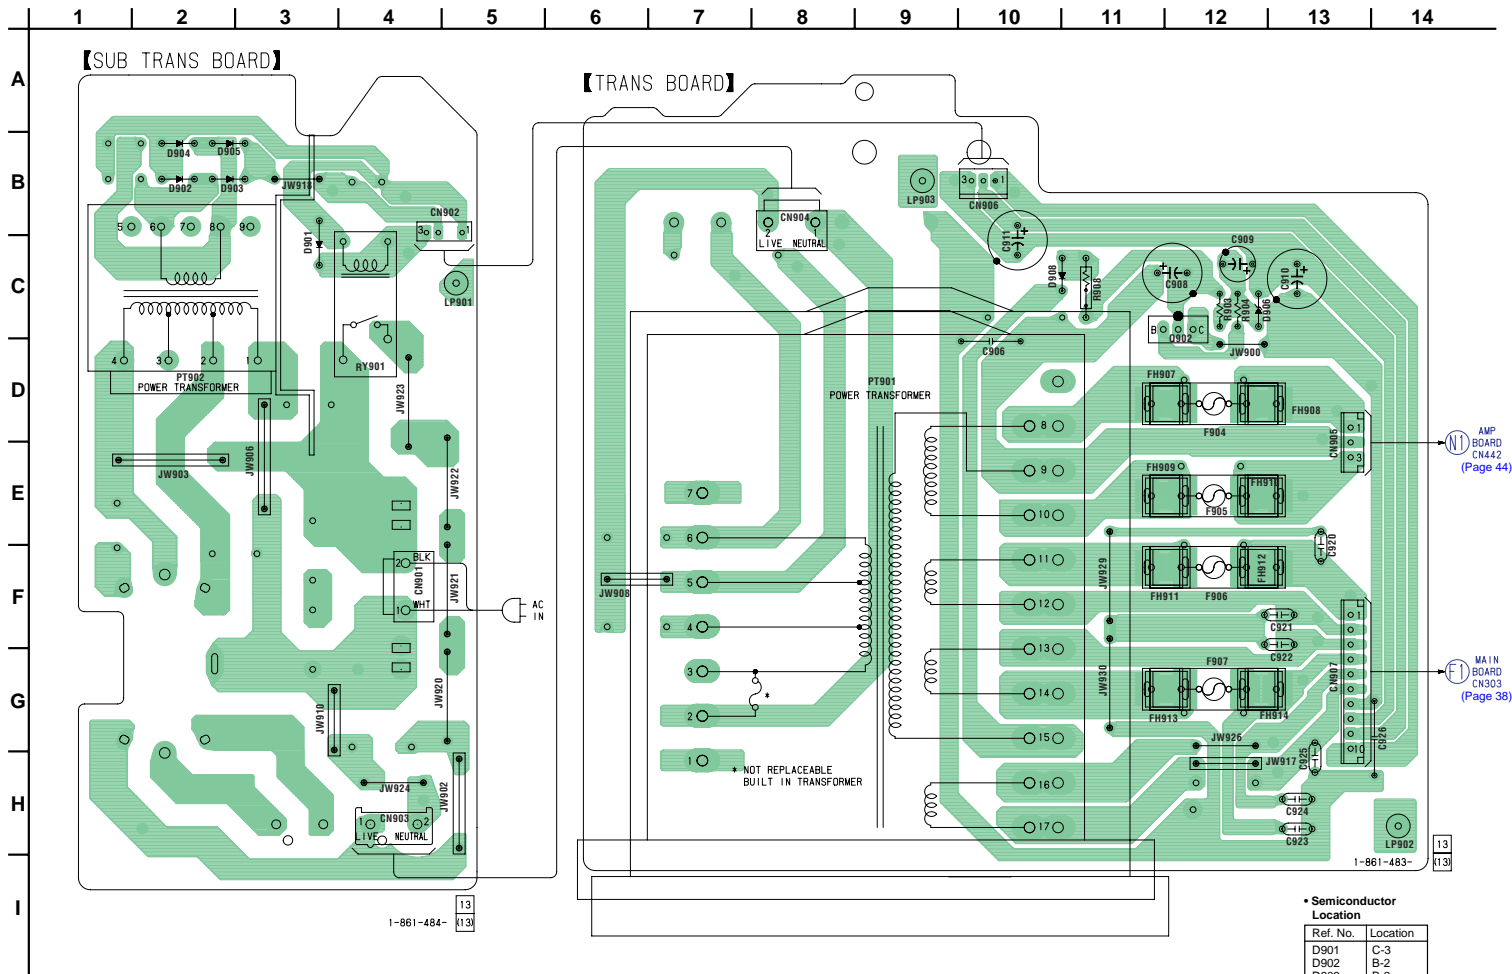

• Semiconductor Location

Ref. No.	Location
D901	C-3
D902	B-2
D903	B-2
D904	B-2
D905	B-2
D906	C-12
D908	C-10
C902	C-12


5-22. SCHEMATIC DIAGRAM — POWER SECTION (RG333) —

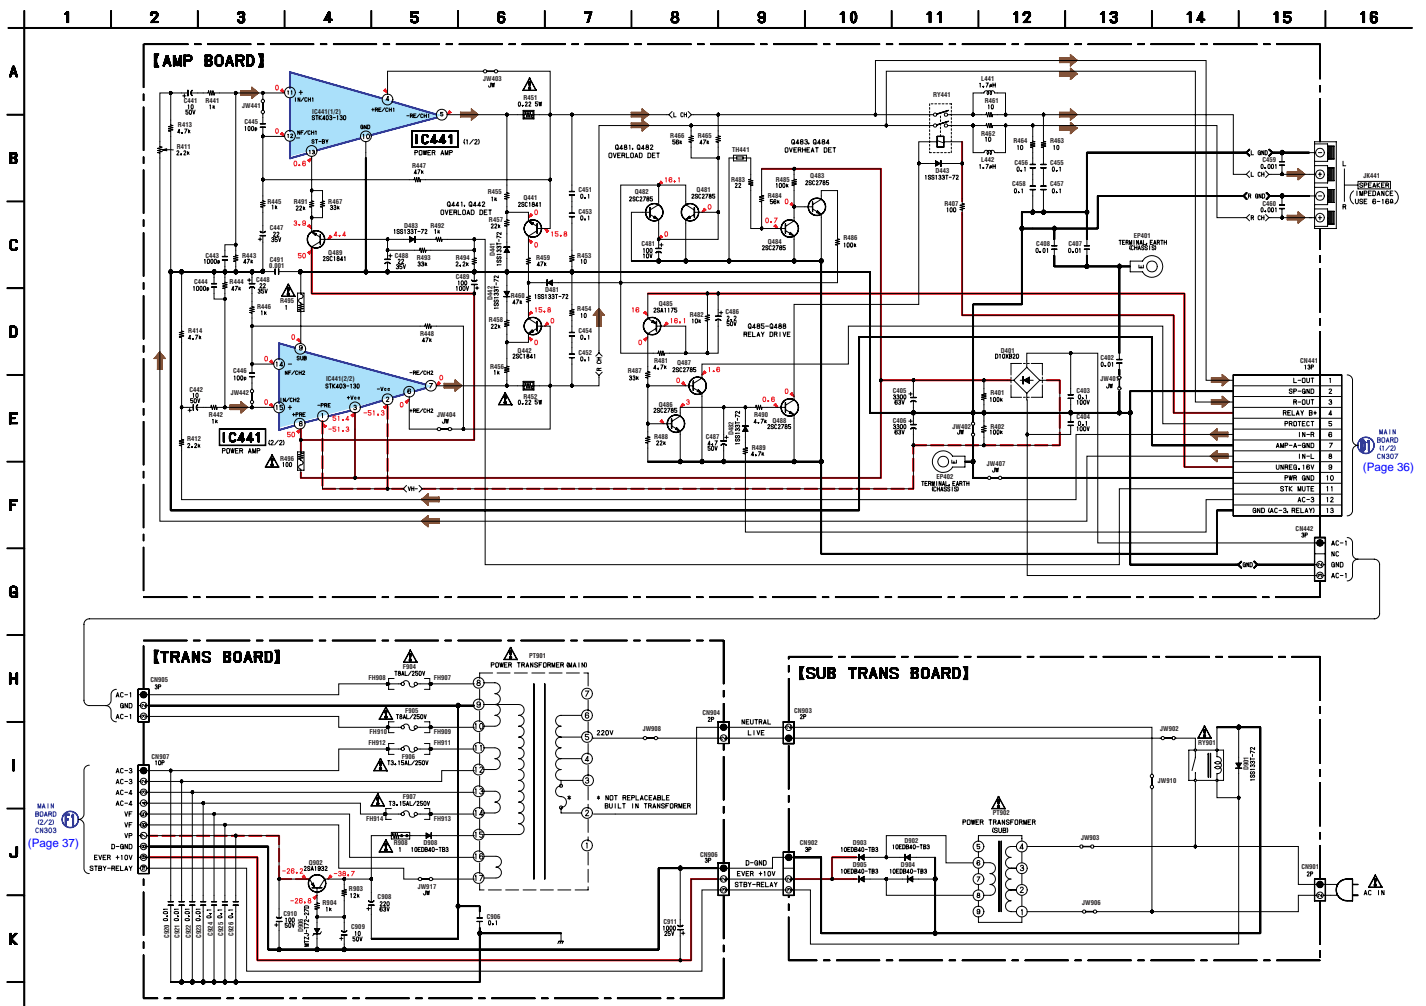



HCD-RG333/RG441

5-24. PRINTED WIRING BOARDS — TRANSFORMER SECTION (RG441) — • Refer to page 30 for Circuit Boards Location. **LF** : Uses unleaded solder.

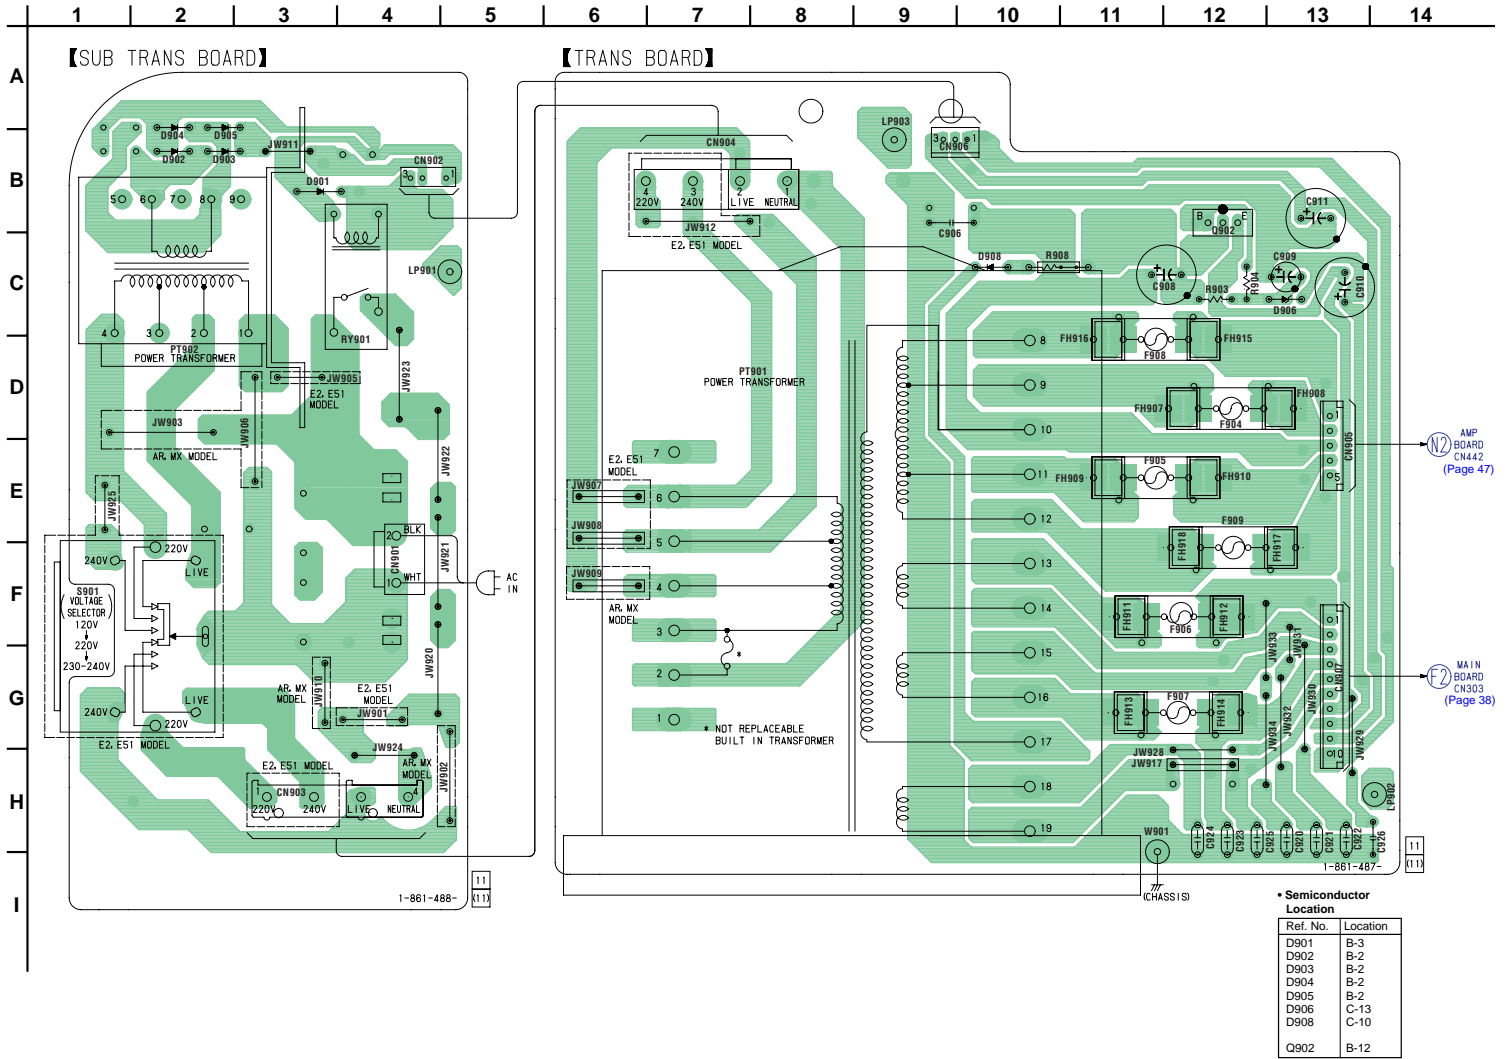

• Semiconductor Location

Ref. No.	Location
D901	B-3
D902	B-2
D903	B-2
D904	B-2
D905	B-2
D906	C-13
D908	C-10
Q902	B-12







HCD-RG333/RG441

5-26. IC BLOCK DIAGRAMS


IC301 TC94A34FG-002 (BD81A BOARD)

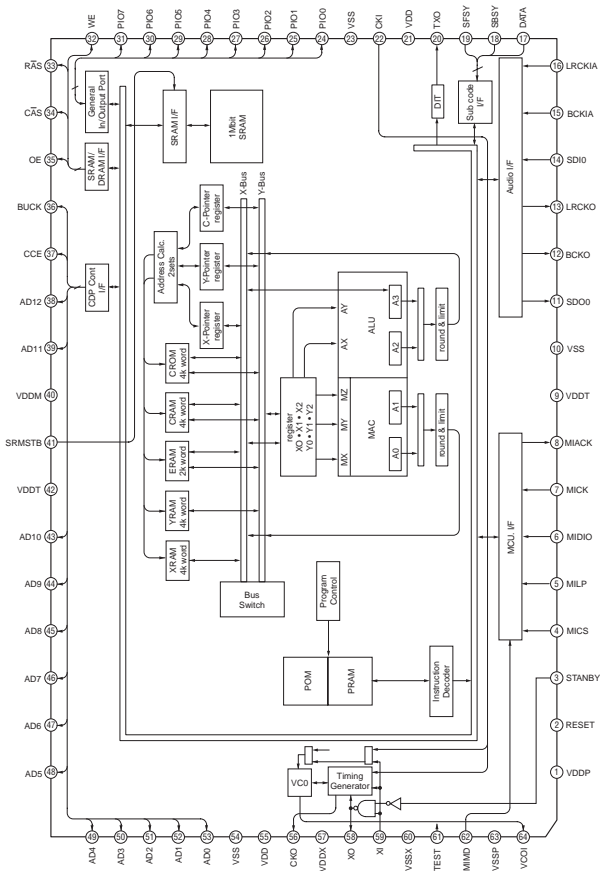


IC251 BA5947FM (BD81A BOARD)

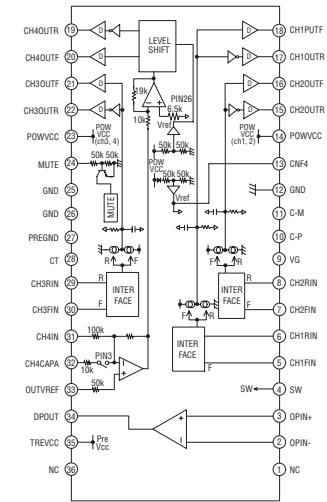


IC701 BA6956AN (DRIVER BOARD)  
IC712 BA6956AN (DRIVER BOARD)

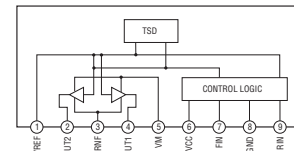


IC101 BD3401KS2 (MAIN BOARD)

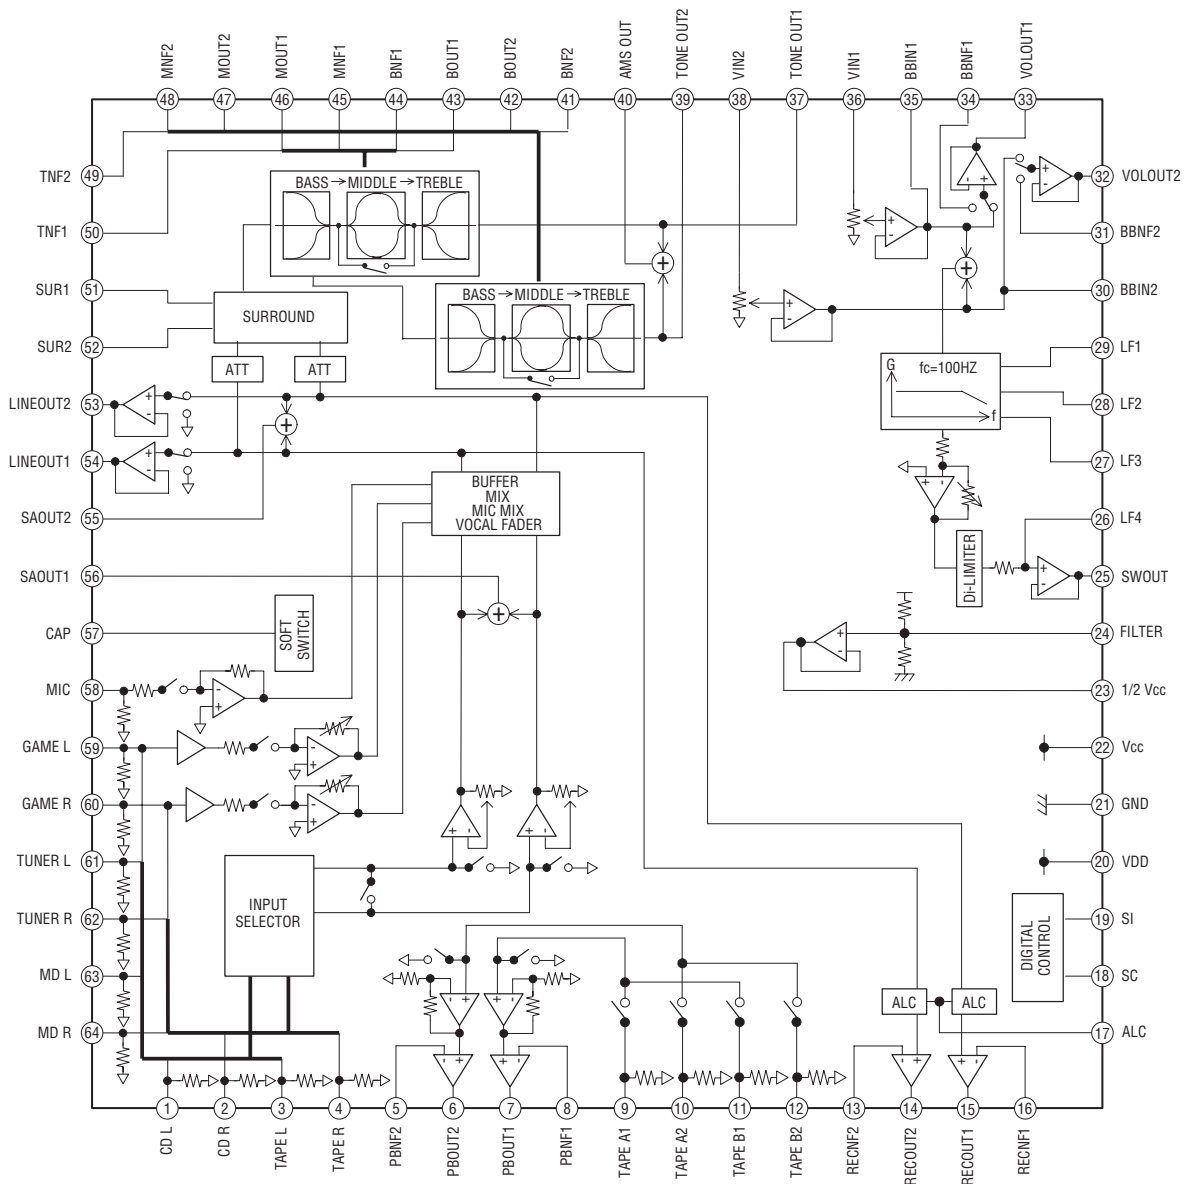

IC201 BA3126N (MAIN BOARD)

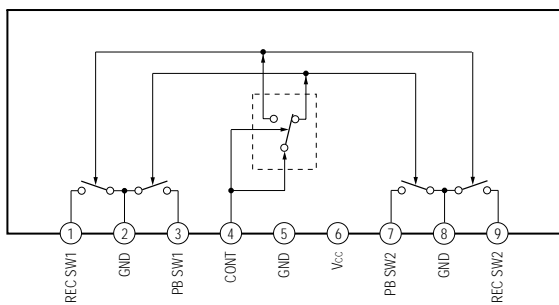

IC371 BU2099FV (MAIN BOARD)  
IC602 BU2099FV (PANEL BOARD)

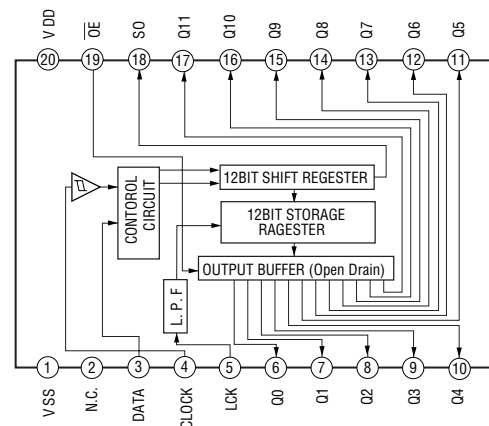

## SECTION 6 EXPLODED VIEWS


**NOTE:**

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.

- Accessories are given in the last of this parts list.
- Abbreviation  
 MX : Mexican model  
 AR : Argentine model  
 E2 : 120 V AC area in E model  
 E51 : Chilean and Peruvian model


The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

**6-1. MAIN SECTION**

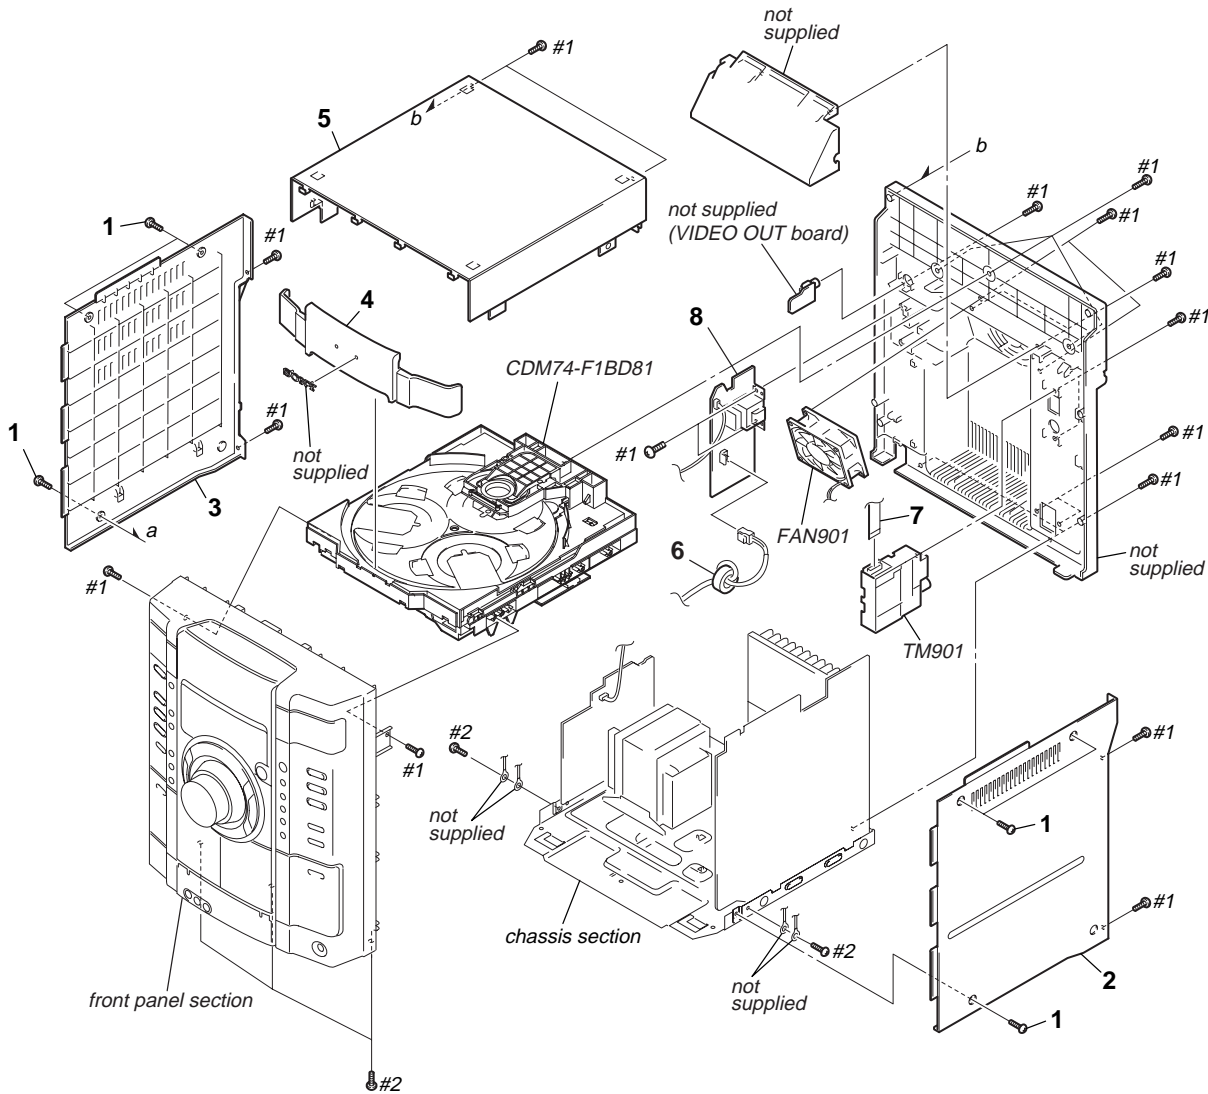


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-363-099-32	SCREW (CASE 3 TP2)		8	X-4956-293-1	SUB TRANS BOARD, COMPLETE (RG333)	
2	4-245-184-71	CASE (SIDE-R)		8	X-4956-294-1	SUB TRANS BOARD, COMPLETE	
3	4-245-183-71	CASE (SIDE-L)				(RG441:E2,E51,AR)	
4	4-252-196-61	DOOR, CD (RG333)		8	X-4956-322-1	SUB TRANS BOARD, COMPLETE (RG441:MX)	
4	4-252-196-71	DOOR, CD (RG441)		FAN901	1-763-117-13	FAN, DC	
5	4-244-849-71	CASE (TOP)		TM901	1-693-615-11	TUNER PACK (FM/AM) (ANTENNA) (RG441)	
6	1-400-285-11	F-BEAD, E2515MRT		TM901	1-693-616-11	TUNER PACK (FM/AM) (ANTENNA) (RG333)	
7	1-769-940-11	WIRE (FLAT TYPE) (11 CORE) (RG441)		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
7	1-777-353-11	WIRE (FLAT TYPE) (15 CORE) (RG333)		#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

6-2. FRONT PANEL SECTION (1)

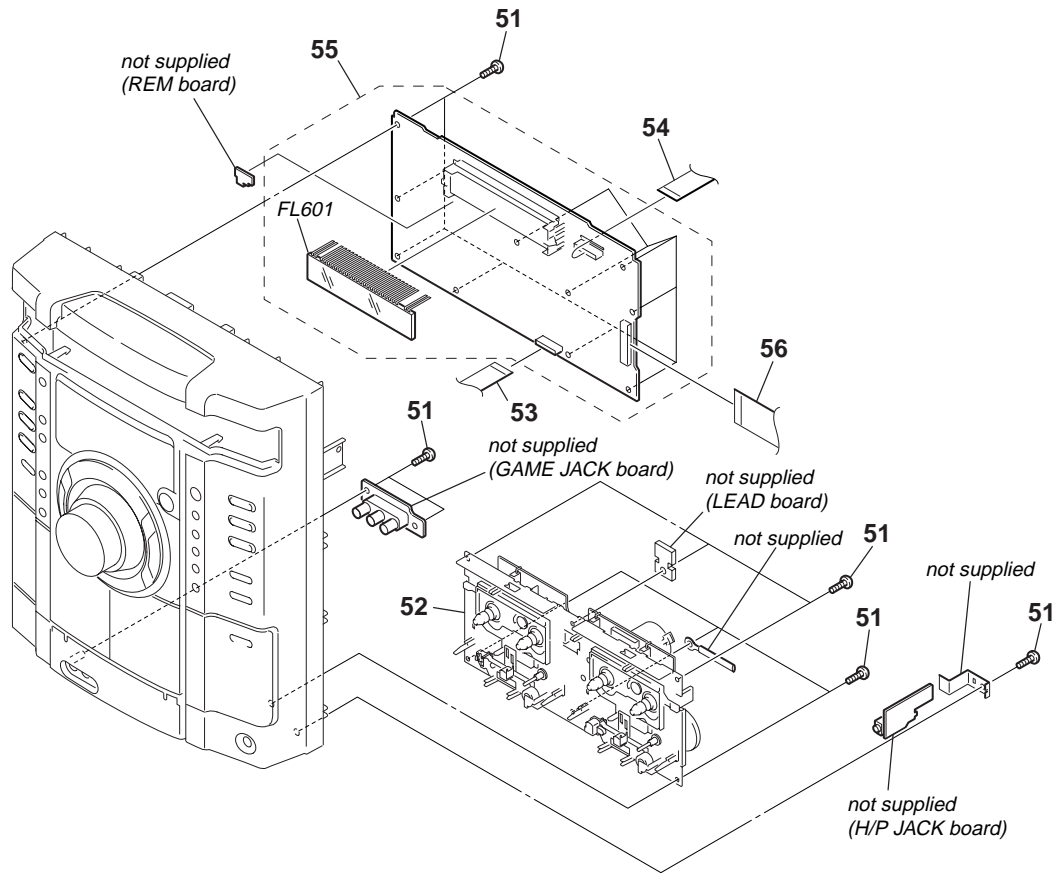


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-951-620-01	SCREW (2.6X8), +BVTP		55	A-4751-547-A	PANEL BOARD, COMPLETE (RG333)	
52	1-796-485-51	DECK, MECHANICAL		55	A-4751-553-A	PANEL BOARD, COMPLETE (RG441)	
53	1-769-975-11	WIRE (FLAT TYPE) (13 CORE)		56	1-773-317-11	WIRE (FLAT TYPE) (31 CORE) (RG333)	
54	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)		FL601	1-518-976-11	INDICATOR TUBE, FLUORESCENT	

## 6-3. FRONT PANEL SECTION (2)

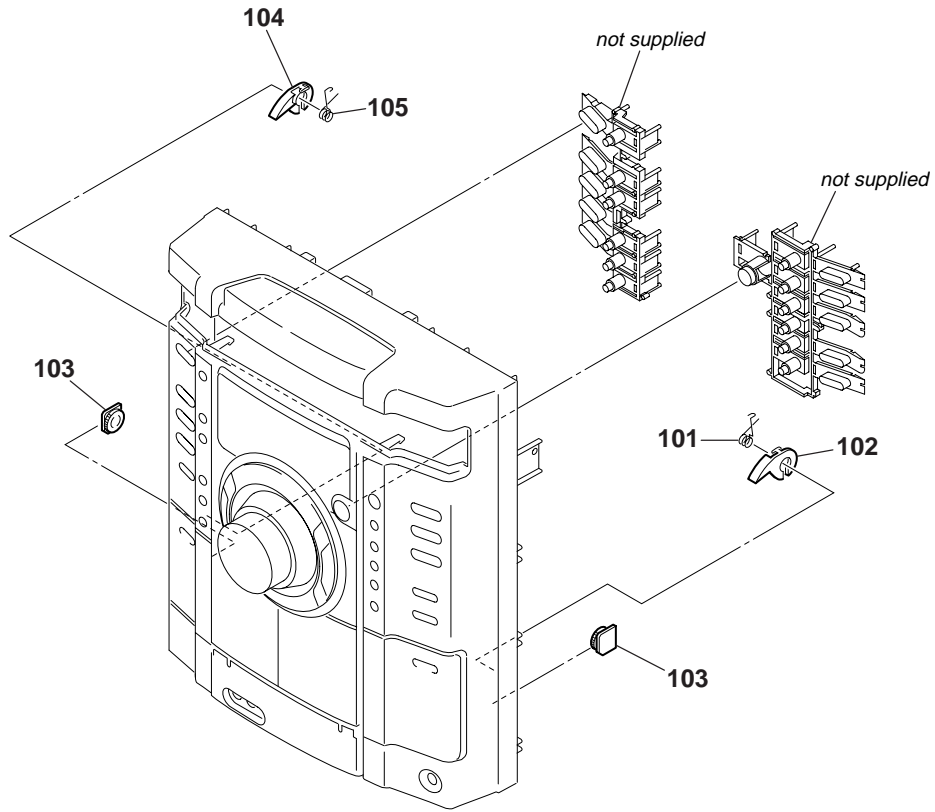


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-231-841-01	SPRING (HEART CAM-B)		104	4-231-824-01	CAM (A), HEART	
102	4-231-825-01	CAM (B), HEART		105	4-231-836-01	SPRING (HEART CAM-A)	
103	4-224-104-41	DAMPER					

6-4. FRONT PANEL SECTION (3)

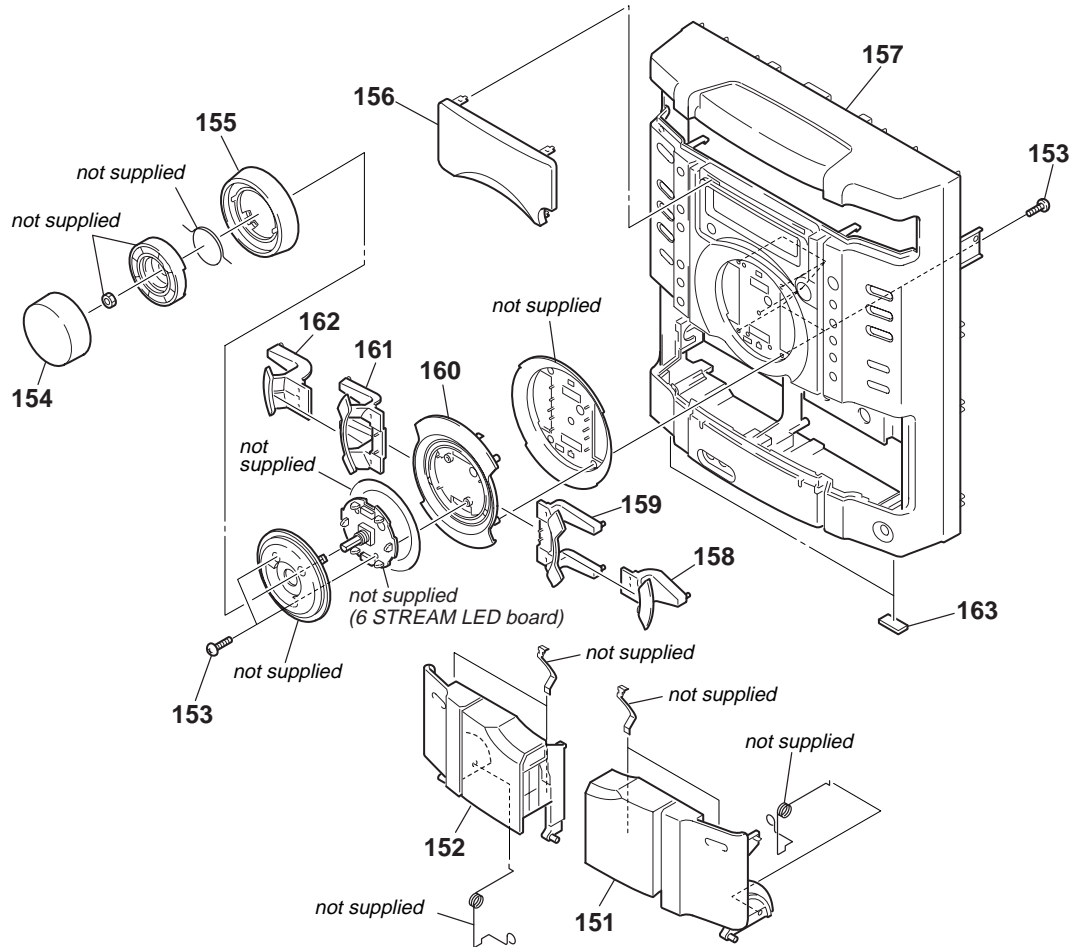

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-252-202-01	DOOR (B), CASS		157	4-252-195-31	PANEL, FRONT	
152	4-252-201-01	DOOR (A), CASS		158	4-252-205-01	BUTTON, PLAY	
153	4-951-620-01	SCREW (2.6X8), +BVTP		159	4-252-207-11	BUTTON, FF/ALBUM+	
154	4-252-214-01	KNOB, VOLUME		160	4-252-200-01	COVER, BUTTON	
155	X-4956-295-1	RING ASSY, KNOB		161	4-252-208-11	BUTTON, FR/ALBUM-	
156	4-252-198-01	WINDOW, DISPLAY (RG441)		162	4-252-206-01	BUTTON, STOP	
156	4-252-198-11	WINDOW, DISPLAY (RG333)		163	4-225-252-01	CUSHION (FOOT)	

## 6-5. MAIN BOARD SECTION

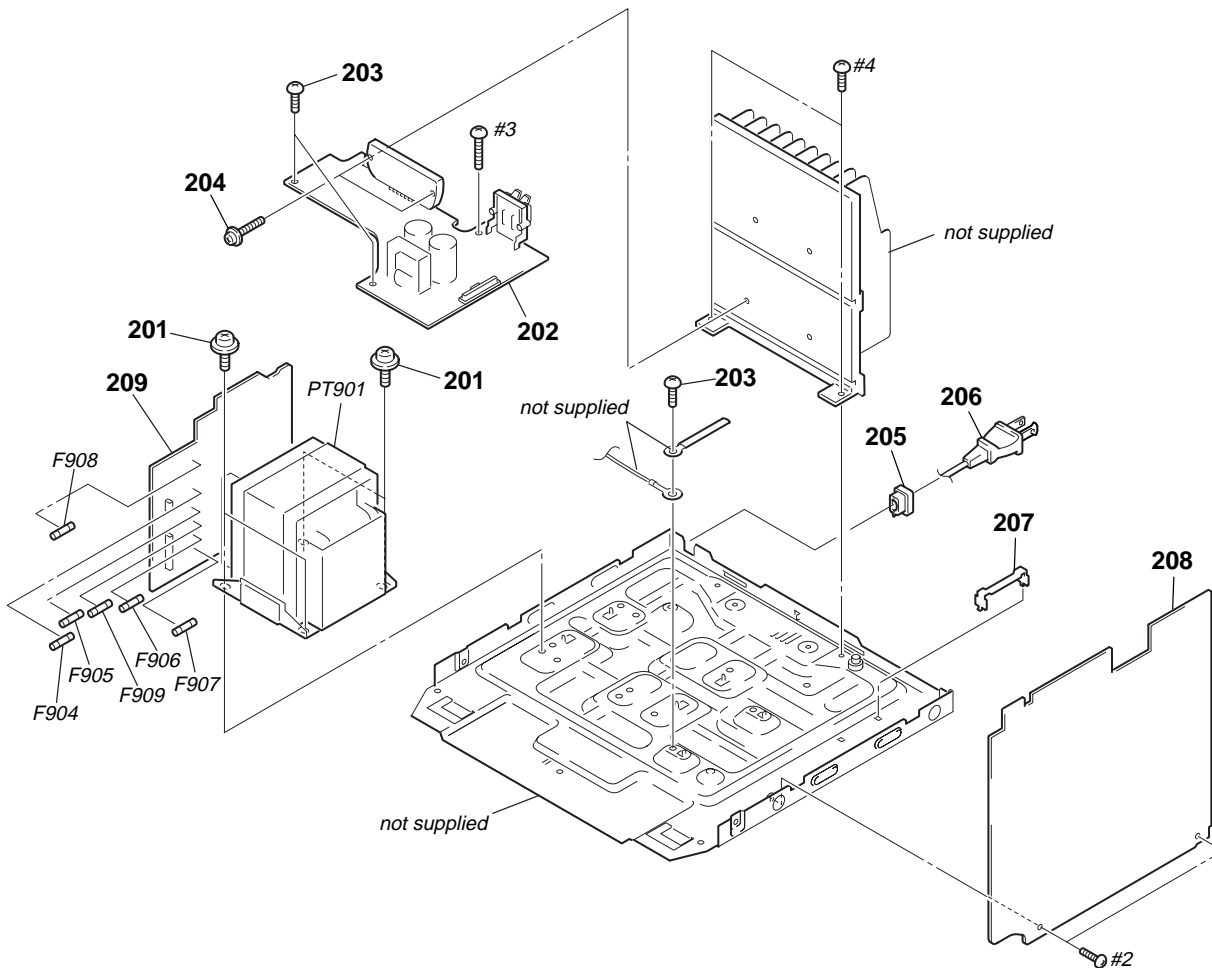


The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	4-242-527-01	S-SCREW, ITC+4-8 R		$\Delta$ F904	1-533-473-12	FUSE, GLASS TUBE (DIA.5) (T6.3AL/250V)	
202	A-4751-549-A	AMP BOARD, COMPLETE (RG333)					(RG441)
202	A-4751-555-A	AMP BOARD, COMPLETE (RG441:E2,E51)		$\Delta$ F904	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	
202	A-4752-193-A	AMP BOARD, COMPLETE (RG441:MX)					(RG333)
202	A-4752-198-A	AMP BOARD, COMPLETE (RG441:AR)		$\Delta$ F905	1-533-473-12	FUSE, GLASS TUBE (DIA.5) (T6.3AL/250V)	
							(RG441)
203	4-242-539-01	BVIT3B+3-8R W/O SLOT		$\Delta$ F905	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	
204	3-905-609-41	SCREW (TRANSISTOR)					(RG333)
205	3-703-244-00	BUSHING (2104), CORD (EXCEPT RG441:E2,MX)		$\Delta$ F906	1-533-470-12	FUSE, GLASS TUBE (DIA.5) (T3.15AL/250V)	
* 205	3-703-571-12	BUSHING (S) (4516), CORD (RG441:E2,MX)					
$\Delta$ 206	1-777-071-83	CORD, POWER (RG333, RG441:E51)		$\Delta$ F907	1-533-470-12	FUSE, GLASS TUBE (DIA.5) (T3.15AL/250V)	
				$\Delta$ F908	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	
$\Delta$ 206	1-783-941-22	CORD, POWER (RG441:AR)					(RG441)
$\Delta$ 206	1-827-226-11	CORD, POWER (RG441:E2,MX)		$\Delta$ F909	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	
							(RG441)
207	4-988-533-01	HOLDER, PWB					
208	A-4751-788-A	MAIN BOARD, COMPLETE (RG333)		$\Delta$ PT901	1-443-234-11	TRANSFORMER, POWER (RG333)	
208	A-4752-183-A	MAIN BOARD, COMPLETE (RG441)		$\Delta$ PT901	1-443-255-11	TRANSFORMER, POWER (RG441:E2,E51,AR)	
209	A-4750-766-A	TRANS BOARD, COMPLETE (RG333)		$\Delta$ PT901	1-443-294-11	TRANSFORMER, POWER (RG441:MX)	
209	A-4751-524-A	TRANS BOARD, COMPLETE (RG441:E2,E51)		#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
209	A-4752-191-A	TRANS BOARD, COMPLETE (RG441:MX)		#3	7-685-649-79	SCREW +BVTP 3X14 TYPE2 IT-3	
209	A-4752-196-A	TRANS BOARD, COMPLETE (RG441:AR)		#4	7-685-881-09	SCREW +BVTT 4X8 (S)	




6-6. CD MECHANISM SECTION (1)  
(CDM74-F1BD81)

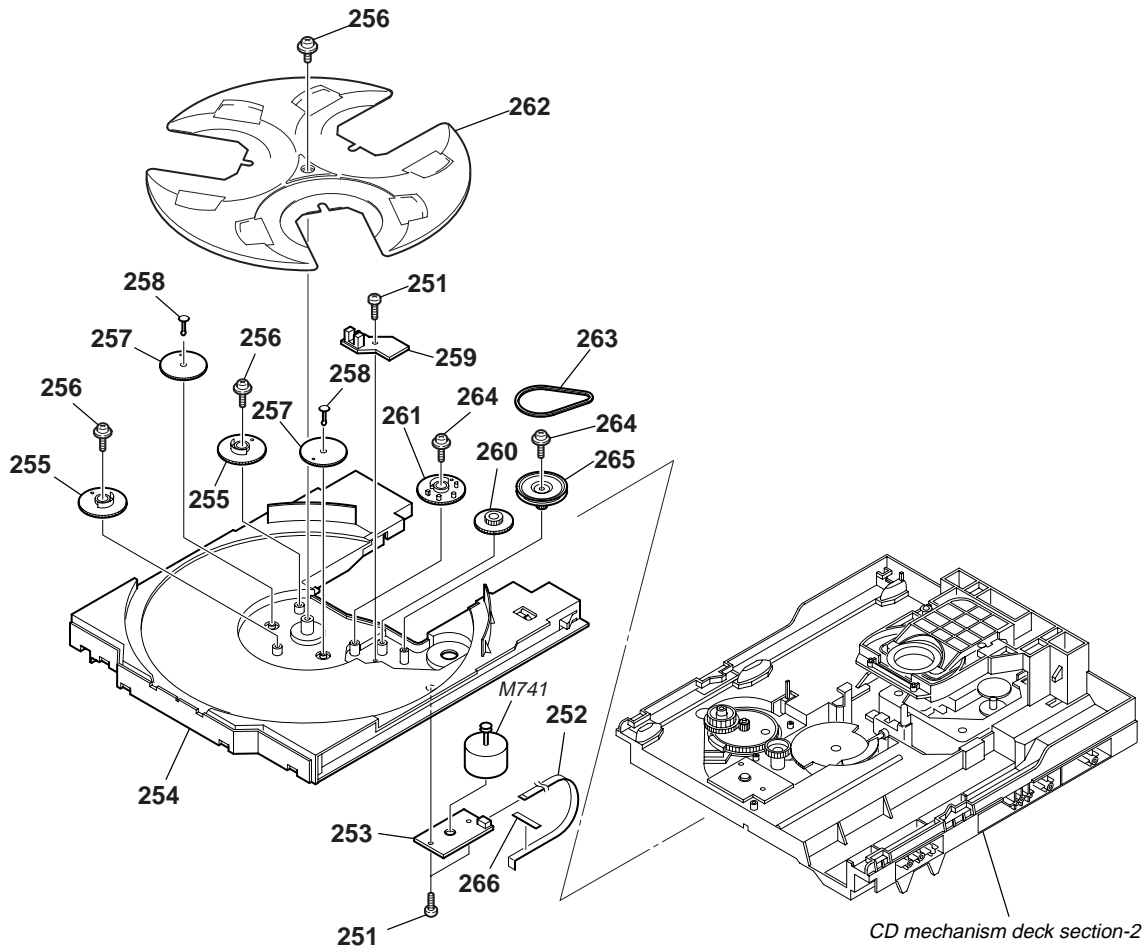

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	4-218-253-21	SCREW (M2.6), +BTTP		260	4-243-820-01	GEAR (TABLE)	
252	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)		261	4-243-819-01	GEAR (GENEVA)	
253	1-687-134-12	MOTOR (TB) BOARD		262	4-243-816-01	TRAY	
254	4-243-815-01	TABLE (LOADING)		263	4-243-823-01	BELT (TABLE)	
255	4-245-571-02	GEAR (STOPPER)		264	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
256	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		265	4-243-821-01	PULLEY (TABLE)	
257	4-245-570-01	GEAR (JOINT)		266	3-231-598-01	SHEET (BA)	
258	4-245-572-01	BUSHING (GEAR)		M741	A-4723-963-A	MOTOR ASSY, TABLE (TBL)	
259	1-687-132-12	SENSOR BOARD					

6-7. CD MECHANISM SECTION (2)  
(CDM74-F1BD81)

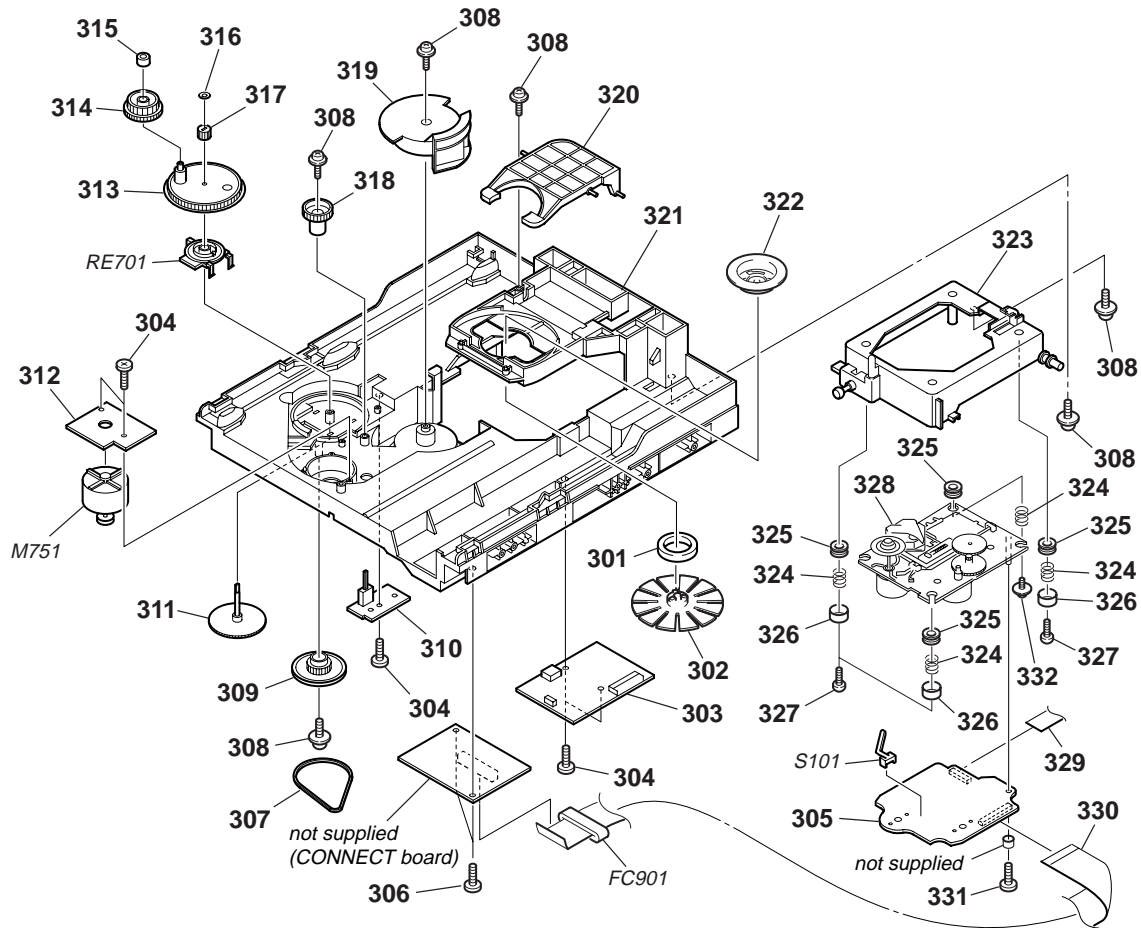

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	1-471-035-11	MAGNET ASSY		319	4-243-818-01	GEAR (U/D)	
302	X-4955-707-2	PULLEY (A5) ASSY, CHUCKING		320	4-243-822-02	LEVER (LIFTER)	
303	1-687-135-12	DRIVER BOARD		321	4-243-817-01	CHASSIS	
304	4-218-253-31	+BTTP M2.6		322	4-231-189-01	PULLEY (B), CHUCKING	
305	A-4751-431-A	BD81A BOARD, COMPLETE		323	X-4955-536-1	HOLDER (213) ASSY	
306	4-951-620-01	SCREW (2.6X8), +BVTP		324	4-227-045-31	SPRING (INSULATOR), COIL	
307	4-244-034-01	BELT (LOADING)		325	4-227-549-11	INSULATOR	
308	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		326	4-231-151-01	STOPPER (BU)	
309	4-225-844-01	GEAR (LOADING A)		327	4-218-253-31	+BTTP M2.6	
310	1-687-669-12	SW BOARD		$\triangle$ 328	8-820-244-01	OPTICAL PICK-UP (KSM-215DCP/C2RP)	
311	4-224-613-01	GEAR (SHAFT)		329	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
312	1-687-133-12	MOTOR (LD) BOARD		330	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)	
313	4-244-108-01	GEAR, SWING		331	4-951-620-01	SCREW (2.6X8), +BVTP	
314	4-224-609-01	GEAR (LOADING C)		332	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
315	4-224-608-01	COLLAR, SWING		FC901	1-469-854-11	CORE, FERRITE	
316	3-016-533-11	WASHER (FR), STOPPER		M751	A-4736-655-A	MOTOR ASSY, LOADING (LOADING)	
317	4-224-611-01	GEAR (LOADING B)		RE701	1-477-680-12	ENCODER, ROTARY	
318	4-224-606-01	GEAR (RV)		S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	

SECTION 7  
ELECTRICAL PARTS LIST

AMP

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS  
In each case, u :  $\mu$ , for example:  
uA.. :  $\mu$ A.. uPA.. :  $\mu$ PA..  
uPB.. :  $\mu$ PB.. uPC.. :  $\mu$ PC.. uPD.. :  $\mu$ PD..
- CAPACITORS  
uF :  $\mu$ F
- COILS  
uH :  $\mu$ H
- Abbreviation  
MX : Mexican model  
AR : Argentine model  
E2 : 120 V AC area in E model  
E51 : Chilean and Peruvian model

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-4751-549-A	AMP BOARD, COMPLETE (RG333)		C452	1-136-497-81	FILM 0.1uF 5%	50V
	A-4751-555-A	AMP BOARD, COMPLETE (RG441:E2,E51)		C453	1-136-497-81	FILM 0.1uF 5%	50V
	A-4752-193-A	AMP BOARD, COMPLETE (RG441:MX)		C454	1-136-497-81	FILM 0.1uF 5%	50V
	A-4752-198-A	AMP BOARD, COMPLETE (RG441:AR)		C455	1-136-497-81	FILM 0.1uF 5%	50V (RG333)
		*****		C456	1-136-497-81	FILM 0.1uF 5%	50V (RG333)
	7-685-872-09	SCREW +BVTT 3X8 (S)		C457	1-136-497-81	FILM 0.1uF 5%	50V (RG333)
		< CAPACITOR >		C458	1-136-497-81	FILM 0.1uF 5%	50V (RG333)
C402	1-162-306-11	CERAMIC 0.01uF 20%	16V	C459	1-162-294-31	CERAMIC 0.001uF 10%	50V (RG333)
C403	1-137-749-11	MYLAR 0.1uF	100V	C460	1-162-294-31	CERAMIC 0.001uF 10%	50V (RG333)
C404	1-137-749-11	MYLAR 0.1uF	100V	C461	1-128-562-11	ELECT 47uF 20%	100V (RG441)
C405	1-127-813-11	ELECT 3300uF 20%	71V (RG441)	C462	1-128-562-11	ELECT 47uF 20%	100V (RG441)
C405	1-135-516-11	ELECT 3300uF 20%	63V (RG333)	C463	1-104-655-91	ELECT 470uF 20%	6.3V (RG441)
C406	1-127-813-11	ELECT 3300uF 20%	71V (RG441)	C481	1-104-658-91	ELECT 100uF 20%	10V
C406	1-135-516-11	ELECT 3300uF 20%	63V (RG333)	C486	1-126-961-11	ELECT 2.2uF 20%	50V
C407	1-162-306-11	CERAMIC 0.01uF 20%	16V (RG333)	C487	1-126-963-11	ELECT 4.7uF 20%	50V
C408	1-162-306-11	CERAMIC 0.01uF 20%	16V (RG333)	C488	1-126-965-11	ELECT 22uF 20%	50V (RG333)
C409	1-127-811-11	ELECT 3300uF 20%	50V (RG441)	C489	1-128-563-11	ELECT 100uF 20%	100V (RG333)
C410	1-127-811-11	ELECT 3300uF 20%	50V (RG441)	C491	1-162-294-31	CERAMIC 0.001uF 10%	50V (RG333)
C413	1-136-497-81	FILM 0.1uF 5%	50V (RG441)	C492	1-162-306-11	CERAMIC 0.01uF 20%	16V (RG441)
C414	1-136-497-81	FILM 0.1uF 5%	50V (RG441)			< CONNECTOR >	
C441	1-126-964-11	ELECT 10uF 20%	50V	CN441	1-778-981-21	CONNECTOR, BOARD TO BOARD 13P	
C442	1-126-964-11	ELECT 10uF 20%	50V			< DIODE >	
C443	1-162-294-31	CERAMIC 0.001uF 10%	50V	D401	6-500-360-01	DIODE D10XB20	
C444	1-162-294-31	CERAMIC 0.001uF 10%	50V	D402	6-500-360-01	DIODE D10XB20 (RG441)	
C445	1-162-282-31	CERAMIC 100PF 10%	50V	D441	8-719-991-33	DIODE 1SS133T-77	
C446	1-162-282-31	CERAMIC 100PF 10%	50V	D442	8-719-991-33	DIODE 1SS133T-77	
C447	1-126-965-11	ELECT 22uF 20%	50V (RG333)	D443	8-719-991-33	DIODE 1SS133T-77	
C447	1-126-967-11	ELECT 47uF 20%	50V (RG441)	D444	8-719-991-33	DIODE 1SS133T-77 (RG441)	
C448	1-126-965-11	ELECT 22uF 20%	50V (RG333)	D445	8-719-947-65	DIODE MTZJ-T-72-16B (RG441)	
C448	1-126-967-11	ELECT 47uF 20%	50V (RG441)	D446	8-719-947-65	DIODE MTZJ-T-72-16B (RG441)	
C451	1-136-497-81	FILM 0.1uF 5%	50V	D481	8-719-991-33	DIODE 1SS133T-77	

# HCD-RG333/RG441

**AMP**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D482	8-719-991-33	DIODE 1SS133T-77		R444	1-247-871-91	CARBON	47K 5% 1/4W (RG333)
D483	8-719-991-33	DIODE 1SS133T-77 (RG333)		R444	1-247-873-91	CARBON	56K 5% 1/4W (RG441)
< GROUND TERMINAL BOARD >				R445	1-247-831-91	CARBON	1K 5% 1/4W
EP401	1-537-771-21	TERMINAL BOARD, GROUND		R446	1-247-831-91	CARBON	1K 5% 1/4W
EP402	1-537-771-21	TERMINAL BOARD, GROUND		R447	1-247-871-91	CARBON	47K 5% 1/4W (RG333)
EP491	1-537-771-21	TERMINAL BOARD, GROUND (RG441)		R447	1-247-873-91	CARBON	56K 5% 1/4W (RG441)
< IC >				R448	1-247-871-91	CARBON	47K 5% 1/4W (RG333)
IC441	6-600-169-01	IC STK412-240 (RG441)		R448	1-247-873-91	CARBON	56K 5% 1/4W (RG441)
IC441	6-600-221-01	IC STK403-130 (RG333)		△R449	1-217-156-00	METAL	0.22 10% 5W F (RG441)
< TERMINAL BOARD >				△R450	1-217-156-00	METAL	0.22 10% 5W F (RG441)
JK441	1-694-884-11	TERMINAL BOARD (4P) (SPEAKER)		△R451	1-217-156-00	METAL	0.22 10% 5W F (RG333)
< COIL >				△R452	1-217-156-00	METAL	0.22 10% 5W F (RG333)
L441	1-422-009-13	COIL, AIR-CORE (RG441)		R453	1-260-076-11	CARBON	10 5% 1/2W
L441	1-422-009-13	COIL, AIR-CORE (RG333)		R454	1-260-076-11	CARBON	10 5% 1/2W
L442	1-422-009-13	COIL, AIR-CORE (RG441)		R455	1-247-831-91	CARBON	1K 5% 1/4W
L442	1-422-009-13	COIL, AIR-CORE (RG333)		R456	1-247-831-91	CARBON	1K 5% 1/4W
< TRANSISTOR >				R457	1-249-431-11	CARBON	15K 5% 1/4W (RG441)
Q441	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA		R457	1-247-863-91	CARBON	22K 5% 1/4W (RG333)
Q442	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA		R458	1-249-431-11	CARBON	15K 5% 1/4W (RG441)
Q481	8-729-119-79	TRANSISTOR 2SC2785-FEK		R458	1-247-863-91	CARBON	22K 5% 1/4W (RG333)
Q482	8-729-119-79	TRANSISTOR 2SC2785-FEK		R459	1-247-871-91	CARBON	47K 5% 1/4W (RG333)
Q483	8-729-119-79	TRANSISTOR 2SC2785-FEK		R459	1-247-879-91	CARBON	100K 5% 1/4W (RG441)
Q484	8-729-119-79	TRANSISTOR 2SC2785-FEK		R460	1-247-871-91	CARBON	47K 5% 1/4W (RG333)
Q485	8-729-119-76	TRANSISTOR 2SA1175-HFE		R460	1-247-879-91	CARBON	100K 5% 1/4W (RG441)
Q486	8-729-119-79	TRANSISTOR 2SC2785-FEK		R461	1-260-076-11	CARBON	10 5% 1/2W
Q487	8-729-119-79	TRANSISTOR 2SC2785-FEK		R462	1-260-076-11	CARBON	10 5% 1/2W (RG333)
Q488	8-729-119-79	TRANSISTOR 2SC2785-FEK		R463	1-260-076-11	CARBON	10 5% 1/2W (RG333)
Q489	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA		R464	1-260-076-11	CARBON	10 5% 1/2W (RG333)
Q490	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA (RG441)		R465	1-247-871-91	CARBON	47K 5% 1/4W
Q491	8-729-821-00	TRANSISTOR 2SA1207 (RG441)		R466	1-247-873-91	CARBON	56K 5% 1/4W
< RESISTOR >				△R467	1-215-872-11	METAL OXIDE	3.3K 5% 1W F (RG441)
R401	1-247-879-91	CARBON	100K 5% 1/4W	R467	1-249-435-11	CARBON	33K 5% 1/4W (RG333)
R402	1-247-879-91	CARBON	100K 5% 1/4W	△R468	1-215-872-11	METAL OXIDE	3.3K 5% 1W F (RG441)
R403	1-247-879-91	CARBON	100K 5% 1/4W (RG441)	R469	1-249-435-11	CARBON	33K 5% 1/4W (RG441)
R404	1-247-879-91	CARBON	100K 5% 1/4W (RG441)	R470	1-249-435-11	CARBON	33K 5% 1/4W (RG441)
R407	1-260-316-51	CARBON	100 5% 1/2W	R471	1-249-439-11	CARBON	68K 5% 1/4W (RG441)
R409	1-247-879-91	CARBON	100K 5% 1/4W (RG441)				
R410	1-247-879-91	CARBON	100K 5% 1/4W (RG441)				
R411	1-249-421-11	CARBON	2.2K 5% 1/4W				
R412	1-249-421-11	CARBON	2.2K 5% 1/4W				
R413	1-247-847-91	CARBON	4.7K 5% 1/4W				
R414	1-247-847-91	CARBON	4.7K 5% 1/4W				
R441	1-247-831-91	CARBON	1K 5% 1/4W				
R442	1-247-831-91	CARBON	1K 5% 1/4W				
R443	1-247-871-91	CARBON	47K 5% 1/4W (RG333)				
R443	1-247-873-91	CARBON	56K 5% 1/4W (RG441)				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R472	1-249-435-11	CARBON	33K	5%	1/4W (RG441)	C122	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R473	1-247-863-91	CARBON	22K	5%	1/4W (RG441)	C123	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R474	1-249-421-11	CARBON	2.2K	5%	1/4W (RG441)	C124	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
R475	1-249-429-11	CARBON	10K	5%	1/4W (RG441)	C125	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R476	1-249-431-11	CARBON	15K	5%	1/4W (RG441)	C131	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
△ R477	1-212-881-11	FUSIBLE	100	5%	1/4W F (RG441)	C132	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
R478	1-249-429-11	CARBON	10K	5%	1/4W (RG441)	C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R481	1-247-847-91	CARBON	4.7K	5%	1/4W	C134	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R482	1-249-429-11	CARBON	10K	5%	1/4W	C141	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R483	1-247-791-91	CARBON	22	5%	1/4W	C142	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
R484	1-247-873-91	CARBON	56K	5%	1/4W	C143	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R485	1-247-879-91	CARBON	100K	5%	1/4W	C151	1-128-995-21	ELECT CHIP	100uF	20%	10V
R486	1-247-879-91	CARBON	100K	5%	1/4W	C161	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R487	1-249-435-11	CARBON	33K	5%	1/4W	C162	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R488	1-247-863-91	CARBON	22K	5%	1/4W	C163	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R489	1-247-847-91	CARBON	4.7K	5%	1/4W	C171	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
R490	1-247-847-91	CARBON	4.7K	5%	1/4W	C172	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
R491	1-247-863-91	CARBON	22K	5%	1/4W (RG333)	C174	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R492	1-247-831-91	CARBON	1K	5%	1/4W (RG333)	C181	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R493	1-249-435-11	CARBON	33K	5%	1/4W (RG333)	C182	1-164-360-11	CERAMIC CHIP	0.1uF		16V
R494	1-249-421-11	CARBON	2.2K	5%	1/4W (RG333)	C183	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
△ R495	1-202-972-61	FUSIBLE	1	5%	1/4W F	C184	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
△ R496	1-212-881-11	FUSIBLE	100	5%	1/4W F	C185	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
		< RELAY >				C186	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
RY441	1-755-372-11	RELAY (RG441)				C194	1-164-360-11	CERAMIC CHIP	0.1uF		16V
RY441	1-755-373-11	RELAY (RG333)				C195	1-164-360-11	CERAMIC CHIP	0.1uF		16V
		< THERMISTOR >				C196	1-164-360-11	CERAMIC CHIP	0.1uF		16V
TH441	1-807-796-11	THERMISTOR				C201	1-128-995-21	ELECT CHIP	100uF	20%	10V
*****						C203	1-128-995-21	ELECT CHIP	100uF	20%	10V
A-4751-431-A	BD81A BOARD, COMPLETE *****					C209	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		< CAPACITOR >				C210	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C10	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	C211	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C11	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	C212	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C14	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C213	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C15	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C251	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C16	1-115-156-11	CERAMIC CHIP	1uF		10V	C252	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C17	1-126-246-11	ELECT CHIP	220uF	20%	4V	C255	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C18	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C257	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C111	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V	C258	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C112	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C259	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C113	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V	C260	1-128-394-11	ELECT CHIP	220uF	20%	10V
C114	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C302	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C115	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C303	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C116	1-128-995-21	ELECT CHIP	100uF	20%	10V	C305	1-126-246-11	ELECT CHIP	220uF	20%	4V
						C306	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C307	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C308	1-126-208-21	ELECT CHIP	47uF	20%	4V
						C309	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C310	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C311	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C312	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C313	1-164-360-11	CERAMIC CHIP	0.1uF		16V
						C314	1-126-208-21	ELECT CHIP	47uF	20%	4V
						C315	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C316	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
						C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C318	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C320	1-216-864-11	SHORT CHIP	0		

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

# HCD-RG333/RG441

<b>BD81A</b>	<b>CONNECT</b>	<b>DRIVER</b>
--------------	----------------	---------------

Ref. No.	Part No.	Description	Remark
		< CONNECTOR >	
CN101	1-770-425-11	CONNECTOR, FFC/FPC 16P	
CN201	1-818-350-11	CONNECTOR (FFC) 27P	
		< FERRITE BEAD >	
FB301	1-500-445-21	FERRITE, EMI (SMD) (2012)	
		< IC >	
IC101	8-752-425-12	IC CXD3059AR	
IC251	6-705-808-01	IC BA5947FM	
IC301	6-705-365-01	IC TC94A34FG-002	
IC303	6-705-807-01	IC BH15FB1WG	
		< TRANSISTOR >	
Q10	6-550-363-01	TRANSISTOR 2SB1690KT146	
		< RESISTOR >	
R10	1-216-791-11	METAL CHIP 3.3	5% 1/10W
R11	1-216-864-11	SHORT CHIP 0	
R12	1-216-845-11	METAL CHIP 100K	5% 1/10W
R13	1-218-446-11	METAL CHIP 1	5% 1/10W
R111	1-216-821-11	METAL CHIP 1K	5% 1/10W
R112	1-216-835-11	METAL CHIP 15K	5% 1/10W
R113	1-216-821-11	METAL CHIP 1K	5% 1/10W
R114	1-216-835-11	METAL CHIP 15K	5% 1/10W
R121	1-216-835-11	METAL CHIP 15K	5% 1/10W
R131	1-216-857-11	METAL CHIP 1M	5% 1/10W
R132	1-216-833-11	METAL CHIP 10K	5% 1/10W
R133	1-216-848-11	METAL CHIP 180K	5% 1/10W
R141	1-216-829-11	METAL CHIP 4.7K	5% 1/10W
R142	1-216-821-11	METAL CHIP 1K	5% 1/10W
R143	1-216-827-11	METAL CHIP 3.3K	5% 1/10W
R151	1-216-864-11	SHORT CHIP 0	
R161	1-216-809-11	METAL CHIP 100	5% 1/10W
R162	1-216-841-11	METAL CHIP 47K	5% 1/10W
R163	1-216-809-11	METAL CHIP 100	5% 1/10W
R165	1-216-864-11	SHORT CHIP 0	
R171	1-216-817-11	METAL CHIP 470	5% 1/10W
R172	1-216-857-11	METAL CHIP 1M	5% 1/10W
R173	1-216-295-91	SHORT CHIP 0	
R181	1-216-809-11	METAL CHIP 100	5% 1/10W
R182	1-216-809-11	METAL CHIP 100	5% 1/10W
R191	1-216-864-11	SHORT CHIP 0	
R201	1-500-445-21	FERRITE, EMI (SMD) (2012)	
R203	1-216-864-11	SHORT CHIP 0	
R204	1-500-445-21	FERRITE, EMI (SMD) (2012)	
R205	1-216-864-11	SHORT CHIP 0	
R251	1-216-833-11	METAL CHIP 10K	5% 1/10W
R252	1-216-837-11	METAL CHIP 22K	5% 1/10W
R253	1-216-833-11	METAL CHIP 10K	5% 1/10W
R301	1-216-845-11	METAL CHIP 100K	5% 1/10W
R302	1-216-833-11	METAL CHIP 10K	5% 1/10W
R303	1-216-845-11	METAL CHIP 100K	5% 1/10W
R305	1-216-845-11	METAL CHIP 100K	5% 1/10W
R306	1-216-864-11	SHORT CHIP 0	
R307	1-216-833-11	METAL CHIP 10K	5% 1/10W
R313	1-216-813-11	METAL CHIP 220	5% 1/10W

Ref. No.	Part No.	Description	Remark
R351	1-216-809-11	METAL CHIP 100	5% 1/10W
R352	1-216-809-11	METAL CHIP 100	5% 1/10W
R353	1-216-809-11	METAL CHIP 100	5% 1/10W
R354	1-216-809-11	METAL CHIP 100	5% 1/10W
R401	1-216-809-11	METAL CHIP 100	5% 1/10W
R402	1-216-809-11	METAL CHIP 100	5% 1/10W
R403	1-216-809-11	METAL CHIP 100	5% 1/10W
R404	1-216-809-11	METAL CHIP 100	5% 1/10W
R405	1-216-809-11	METAL CHIP 100	5% 1/10W
R406	1-216-809-11	METAL CHIP 100	5% 1/10W
R407	1-216-809-11	METAL CHIP 100	5% 1/10W
R408	1-216-809-11	METAL CHIP 100	5% 1/10W
R409	1-216-809-11	METAL CHIP 100	5% 1/10W
R410	1-216-809-11	METAL CHIP 100	5% 1/10W
R411	1-216-809-11	METAL CHIP 100	5% 1/10W
R412	1-216-809-11	METAL CHIP 100	5% 1/10W
R419	1-216-809-11	METAL CHIP 100	5% 1/10W
		< VIBRATOR >	
X171	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHZ)	
*****			
CONNECT BOARD			
*****			
		< CAPACITOR >	
C871	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C872	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C873	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C874	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C875	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C876	1-164-156-11	CERAMIC CHIP 0.1uF	25V
		< CONNECTOR >	
CN871	1-779-295-11	CONNECTOR, FFC (LIF(NON-ZIF)) 27P	
CN873	1-784-778-11	CONNECTOR, FFC 17P	
* CN874	1-564-725-11	PIN, CONNECTOR (SMALL TYPE) 9P	
		< JUMPER RESISTOR >	
FB871	1-216-864-11	SHORT CHIP 0	
FB872	1-216-864-11	SHORT CHIP 0	
JR871	1-216-864-11	SHORT CHIP 0	
JR872	1-216-864-11	SHORT CHIP 0	
*****			
	1-687-135-12	DRIVER BOARD	
*****			
		< CAPACITOR >	
C715	1-126-933-11	ELECT 100uF	20% 16V
C731	1-126-964-11	ELECT 10uF	20% 50V
C735	1-164-159-21	CERAMIC 0.1uF	50V
C736	1-164-159-21	CERAMIC 0.1uF	50V
C737	1-164-159-21	CERAMIC 0.1uF	50V
C741	1-162-306-11	CERAMIC 0.01uF	20% 16V
C751	1-162-306-11	CERAMIC 0.01uF	20% 16V
C752	1-164-159-21	CERAMIC 0.1uF	50V

**DRIVER**

**GAME JACK**

**H/P JACK**

**LEAD**

**MAIN**

Ref. No.	Part No.	Description	Remark
		< CONNECTOR >	
CN701	1-785-338-11	PIN, CONNECTOR (LIGHT ANGLE) 12P	
CN702	1-784-766-11	CONNECTOR, FFC 5P	
* CN703	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN704	1-785-328-11	PIN, CONNECTOR (LIGHT ANGLE) 2P	
		< DIODE >	
D701	8-719-921-42	DIODE MTZJ-5.1A	
D711	8-719-109-69	DIODE RD3.6ESB2	
		< IC >	
IC701	8-759-598-69	IC BA6956AN	
IC712	8-759-598-69	IC BA6956AN	
		< TRANSISTOR >	
Q731	8-729-029-66	TRANSISTOR DTC114ESA	
		< RESISTOR >	
R701	1-249-413-11	CARBON 470 5% 1/4W	
R702	1-247-807-31	CARBON 100 5% 1/4W	
R711	1-249-417-11	CARBON 1K 5% 1/4W	
R712	1-249-425-11	CARBON 4.7K 5% 1/4W	
R713	1-249-433-11	CARBON 22K 5% 1/4W	
R721	1-249-425-11	CARBON 4.7K 5% 1/4W	
R722	1-249-425-11	CARBON 4.7K 5% 1/4W	
R723	1-249-425-11	CARBON 4.7K 5% 1/4W	
R731	1-247-807-31	CARBON 100 5% 1/4W	
R732	1-249-429-11	CARBON 10K 5% 1/4W	
R733	1-249-417-11	CARBON 1K 5% 1/4W	
R734	1-249-430-11	CARBON 12K 5% 1/4W	
R735	1-247-807-31	CARBON 100 5% 1/4W	
R751	1-249-425-11	CARBON 4.7K 5% 1/4W	
*****			
		GAME JACK BOARD	
		*****	
		< CAPACITOR >	
C801	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C802	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C803	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
C804	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
		< JACK >	
J804	1-815-684-11	JACK, PIN 3P (GAME INPUT)	
		< JUMPER RESISTOR >	
JR801	1-216-864-11	SHORT CHIP 0	
		< RESISTOR >	
R801	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R802	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R803	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R804	1-216-837-11	METAL CHIP 22K 5% 1/10W	

\*\*\*\*\*

Ref. No.	Part No.	Description	Remark
		H/P JACK BOARD	
		*****	
		< CAPACITOR >	
C830	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C831	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C832	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
		< JACK >	
J801	1-793-829-11	JACK, HEADPHONE (PHONES)	
*****			
		LEAD BOARD (RG333)	
		*****	
		< CAPACITOR >	
C861	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (RG333)	
		< GROUND TERMINAL BOARD >	
EP802	1-537-771-21	TERMINAL BOARD, GROUND (RG333)	
*****			
A-4751-788-A		MAIN BOARD, COMPLETE (RG333)	
A-4752-183-A		MAIN BOARD, COMPLETE (RG441)	
*****			
7-685-872-09		SCREW +BVTT 3X8 (S)	
		< CAPACITOR >	
C101	1-126-960-11	ELECT 1uF 20% 50V	
C102	1-126-960-11	ELECT 1uF 20% 50V	
C103	1-126-956-91	ELECT 0.1uF 20% 50V	
C104	1-126-956-91	ELECT 0.1uF 20% 50V	
C105	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C106	1-131-679-31	FILM 0.01uF 5% 50V	
C107	1-126-964-11	ELECT 10uF 20% 50V	
C108	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C109	1-131-679-31	FILM 0.01uF 5% 50V	
C110	1-126-964-11	ELECT 10uF 20% 50V	
C111	1-126-960-11	ELECT 1uF 20% 50V	
C112	1-126-960-11	ELECT 1uF 20% 50V	
C113	1-126-960-11	ELECT 1uF 20% 50V	
C114	1-126-960-11	ELECT 1uF 20% 50V	
C115	1-131-679-31	FILM 0.01uF 5% 50V	
C116	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C117	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C118	1-126-964-11	ELECT 10uF 20% 50V	
C119	1-131-679-31	FILM 0.01uF 5% 50V	
C120	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C121	1-164-816-11	CERAMIC CHIP 220PF 2% 50V	
C122	1-126-964-11	ELECT 10uF 20% 50V	
C123	1-126-965-91	ELECT 22uF 20% 50V	
C124	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C125	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C126	1-165-112-11	CERAMIC CHIP 0.33uF 16V	
C127	1-104-658-91	ELECT 100uF 20% 10V	
C128	1-104-658-91	ELECT 100uF 20% 10V	
C129	1-126-947-11	ELECT 47uF 20% 35V	

# HCD-RG333/RG441

## MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C132	1-126-947-11	ELECT	47uF	20%	35V	C229	1-126-963-11	ELECT	4.7uF	20%	50V
C135	1-131-690-31	FILM	0.068uF	5%	50V	C230	1-126-947-11	ELECT	47uF	20%	35V
C136	1-131-690-31	FILM	0.068uF	5%	50V	C235	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C137	1-126-964-11	ELECT	10uF	20%	50V	C241	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C138	1-126-964-11	ELECT	10uF	20%	50V	C242	1-130-479-00	MYLAR	0.0047uF	5%	50V
C139	1-131-690-31	FILM	0.068uF	5%	50V	C243	1-131-681-31	FILM	0.015uF	5%	50V
C140	1-131-690-31	FILM	0.068uF	5%	50V	C244	1-131-681-31	FILM	0.015uF	5%	50V
C141	1-126-964-11	ELECT	10uF	20%	50V	C246	1-131-681-31	FILM	0.015uF	5%	50V
C142	1-126-964-11	ELECT	10uF	20%	50V	C248	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C143	1-126-960-11	ELECT	1uF	20%	50V	C249	1-126-964-11	ELECT	10uF	20%	50V
C144	1-136-165-00	FILM	0.1uF	5%	50V	C250	1-126-947-11	ELECT	47uF	20%	35V
C145	1-126-964-11	ELECT	10uF	20%	50V	C251	1-126-947-11	ELECT	47uF	20%	35V
C146	1-136-165-00	FILM	0.1uF	5%	50V	C252	1-126-933-11	ELECT	100uF	20%	16V
C147	1-126-964-11	ELECT	10uF	20%	50V	C253	1-126-956-91	ELECT	0.1uF	20%	50V
C148	1-131-679-31	FILM	0.01uF	5%	50V	C258	1-126-959-11	ELECT	0.47uF	20%	50V
C149	1-131-679-31	FILM	0.01uF	5%	50V	C259	1-126-957-11	ELECT	0.22uF	20%	50V
C150	1-131-679-31	FILM	0.01uF	5%	50V	C264	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C151	1-131-679-31	FILM	0.01uF	5%	50V	C265	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C152	1-130-475-00	MYLAR	0.0022uF	5%	50V	C266	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C153	1-130-475-00	MYLAR	0.0022uF	5%	50V	C267	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V
C154	1-131-700-31	FILM	0.47uF	5%	50V	C270	1-126-964-11	ELECT	10uF	20%	50V
C157	1-126-960-11	ELECT	1uF	20%	50V	C271	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)
C159	1-126-960-11	ELECT	1uF	20%	50V	C272	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)
C160	1-126-960-11	ELECT	1uF	20%	50V	C274	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C161	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)	C275	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C162	1-126-960-11	ELECT	1uF	20%	50V	C276	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (RG333)
C163	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)	C277	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (RG333)
C164	1-126-960-11	ELECT	1uF	20%	50V	C278	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (RG333)
C165	1-126-960-11	ELECT	1uF	20%	50V	C279	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (RG333)
C166	1-126-960-11	ELECT	1uF	20%	50V	C280	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (RG333)
C175	1-109-953-11	ELECT	2.2uF	20%	50V	C281	1-164-362-11	CERAMIC CHIP	470PF	5%	50V (RG333)
C176	1-126-964-11	ELECT	10uF	20%	50V	C288	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)
C177	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	C289	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)
C178	1-126-947-11	ELECT	47uF	20%	35V	C290	1-162-971-11	CERAMIC CHIP	0.001uF	10%	50V (RG333)
C179	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C301	1-136-165-00	FILM	0.1uF	5%	50V
C181	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C302	1-136-165-00	FILM	0.1uF	5%	50V
C183	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	C303	1-136-165-00	FILM	0.1uF	5%	50V
C184	1-126-947-11	ELECT	47uF	20%	35V	C304	1-136-165-00	FILM	0.1uF	5%	50V
C185	1-126-964-11	ELECT	10uF	20%	50V	C305	1-136-165-00	FILM	0.1uF	5%	50V
C186	1-126-947-11	ELECT	47uF	20%	35V	C306	1-136-165-00	FILM	0.1uF	5%	50V
C187	1-162-974-11	CERAMIC CHIP	0.01uF		50V	C308	1-126-965-91	ELECT	22uF	20%	50V
C188	1-126-965-91	ELECT	22uF	20%	50V	C309	1-126-965-91	ELECT	22uF	20%	50V
C189	1-126-965-91	ELECT	22uF	20%	50V	C310	1-126-936-11	ELECT	3300uF	20%	16V
C190	1-162-974-11	CERAMIC CHIP	0.01uF		50V	C311	1-126-964-11	ELECT	10uF	20%	50V
C191	1-126-961-11	ELECT	2.2uF	20%	50V	C312	1-126-964-11	ELECT	10uF	20%	50V
C192	1-126-961-11	ELECT	2.2uF	20%	50V	C313	1-126-943-11	ELECT	2200uF	20%	25V
C193	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C315	1-126-933-11	ELECT	100uF	20%	16V
C206	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C316	1-126-943-11	ELECT	2200uF	20%	25V
C211	1-109-953-11	ELECT	2.2uF	20%	50V	C318	1-126-933-11	ELECT	100uF	20%	16V
C212	1-126-964-11	ELECT	10uF	20%	50V						
C213	1-126-964-11	ELECT	10uF	20%	50V						
C214	1-126-926-11	ELECT	1000uF	20%	10V						
C216	1-164-156-11	CERAMIC CHIP	0.1uF		25V						
C217	1-164-156-11	CERAMIC CHIP	0.1uF		25V						
C222	1-164-156-11	CERAMIC CHIP	0.1uF		25V						
C228	1-164-156-11	CERAMIC CHIP	0.1uF		25V						



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C321	1-126-961-11	ELECT	2.2uF 20% 50V			< JUMPER RESISTOR >	
C342	1-164-156-11	CERAMIC CHIP	0.1uF 25V				
C351	1-164-357-11	CERAMIC CHIP	0.001uF 5% 50V	FB201	1-216-864-11	SHORT CHIP 0	
C352	1-126-965-91	ELECT	22uF 20% 50V	FB202	1-216-864-11	SHORT CHIP 0	
C353	1-126-961-11	ELECT	2.2uF 20% 50V	FB203	1-216-864-11	SHORT CHIP 0	
C354	1-164-156-11	CERAMIC CHIP	0.1uF 25V	FB204	1-216-864-11	SHORT CHIP 0	
C371	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	FB205	1-216-864-11	SHORT CHIP 0 (RG441)	
C372	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	FB205	1-543-958-22	BEAD, FERRITE (CHIP) (1608) (RG333)	
C373	1-162-953-11	CERAMIC CHIP	100PF 5% 50V			< IC >	
C374	1-126-947-11	ELECT	47uF 20% 35V	IC101	6-705-852-01	IC BD3401KS2	
C375	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC102	8-759-710-97	IC NJM4565M-D	
C376	1-126-961-11	ELECT	2.2uF 20% 50V	IC201	8-759-508-69	IC BA3126N	
		< CONNECTOR >		IC301	6-702-771-01	IC TA78033LS	
CN101	1-568-830-11	CONNECTOR, FFC 11P (RG441)		IC302	6-702-771-01	IC TA78033LS	
CN101	1-784-776-11	CONNECTOR, FFC 15P (RG333)		IC303	8-759-701-59	IC NJM78M09FA	
* CN103	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P		IC304	8-759-701-59	IC NJM78M09FA	
* CN112	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		IC371	6-704-046-01	IC BU2099FV	
CN302	1-568-844-11	CONNECTOR, FFC 29P (RG441)				< COIL >	
CN302	1-784-792-11	CONNECTOR, FFC 31P (RG333)		L101	1-424-849-11	COIL, OSCILLATION (BIAS)	
CN307	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P				< TRANSISTOR >	
CN308	1-564-506-11	PLUG, CONNECTOR 3P		Q101	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
CN309	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P		Q102	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
CN314	1-564-506-11	PLUG, CONNECTOR 3P		Q103	6-550-889-01	TRANSISTOR 2SC5938-T112-1B	
		< DIODE >		Q104	6-550-889-01	TRANSISTOR 2SC5938-T112-1B	
D201	8-719-988-61	DIODE 1SS355TE-17		Q105	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D202	8-719-083-63	DIODE UDZSTE-1713B		Q106	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D206	8-719-988-61	DIODE 1SS355TE-17		Q107	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D207	8-719-988-61	DIODE 1SS355TE-17		Q304	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D211	8-719-988-61	DIODE 1SS355TE-17		Q305	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D212	8-719-988-61	DIODE 1SS355TE-17		Q306	6-550-889-01	TRANSISTOR 2SC5938-T112-1B	
D213	8-719-988-61	DIODE 1SS355TE-17		Q307	6-550-889-01	TRANSISTOR 2SC5938-T112-1B	
D214	8-719-988-61	DIODE 1SS355TE-17		Q308	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D215	8-719-988-61	DIODE 1SS355TE-17		Q309	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D301	6-500-522-21	DIODE 10EDB40-TB3		Q310	8-729-142-46	TRANSISTOR 2SC2001-LK	
D302	6-500-522-21	DIODE 10EDB40-TB3		Q311	8-729-142-46	TRANSISTOR 2SC2001-LK	
D303	6-500-522-21	DIODE 10EDB40-TB3		Q312	8-729-041-19	TRANSISTOR 2SA953-T-K	
D304	6-500-522-21	DIODE 10EDB40-TB3		Q313	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D305	6-500-522-21	DIODE 10EDB40-TB3		Q314	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D306	6-500-522-21	DIODE 10EDB40-TB3		Q315	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D307	6-500-522-21	DIODE 10EDB40-TB3		Q321	8-729-142-46	TRANSISTOR 2SC2001-LK	
D308	6-500-522-21	DIODE 10EDB40-TB3		Q322	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D309	6-500-522-21	DIODE 10EDB40-TB3		Q323	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D310	6-500-522-21	DIODE 10EDB40-TB3		Q324	8-729-140-04	TRANSISTOR 2SB1116A-L	
D311	6-500-522-21	DIODE 10EDB40-TB3		Q327	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D312	6-500-522-21	DIODE 10EDB40-TB3		Q351	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D313	8-719-085-36	DIODE 11EQS04-TB5		Q352	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D316	8-719-988-61	DIODE 1SS355TE-17		Q361	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D321	8-719-988-61	DIODE 1SS355TE-17		Q362	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D322	8-719-988-61	DIODE 1SS355TE-17				< RESISTOR >	
D324	6-500-522-21	DIODE 10EDB40-TB3		R101	1-216-833-11	METAL CHIP 10K 5% 1/10W	
D325	6-500-522-21	DIODE 10EDB40-TB3		R102	1-216-833-11	METAL CHIP 10K 5% 1/10W	
D326	6-500-522-21	DIODE 10EDB40-TB3		R103	1-216-851-11	METAL CHIP 330K 5% 1/10W	
		< GROUND TERMINAL BOARD >		R104	1-216-835-11	METAL CHIP 15K 5% 1/10W	
EP101	1-537-771-21	TERMINAL BOARD, GROUND		R105	1-216-816-11	METAL CHIP 390 5% 1/10W	
EP301	1-537-771-21	TERMINAL BOARD, GROUND					

# HCD-RG333/RG441

## MAIN

Ref. No.	Part No.	Description	Quantity	Unit	Remark	Ref. No.	Part No.	Description	Quantity	Unit	Remark
R106	1-216-851-11	METAL CHIP	330K	5%	1/10W	R197	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R107	1-216-835-11	METAL CHIP	15K	5%	1/10W	R198	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R108	1-216-816-11	METAL CHIP	390	5%	1/10W	R201	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R109	1-216-853-11	METAL CHIP	470K	5%	1/10W	R202	1-216-833-11	METAL CHIP	10K	5%	1/10W
R110	1-216-851-11	METAL CHIP	330K	5%	1/10W	R203	1-216-833-11	METAL CHIP	10K	5%	1/10W
R111	1-216-847-11	METAL CHIP	150K	5%	1/10W	R204	1-216-833-11	METAL CHIP	10K	5%	1/10W
R112	1-216-853-11	METAL CHIP	470K	5%	1/10W	R205	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R113	1-216-851-11	METAL CHIP	330K	5%	1/10W	R206	1-216-841-11	METAL CHIP	47K	5%	1/10W
R114	1-216-847-11	METAL CHIP	150K	5%	1/10W	R207	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R115	1-216-857-11	METAL CHIP	1M	5%	1/10W	R208	1-216-821-11	METAL CHIP	1K	5%	1/10W
R116	1-216-809-11	METAL CHIP	100	5%	1/10W	R209	1-216-833-11	METAL CHIP	10K	5%	1/10W
R117	1-216-809-11	METAL CHIP	100	5%	1/10W	R210	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R119	1-216-841-11	METAL CHIP	47K	5%	1/10W	R211	1-216-821-11	METAL CHIP	1K	5%	1/10W
R120	1-216-857-11	METAL CHIP	1M	5%	1/10W	R212	1-216-833-11	METAL CHIP	10K	5%	1/10W
R121	1-216-841-11	METAL CHIP	47K	5%	1/10W	R213	1-216-821-11	METAL CHIP	1K	5%	1/10W
R127	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R214	1-216-821-11	METAL CHIP	1K	5%	1/10W
R128	1-216-835-11	METAL CHIP	15K	5%	1/10W	R216	1-216-806-11	METAL CHIP	56	5%	1/10W
R129	1-216-841-11	METAL CHIP	47K	5%	1/10W	R217	1-216-806-11	METAL CHIP	56	5%	1/10W
R131	1-216-835-11	METAL CHIP	15K	5%	1/10W	△ R218	1-215-891-11	METAL OXIDE	680	5%	2W F (RG333)
R132	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	△ R218	1-215-916-00	METAL OXIDE	680	5%	3W F (RG441)
R133	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	△ R219	1-215-891-11	METAL OXIDE	680	5%	2W F (RG333)
R134	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	△ R219	1-215-916-00	METAL OXIDE	680	5%	3W F (RG441)
R135	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R220	1-216-837-11	METAL CHIP	22K	5%	1/10W
R136	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R221	1-216-837-11	METAL CHIP	22K	5%	1/10W
R137	1-216-833-11	METAL CHIP	10K	5%	1/10W	R222	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R138	1-216-821-11	METAL CHIP	1K	5%	1/10W	R223	1-216-864-11	SHORT CHIP	0		
R139	1-216-864-11	SHORT CHIP	0			R225	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R141	1-216-821-11	METAL CHIP	1K	5%	1/10W	R226	1-216-841-11	METAL CHIP	47K	5%	1/10W
R142	1-216-821-11	METAL CHIP	1K	5%	1/10W	R227	1-216-821-11	METAL CHIP	1K	5%	1/10W
R151	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R228	1-216-821-11	METAL CHIP	1K	5%	1/10W
R152	1-216-833-11	METAL CHIP	10K	5%	1/10W	R229	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R153	1-216-833-11	METAL CHIP	10K	5%	1/10W	R230	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R154	1-216-833-11	METAL CHIP	10K	5%	1/10W	R231	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R155	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R156	1-216-853-11	METAL CHIP	470K	5%	1/10W	R241	1-216-797-11	METAL CHIP	10	5%	1/10W
R157	1-216-841-11	METAL CHIP	47K	5%	1/10W	R242	1-216-838-11	METAL CHIP	27K	5%	1/10W
R158	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R243	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R159	1-216-833-11	METAL CHIP	10K	5%	1/10W	R244	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R160	1-216-821-11	METAL CHIP	1K	5%	1/10W	R245	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R161	1-216-833-11	METAL CHIP	10K	5%	1/10W	R246	1-216-809-11	METAL CHIP	100	5%	1/10W
R162	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R247	1-216-833-11	METAL CHIP	10K	5%	1/10W
R163	1-216-833-11	METAL CHIP	10K	5%	1/10W	R248	1-216-833-11	METAL CHIP	10K	5%	1/10W
R164	1-216-821-11	METAL CHIP	1K	5%	1/10W	R249	1-216-841-11	METAL CHIP	47K	5%	1/10W
R165	1-216-833-11	METAL CHIP	10K	5%	1/10W	R250	1-216-833-11	METAL CHIP	10K	5%	1/10W
R166	1-216-833-11	METAL CHIP	10K	5%	1/10W	R251	1-216-833-11	METAL CHIP	10K	5%	1/10W
R167	1-216-833-11	METAL CHIP	10K	5%	1/10W	R252	1-216-864-11	SHORT CHIP	0		
R168	1-216-845-11	METAL CHIP	100K	5%	1/10W	R253	1-216-809-11	METAL CHIP	100	5%	1/10W
R169	1-216-845-11	METAL CHIP	100K	5%	1/10W	R254	1-216-809-11	METAL CHIP	100	5%	1/10W
R170	1-216-833-11	METAL CHIP	10K	5%	1/10W	R262	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R171	1-216-833-11	METAL CHIP	10K	5%	1/10W	R263	1-216-857-11	METAL CHIP	1M	5%	1/10W
R172	1-216-809-11	METAL CHIP	100	5%	1/10W	R264	1-216-821-11	METAL CHIP	1K	5%	1/10W
R173	1-216-833-11	METAL CHIP	10K	5%	1/10W	R265	1-216-833-11	METAL CHIP	10K	5%	1/10W
R174	1-216-833-11	METAL CHIP	10K	5%	1/10W	R266	1-216-845-11	METAL CHIP	100K	5%	1/10W
R175	1-216-833-11	METAL CHIP	10K	5%	1/10W	R272	1-216-853-11	METAL CHIP	470K	5%	1/10W
R176	1-216-849-11	METAL CHIP	220K	5%	1/10W	R273	1-216-864-11	SHORT CHIP	0		
R177	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R194	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W						
R195	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W						

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**MAIN**

**MOTOR (LD)**

**MOTOR (TB)**

**PANEL**

Ref. No.	Part No.	Description			Remark
R274	1-216-864-11	SHORT CHIP	0		
R275	1-216-864-11	SHORT CHIP	0		
R281	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R282	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R283	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R284	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R306	1-216-833-11	METAL CHIP	10K	5%	1/10W
R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
R308	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R310	1-216-833-11	METAL CHIP	10K	5%	1/10W
R311	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R312	1-216-837-11	METAL CHIP	22K	5%	1/10W
R313	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R321	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R322	1-216-837-11	METAL CHIP	22K	5%	1/10W
R323	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R324	1-216-833-11	METAL CHIP	10K	5%	1/10W
R325	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R341	1-216-833-11	METAL CHIP	10K	5%	1/10W
R342	1-216-821-11	METAL CHIP	1K	5%	1/10W
R343	1-216-837-11	METAL CHIP	22K	5%	1/10W
R344	1-216-837-11	METAL CHIP	22K	5%	1/10W
R345	1-216-833-11	METAL CHIP	10K	5%	1/10W
R346	1-216-821-11	METAL CHIP	1K	5%	1/10W
R347	1-216-837-11	METAL CHIP	22K	5%	1/10W
R348	1-216-837-11	METAL CHIP	22K	5%	1/10W
R351	1-216-835-11	METAL CHIP	15K	5%	1/10W
R352	1-216-845-11	METAL CHIP	100K	5%	1/10W
R353	1-216-841-11	METAL CHIP	47K	5%	1/10W
R354	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R356	1-216-817-11	METAL CHIP	470	5%	1/10W
R357	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R358	1-216-809-11	METAL CHIP	100	5%	1/10W
R361	1-216-833-11	METAL CHIP	10K	5%	1/10W
R362	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R363	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R364	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R371	1-216-809-11	METAL CHIP	100	5%	1/10W
R372	1-216-809-11	METAL CHIP	100	5%	1/10W
R373	1-216-809-11	METAL CHIP	100	5%	1/10W
R374	1-216-833-11	METAL CHIP	10K	5%	1/10W
R375	1-216-833-11	METAL CHIP	10K	5%	1/10W
R376	1-216-833-11	METAL CHIP	10K	5%	1/10W
R377	1-216-833-11	METAL CHIP	10K	5%	1/10W
R378	1-216-833-11	METAL CHIP	10K	5%	1/10W
R379	1-216-833-11	METAL CHIP	10K	5%	1/10W
R380	1-216-833-11	METAL CHIP	10K	5%	1/10W
R381	1-216-833-11	METAL CHIP	10K	5%	1/10W
R382	1-216-833-11	METAL CHIP	10K	5%	1/10W
R383	1-216-833-11	METAL CHIP	10K	5%	1/10W
R384	1-216-833-11	METAL CHIP	10K	5%	1/10W
R385	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R386	1-216-837-11	METAL CHIP	22K	5%	1/10W
R387	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R388	1-216-837-11	METAL CHIP	22K	5%	1/10W
R389	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R390	1-216-837-11	METAL CHIP	22K	5%	1/10W
R391	1-216-833-11	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R392	1-216-821-11	METAL CHIP	1K	5%	1/10W
R393	1-216-833-11	METAL CHIP	10K	5%	1/10W
R394	1-216-821-11	METAL CHIP	1K	5%	1/10W
R395	1-216-837-11	METAL CHIP	22K	5%	1/10W
*****					
	1-687-133-12	MOTOR (LD) BOARD			*****
*****					
	1-687-134-12	MOTOR (TB) BOARD			*****
< CONNECTOR >					
CN742	1-784-727-11	CONNECTOR, FFC 5P			*****
*****					
	A-4751-547-A	PANEL BOARD, COMPLETE (RG333)			
	A-4751-553-A	PANEL BOARD, COMPLETE (RG441)			*****
< CAPACITOR >					
C601	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C602	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C603	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C604	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C605	1-126-163-11	ELECT	4.7uF	20%	50V
C606	1-115-156-11	CERAMIC CHIP	1uF		10V
C607	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C608	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C609	1-115-156-11	CERAMIC CHIP	1uF		10V
C610	1-126-916-11	ELECT	1000uF	20%	6.3V
C611	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C612	1-126-157-11	ELECT	10uF	20%	16V
C613	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C614	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C615	1-124-257-00	ELECT	2.2uF	20%	50V
C617	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C618	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C619	1-124-589-11	ELECT	47uF	20%	16V
C620	1-119-772-91	ELECT	47uF	20%	35V
C621	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C622	1-126-163-11	ELECT	4.7uF	20%	50V
C623	1-126-163-11	ELECT	4.7uF	20%	50V
C624	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C625	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C626	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C628	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C629	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C630	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C631	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C632	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C633	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C634	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C635	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C636	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C637	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C638	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C639	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C640	1-162-927-11	CERAMIC CHIP	100PF	5%	50V

# HCD-RG333/RG441

## PANEL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C641	1-164-156-11	CERAMIC CHIP	0.1uF	25V			
C642	1-164-156-11	CERAMIC CHIP	0.1uF	25V			
C643	1-164-156-11	CERAMIC CHIP	0.1uF	25V			
C644	1-126-157-11	ELECT	10uF	20%	16V		
C646	1-124-234-00	ELECT	22uF	20%	16V		
C647	1-124-589-11	ELECT	47uF	20%	16V		
C648	1-124-234-00	ELECT	22uF	20%	16V		
C649	1-164-156-11	CERAMIC CHIP	0.1uF	25V			
C653	1-162-959-11	CERAMIC CHIP	330PF	5%	50V		
C654	1-164-156-11	CERAMIC CHIP	0.1uF	25V			
C655	1-164-156-11	CERAMIC CHIP	0.1uF	25V			
C656	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		
< CONNECTOR >							
CN601	1-784-751-11	CONNECTOR, FFC 29P (RG441)					
CN601	1-784-753-11	CONNECTOR, FFC 31P (RG333)					
CN602	1-784-774-11	CONNECTOR, FFC 13P					
CN603	1-784-778-11	CONNECTOR, FFC 17P					
* CN604	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P					
CN605	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P					
CN608	1-818-282-11	PIN, CONNECTOR 3P					
< DIODE >							
D603	8-719-988-61	DIODE 1SS355TE-17					
D604	8-719-988-61	DIODE 1SS355TE-17					
D605	8-719-988-61	DIODE 1SS355TE-17					
* D606	6-500-486-01	DIODE PTZ-TE25-11B (RG441)					
D607	8-719-988-61	DIODE 1SS355TE-17					
D608	8-719-988-61	DIODE 1SS355TE-17					
D609	8-719-988-61	DIODE 1SS355TE-17					
D610	8-719-056-78	DIODE UDZ-TE-17-4.3B					
D611	8-719-988-61	DIODE 1SS355TE-17					
D613	8-719-988-61	DIODE 1SS355TE-17					
D614	8-719-988-61	DIODE 1SS355TE-17					
D615	8-719-988-61	DIODE 1SS355TE-17					
D616	8-719-988-61	DIODE 1SS355TE-17					
D620	8-719-988-61	DIODE 1SS355TE-17					
D621	8-719-988-61	DIODE 1SS355TE-17					
D622	8-719-988-61	DIODE 1SS355TE-17 (RG333)					
D623	8-719-988-61	DIODE 1SS355TE-17					
D625	8-719-988-61	DIODE 1SS355TE-17					
D626	8-719-988-61	DIODE 1SS355TE-17					
D630	8-719-988-61	DIODE 1SS355TE-17					
D631	8-719-978-33	DIODE DTZ-TT11-6.8B					
D632	8-719-083-57	DIODE UDZSTE-173.6B					
D633	8-719-988-61	DIODE 1SS355TE-17					
< FLUORESCENT INDICATOR >							
FL601	1-518-976-11	INDICATOR TUBE, FLUORESCENT					
< IC >							
IC601	6-804-440-01	IC LC876996A-53H2-E					
IC602	6-704-046-01	IC BU2099FV					
IC603	6-704-045-01	IC MM1574ANLE					
IC604	8-759-533-04	IC M62703ML-E1					
< JUMPER RESISTOR >							
JR607	1-216-864-11	SHORT CHIP	0				
JR608	1-216-864-11	SHORT CHIP	0				
JR609	1-216-864-11	SHORT CHIP	0				
JR611	1-216-864-11	SHORT CHIP	0 (RG441)				
JR612	1-216-864-11	SHORT CHIP	0 (RG441)				
JR614	1-216-864-11	SHORT CHIP	0				
JR617	1-216-864-11	SHORT CHIP	0				
JR621	1-216-864-11	SHORT CHIP	0				
JR622	1-216-864-11	SHORT CHIP	0				
JR623	1-216-864-11	SHORT CHIP	0				
< DIODE >							
LED601	6-500-809-01	LED SELU5223C-STP15 (I/⊕)					
< TRANSISTOR >							
Q601	8-729-116-57	TRANSISTOR 2SB1068-K					
Q602	8-729-140-04	TRANSISTOR 2SB1116A-L					
Q603	8-729-140-04	TRANSISTOR 2SB1116A-L					
Q604	8-729-119-76	TRANSISTOR 2SA1175-HFE					
Q605	8-729-120-28	TRANSISTOR 2SC1623-L5L6					
Q610	8-729-027-55	TRANSISTOR DTC143EKA-T146					
Q611	8-729-027-55	TRANSISTOR DTC143EKA-T146					
Q612	8-729-027-55	TRANSISTOR DTC143EKA-T146					
Q613	8-729-027-55	TRANSISTOR DTC143EKA-T146					
Q614	8-729-027-55	TRANSISTOR DTC143EKA-T146					
Q615	8-729-027-55	TRANSISTOR DTC143EKA-T146					
Q616	8-729-027-55	TRANSISTOR DTC143EKA-T146					
< RESISTOR >							
R601	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R602	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R603	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R604	1-216-841-11	METAL CHIP	47K	5%	1/10W		
R605	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R606	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R607	1-216-841-11	METAL CHIP	47K	5%	1/10W		
R608	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		
R609	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R610	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R611	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R612	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R613	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R614	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R615	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R616	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R617	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R618	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R619	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R620	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R621	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R622	1-216-049-11	RES-CHIP	1K	5%	1/10W		
R623	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R624	1-216-049-11	RES-CHIP	1K	5%	1/10W		
R625	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R626	1-216-049-11	RES-CHIP	1K	5%	1/10W		
R627	1-216-833-11	METAL CHIP	10K	5%	1/10W		

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R628	1-216-833-11	METAL CHIP	10K	5%	1/10W	R685	1-216-841-11	METAL CHIP	47K	5%	1/10W
R629	1-216-150-91	RES-CHIP	10	5%	1/8W	R686	1-216-841-11	METAL CHIP	47K	5%	1/10W
R630	1-216-809-11	METAL CHIP	100	5%	1/10W (RG333)	R687	1-216-833-11	METAL CHIP	10K	5%	1/10W
R631	1-216-809-11	METAL CHIP	100	5%	1/10W (RG333)	R688	1-216-817-11	METAL CHIP	470	5%	1/10W
R632	1-216-809-11	METAL CHIP	100	5%	1/10W	R689	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R633	1-216-809-11	METAL CHIP	100	5%	1/10W	R690	1-216-809-11	METAL CHIP	100	5%	1/10W
R634	1-216-809-11	METAL CHIP	100	5%	1/10W	R691	1-216-809-11	METAL CHIP	100	5%	1/10W
R635	1-216-809-11	METAL CHIP	100	5%	1/10W	R692	1-216-809-11	METAL CHIP	100	5%	1/10W
R636	1-216-833-11	METAL CHIP	10K	5%	1/10W	R693	1-216-809-11	METAL CHIP	100	5%	1/10W
R637	1-216-833-11	METAL CHIP	10K	5%	1/10W	R694	1-216-809-11	METAL CHIP	100	5%	1/10W
R638	1-216-809-11	METAL CHIP	100	5%	1/10W	R695	1-216-809-11	METAL CHIP	100	5%	1/10W
R639	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R696	1-216-809-11	METAL CHIP	100	5%	1/10W
R640	1-216-834-11	METAL CHIP	12K	5%	1/10W	R697	1-216-809-11	METAL CHIP	100	5%	1/10W
R641	1-216-849-11	METAL CHIP	220K	5%	1/10W	R698	1-216-182-00	RES-CHIP	220	5%	1/8W
R642	1-216-817-11	METAL CHIP	470	5%	1/10W	R700	1-216-182-00	RES-CHIP	220	5%	1/8W
R643	1-216-819-11	METAL CHIP	680	5%	1/10W	R702	1-216-182-00	RES-CHIP	220	5%	1/8W
R644	1-216-821-11	METAL CHIP	1K	5%	1/10W	R704	1-216-182-00	RES-CHIP	220	5%	1/8W
R645	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R706	1-216-182-00	RES-CHIP	220	5%	1/8W
R646	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R708	1-216-182-00	RES-CHIP	220	5%	1/8W
R647	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R710	1-216-833-11	METAL CHIP	10K	5%	1/10W
R648	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R711	1-216-833-11	METAL CHIP	10K	5%	1/10W
R649	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R712	1-216-797-11	METAL CHIP	10	5%	1/10W
R650	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R713	1-216-797-11	METAL CHIP	10	5%	1/10W
R651	1-216-833-11	METAL CHIP	10K	5%	1/10W	R714	1-216-809-11	METAL CHIP	100	5%	1/10W
R652	1-216-835-11	METAL CHIP	15K	5%	1/10W	R715	1-216-805-11	METAL CHIP	47	5%	1/10W
R653	1-216-817-11	METAL CHIP	470	5%	1/10W	R716	1-216-837-11	METAL CHIP	22K	5%	1/10W
R654	1-216-819-11	METAL CHIP	680	5%	1/10W	R717	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R655	1-216-821-11	METAL CHIP	1K	5%	1/10W	R718	1-216-837-11	METAL CHIP	22K	5%	1/10W
R656	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R719	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R657	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R720	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R658	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R721	1-216-833-11	METAL CHIP	10K	5%	1/10W
R659	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R722	1-216-835-11	METAL CHIP	15K	5%	1/10W
R660	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R723	1-216-809-11	METAL CHIP	100	5%	1/10W
R661	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R725	1-216-809-11	METAL CHIP	100	5%	1/10W
R662	1-216-833-11	METAL CHIP	10K	5%	1/10W	R727	1-220-397-11	METAL CHIP	4.7M	5%	1/10W
R663	1-216-837-11	METAL CHIP	22K	5%	1/10W	R728	1-220-397-11	METAL CHIP	4.7M	5%	1/10W
R664	1-216-817-11	METAL CHIP	470	5%	1/10W	R729	1-216-809-11	METAL CHIP	100	5%	1/10W
R665	1-216-819-11	METAL CHIP	680	5%	1/10W	R730	1-216-809-11	METAL CHIP	100	5%	1/10W
R666	1-216-821-11	METAL CHIP	1K	5%	1/10W	R731	1-216-809-11	METAL CHIP	100	5%	1/10W
R667	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R732	1-216-853-11	METAL CHIP	470K	5%	1/10W
R668	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R733	1-216-809-11	METAL CHIP	100	5%	1/10W
R669	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R734	1-216-821-11	METAL CHIP	1K	5%	1/10W
R670	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R735	1-216-821-11	METAL CHIP	1K	5%	1/10W
R671	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R736	1-216-821-11	METAL CHIP	1K	5%	1/10W
R672	1-216-833-11	METAL CHIP	10K	5%	1/10W	R737	1-216-845-11	METAL CHIP	100K	5%	1/10W
R674	1-216-835-11	METAL CHIP	15K	5%	1/10W	R738	1-216-845-11	METAL CHIP	100K	5%	1/10W
R675	1-216-835-11	METAL CHIP	15K	5%	1/10W	R739	1-216-845-11	METAL CHIP	100K	5%	1/10W
R676	1-216-835-11	METAL CHIP	15K	5%	1/10W	R740	1-216-845-11	METAL CHIP	100K	5%	1/10W
R677	1-216-864-11	SHORT CHIP	0			R741	1-216-845-11	METAL CHIP	100K	5%	1/10W
R678	1-216-845-11	METAL CHIP	100K	5%	1/10W	R742	1-216-845-11	METAL CHIP	100K	5%	1/10W
R679	1-216-172-00	RES-CHIP	82	5%	1/8W	R743	1-216-845-11	METAL CHIP	100K	5%	1/10W
R680	1-216-838-11	METAL CHIP	27K	5%	1/10W	R744	1-216-845-11	METAL CHIP	100K	5%	1/10W
R681	1-216-849-11	METAL CHIP	220K	5%	1/10W	R745	1-216-845-11	METAL CHIP	100K	5%	1/10W
R682	1-216-833-11	METAL CHIP	10K	5%	1/10W	R746	1-216-845-11	METAL CHIP	100K	5%	1/10W
R683	1-216-849-11	METAL CHIP	220K	5%	1/10W	R747	1-216-845-11	METAL CHIP	100K	5%	1/10W
R684	1-216-821-11	METAL CHIP	1K	5%	1/10W	R748	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R749	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R750	1-216-845-11	METAL CHIP	100K	5%	1/10W

# HCD-RG333/RG441

**PANEL**    **REM**    **SENSOR**

Ref. No.	Part No.	Description	Quantity	Power	Remark	Ref. No.	Part No.	Description	Quantity	Power	Remark
R751	1-216-845-11	METAL CHIP	100K	5%	1/10W	S606	1-762-875-21	SWITCH, KEYBOARD (DISC 3)			
R752	1-216-845-11	METAL CHIP	100K	5%	1/10W	S607	1-762-875-21	SWITCH, KEYBOARD (DISC SKIP/EX-CHANGE)			
R753	1-216-845-11	METAL CHIP	100K	5%	1/10W	S608	1-762-875-21	SWITCH, KEYBOARD (▲)			
R754	1-216-845-11	METAL CHIP	100K	5%	1/10W	S610	1-762-875-21	SWITCH, KEYBOARD (P FILE)			
R755	1-216-845-11	METAL CHIP	100K	5%	1/10W	S611	1-762-875-21	SWITCH, KEYBOARD (PRESET EQ)			
R756	1-216-845-11	METAL CHIP	100K	5%	1/10W	S612	1-762-875-21	SWITCH, KEYBOARD (ENTER)			
R757	1-216-845-11	METAL CHIP	100K	5%	1/10W	S621	1-762-875-21	SWITCH, KEYBOARD (CD)			
R758	1-216-845-11	METAL CHIP	100K	5%	1/10W	S622	1-762-875-21	SWITCH, KEYBOARD (TUNER/BAND)			
R759	1-216-845-11	METAL CHIP	100K	5%	1/10W	S623	1-762-875-21	SWITCH, KEYBOARD (TAPE A/B)			
R760	1-216-845-11	METAL CHIP	100K	5%	1/10W	S624	1-762-875-21	SWITCH, KEYBOARD (GAME)			
R761	1-216-845-11	METAL CHIP	100K	5%	1/10W	S626	1-762-875-21	SWITCH, KEYBOARD (ILLUMINATION)			
R762	1-216-845-11	METAL CHIP	100K	5%	1/10W	S627	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE/TUNING MODE)			
R763	1-216-845-11	METAL CHIP	100K	5%	1/10W	S628	1-762-875-21	SWITCH, KEYBOARD (GAME MIXING)			
R764	1-216-845-11	METAL CHIP	100K	5%	1/10W	S629	1-762-875-21	SWITCH, KEYBOARD (CD SYNC)			
R765	1-216-845-11	METAL CHIP	100K	5%	1/10W	S630	1-762-875-21	SWITCH, KEYBOARD (REC PAUSE/START)			
R766	1-216-845-11	METAL CHIP	100K	5%	1/10W	S641	1-762-875-21	SWITCH, KEYBOARD (GROOVE)			
R767	1-216-845-11	METAL CHIP	100K	5%	1/10W	S642	1-762-875-21	SWITCH, KEYBOARD (SURROUND)			
R768	1-216-845-11	METAL CHIP	100K	5%	1/10W	S643	1-762-875-21	SWITCH, KEYBOARD (EFFECT ON/OFF)			
R769	1-216-845-11	METAL CHIP	100K	5%	1/10W	S644	1-762-875-21	SWITCH, KEYBOARD (TUNING +)			
R770	1-216-845-11	METAL CHIP	100K	5%	1/10W	S645	1-762-875-21	SWITCH, KEYBOARD (▷)			
R771	1-216-841-11	METAL CHIP	47K	5%	1/10W	S646	1-762-875-21	SWITCH, KEYBOARD (▶▶ ALBUM +)			
R772	1-216-821-11	METAL CHIP	1K	5%	1/10W	S647	1-762-875-21	SWITCH, KEYBOARD (◀◀ ALBUM -)			
R773	1-216-809-11	METAL CHIP	100	5%	1/10W	S648	1-762-875-21	SWITCH, KEYBOARD (■)			
R774	1-216-809-11	METAL CHIP	100	5%	1/10W	S649	1-762-875-21	SWITCH, KEYBOARD (■)			
R775	1-216-809-11	METAL CHIP	100	5%	1/10W	S650	1-762-875-21	SWITCH, KEYBOARD (TUNING -)			
R776	1-216-817-11	METAL CHIP	470	5%	1/10W			< VIBRATOR >			
R777	1-216-809-11	METAL CHIP	100	5%	1/10W	X601	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)			
R778	1-216-809-11	METAL CHIP	100	5%	1/10W	X602	1-795-004-21	VIBRATOR, CERAMIC (10MHz)			
R779	1-216-809-11	METAL CHIP	100	5%	1/10W	*****					
R780	1-216-817-11	METAL CHIP	470	5%	1/10W			REM BOARD			
R781	1-216-809-11	METAL CHIP	100	5%	1/10W			*****			
R782	1-216-809-11	METAL CHIP	100	5%	1/10W			< CONNECTOR >			
R783	1-216-809-11	METAL CHIP	100	5%	1/10W	CN610	1-816-423-11	SOCKET, CONNECTOR 3P			
R784	1-216-809-11	METAL CHIP	100	5%	1/10W			< IC >			
R785	1-216-809-11	METAL CHIP	100	5%	1/10W	IC610	6-600-174-01	IC RPM7240-H4 (IR)			
R786	1-216-833-11	METAL CHIP	10K	5%	1/10W			< JUMPER RESISTOR >			
R787	1-216-809-11	METAL CHIP	100	5%	1/10W	JR624	1-216-296-11	SHORT CHIP 0			
R788	1-216-809-11	METAL CHIP	100	5%	1/10W	*****					
R789	1-216-841-11	METAL CHIP	47K	5%	1/10W			1-687-132-12	SENSOR BOARD		
R790	1-216-821-11	METAL CHIP	1K	5%	1/10W			*****			
R791	1-216-809-11	METAL CHIP	100	5%	1/10W			< CONNECTOR >			
R792	1-216-809-11	METAL CHIP	100	5%	1/10W	CN731	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE) 3P			
R793	1-216-809-11	METAL CHIP	100	5%	1/10W			< IC >			
R794	1-216-809-11	METAL CHIP	100	5%	1/10W	IC731	6-600-022-01	IC RPI-576			
R795	1-216-809-11	METAL CHIP	100	5%	1/10W	*****					
R796	1-216-809-11	METAL CHIP	100	5%	1/10W						
R797	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R798	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R799	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R854	1-216-813-11	METAL CHIP	220	5%	1/10W						
R863	1-216-170-00	RES-CHIP	68	5%	1/8W						
		< SWITCH >									
S601	1-762-875-21	SWITCH, KEYBOARD (I/⏻)									
S602	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)									
S603	1-762-875-21	SWITCH, KEYBOARD (EQ BAND)									
S604	1-762-875-21	SWITCH, KEYBOARD (DISC 1)									
S605	1-762-875-21	SWITCH, KEYBOARD (DISC 2)									

SUB TRANS

SW

TRANS

VIDEO OUT

6 STREAM LED

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	X-4956-293-1	SUB TRANS BOARD, COMPLETE (RG333)				< CONNECTOR >	
	X-4956-294-1	SUB TRANS BOARD, COMPLETE					
		(RG441:E2,E51,AR)		CN904	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	(RG333,RG441:AR,MX)
	X-4956-322-1	SUB TRANS BOARD, COMPLETE (RG441:MX)		CN904	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P	(RG441:E2,E51)
		*****		CN905	1-564-506-11	PLUG, CONNECTOR 3P (RG333)	
		< CONNECTOR >		* CN905	1-564-508-11	PLUG, CONNECTOR 5P (RG441)	
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P		* CN906	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
		< DIODE >		* CN907	1-764-333-11	PLUG, CONNECTOR 10P	
D901	8-719-991-33	DIODE 1SS133T-77				< DIODE >	
D902	6-500-522-21	DIODE 10EDB40-TB3		D906	8-719-983-79	DIODE MTZJ-T-72-27D	
D903	6-500-522-21	DIODE 10EDB40-TB3		D908	6-500-522-21	DIODE 10EDB40-TB3	
D904	6-500-522-21	DIODE 10EDB40-TB3				< TRANSISTOR >	
D905	6-500-522-21	DIODE 10EDB40-TB3		Q902	8-729-048-52	TRANSISTOR 2SA1932 (TP)	
		< TRANSFORMER >				< RESISTOR >	
△ PT902	1-439-735-11	TRANSFORMER, POWER (RG333)		R903	1-249-430-11	CARBON 12K 5% 1/4W	
△ PT902	1-443-080-11	TRANSFORMER, POWER (RG441:MX)		R904	1-247-831-91	CARBON 1K 5% 1/4W	
△ PT902	1-443-239-11	TRANSFORMER, POWER (RG441:E2,E51,AR)		△ R908	1-202-972-61	FUSIBLE 1 5% 1/4W F	
		< RELAY >				*****	
△ RY901	1-755-276-11	RELAY, POWER				VIDEO OUT BOARD	
		< VOLTAGE SELECTOR >				*****	
△ S901	1-786-055-21	SELECTOR, VOLTAGE (VOLTAGE SELECTOR)				< CONNECTOR >	
		(RG441:E2,E51)		* CN805	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P	
		*****				< JACK >	
	1-687-669-12	SW BOARD		J803	1-774-227-11	JACK, PIN 1P (VIDEO OUT)	
		*****				*****	
		< SWITCH >				6 STREAM LED BOARD	
S751	1-786-514-11	SWITCH, LEVER (SLIDE) (OPEN)				*****	
		*****				< DIODE >	
A-4750-766-A		TRANS BOARD, COMPLETE (RG333)		LED610	6-500-809-01	LED SELU5223C-STP15 (ILLUMINATION)	
A-4751-524-A		TRANS BOARD, COMPLETE (RG441:E2,E51)		LED611	6-500-809-01	LED SELU5223C-STP15 (ILLUMINATION)	
A-4752-191-A		TRANS BOARD, COMPLETE (RG441:MX)		LED612	6-500-809-01	LED SELU5223C-STP15 (ILLUMINATION)	
A-4752-196-A		TRANS BOARD, COMPLETE (RG441:AR)		LED613	6-500-809-01	LED SELU5223C-STP15 (ILLUMINATION)	
		*****		LED614	6-500-809-01	LED SELU5223C-STP15 (ILLUMINATION)	
	1-533-233-11	HOLDER, FUSE		LED615	6-500-809-01	LED SELU5223C-STP15 (ILLUMINATION)	
		< CAPACITOR >				< RESISTOR >	
C906	1-164-159-11	CERAMIC 0.1uF 50V		R673	1-216-837-11	METAL CHIP 22K 5% 1/10W	
C908	1-128-553-11	ELECT 220uF 20% 63V		R699	1-216-182-00	RES-CHIP 220 5% 1/8W	
C909	1-126-964-11	ELECT 10uF 20% 50V		R701	1-216-182-00	RES-CHIP 220 5% 1/8W	
C910	1-126-968-11	ELECT 100uF 20% 50V		R703	1-216-182-00	RES-CHIP 220 5% 1/8W	
C911	1-126-942-61	ELECT 1000uF 20% 25V		R705	1-216-182-00	RES-CHIP 220 5% 1/8W	
C920	1-131-679-31	FILM 0.01uF 5% 50V		R707	1-216-182-00	RES-CHIP 220 5% 1/8W	
C921	1-131-679-31	FILM 0.01uF 5% 50V		R709	1-216-182-00	RES-CHIP 220 5% 1/8W	
C922	1-131-679-31	FILM 0.01uF 5% 50V				< ROTARY ENCODER >	
C923	1-131-679-31	FILM 0.01uF 5% 50V		S660	1-418-632-11	ENCODER, ROTARY (MASTER VOLUME)	
C924	1-136-165-00	FILM 0.1uF 5% 50V					
C925	1-136-165-00	FILM 0.1uF 5% 50V					
C926	1-164-159-11	CERAMIC 0.1uF 50V					

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

# HCD-RG333/RG441

## 6 STREAM LED

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
SW601	1-786-289-11	SWITCH, DETECTION (I<<< - EQ + >>>I)	
*****			
		MISCELLANEOUS	
		*****	
6	1-400-285-11	F-BEAD, E2515MRT	
7	1-769-940-11	WIRE (FLAT TYPE) (11 CORE) (RG441)	
7	1-777-353-11	WIRE (FLAT TYPE) (15 CORE) (RG333)	
52	1-796-485-51	DECK, MECHANICAL	
53	1-769-975-11	WIRE (FLAT TYPE) (13 CORE)	
54	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)	
56	1-773-317-11	WIRE (FLAT TYPE) (31 CORE) (RG333)	
△ 206	1-777-071-83	CORD, POWER (RG333, RG441:E51)	
△ 206	1-783-941-22	CORD, POWER (RG441:AR)	
△ 206	1-827-226-11	CORD, POWER (RG441:E2, MX)	
252	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)	
301	1-471-035-11	MAGNET ASSY	
△ 328	8-820-244-01	OPTICAL PICK-UP (KSM-215DCP/C2RP)	
329	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
330	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)	
△ F904	1-533-473-12	FUSE, GLASS TUBE (DIA.5) (T6.3AL/250V)	(RG441)
△ F904	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	(RG333)
△ F905	1-533-473-12	FUSE, GLASS TUBE (DIA.5) (T6.3AL/250V)	(RG441)
△ F905	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	(RG333)
△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA.5) (T3.15AL/250V)	
△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA.5) (T3.15AL/250V)	
△ F908	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	(RG441)
△ F909	1-576-655-12	FUSE, GLASS TUBE (DIA.5) (T8AL/250V)	(RG441)
FAN901	1-763-117-13	FAN, DC	
FC901	1-469-854-11	CORE, FERRITE	
M741	A-4723-963-A	MOTOR ASSY, TABLE (TBL)	
M751	A-4736-655-A	MOTOR ASSY, LOADING (LOADING)	
△ PT901	1-443-234-11	TRANSFORMER, POWER (RG333)	
△ PT901	1-443-255-11	TRANSFORMER, POWER (RG441:E2, E51, AR)	
△ PT901	1-443-294-11	TRANSFORMER, POWER (RG441:MX)	
RE701	1-477-680-12	ENCODER, ROTARY	
S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
TM901	1-693-615-11	TUNER PACK (FM/AM) (ANTENNA) (RG441)	
TM901	1-693-616-11	TUNER PACK (FM/AM) (ANTENNA) (RG333)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.



**MEMO**

